

John Deere

CLICK ANYWHERE FOR MORE DETAILS

MODEL:

300 Wheel Loader

MANUAL PREVIEW

PARTS
MANUAL



JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-P-PC972

PARTS LIST

PL-T24745T

CLICK ANYWHERE FOR MORE DETAILS

JOHN DEERE

JD 300

WHEEL LOADER



CLICK ANYWHERE FOR MORE DETAILS

Section 5 - General Information	Section 56 - Selective Control
Section 10 - Engine	Section 60 - 3-Point Hitch and Drawbar
Section 15 - Engine Accessories	Section 65 - Front Wheels and Axle
Section 20 - Cooling System	Section 70 - Rear Wheels and Wheel Weights
Section 25 - Fuel System	Section 75 - Brakes
Section 26 - Fuel Injection Pump	Section 80 - Sheet Metal
Section 27 - Carburetor	Section 85 - Electrical System
Section 30 - Center Frame	Section 86 - Starting Motor
Section 35 - Transmission	Section 87 - Alternator and Voltage Regulator
Section 36 - Belt Pulley	Section 88 - Distributor
Section 40 - Planetary and Rear Axle	Section 90 - Decalcomanias and Gasket Sets
Section 45 - Front Support and Side Frames	Section 95 - Operator's Manual
Section 50 - Steering	Section 100 - Numerical Index
Section 55 - Hydraulic System	

A		Page				Page	
Accumulator, hydraulic oil.....		55-16		Cooler, oil.....		20-1	
Aid, cold weather starting - diesel.....		25-6		Countershaft, transmission.....		35-6	
Air cleaner.....	15-2, 3, 4			Counterweight.....		45-2	
Air intake - diesel.....		15-4		Coupler, implement quik.....		60-7	
Alternator.....		87-2, 3		Coupler oil lines.....		56-1	
Alternator and regulator attaching parts.....		87-2		Couplers, single and dual control valve.....		56-8	
Arm, rocker.....		10-5		Cover, powershaft.....		35-15	
Axle, front, straight.....		65-3		Cover, rocker arm.....		10-4	
Axle, front, sweptback adjustable.....		65-4		Cover, timing gear.....	10-10, 11		
Axle knee, spindle and knuckle.....	65-3, 5			Cowl.....		80-	
Axle, rear.....		40-2		Crankshaft.....		10-6	
Axle tie rod assembly.....		65-6		Cylinder block.....		10-2	
B				Cylinder head.....		10-4	
Battery cables.....		85-2		Cylinder head gasket.....		10-4	
Battery clamp.....		80-4		Cylinder liner.....		10-2	
Bearing cap, main.....		10-2		Cylinder, remote.....	56-9, 10		
Bearing, clutch pilot.....	30-5, 7			Cylinder and valve, brake.....		75-1	
Bearing, connecting rod.....		10-8		D			
Bearing, main.....		10-6		Dash.....		80-3	
Belt, fan.....		20-2		Decalcomania.....		90-1	
Belt pulley.....		36-2		Deluxe seat.....		80-10	
Block, cylinder.....		10-2		Differential.....	35-2, 7		
Block, sway.....		60-10		Differential drive shaft.....		35-7	
Brake disk.....		75-2		Differential lock mechanism.....		35-10	
Brake valve and cylinder.....		75-1		Disk, brake.....		75-2	
Brake valve and cylinder oil lines.....		75-1		Disk, clutch.....	30-4, 5, 6, 9		
Breakaway couplers, single and dual.....		56-6		Distributor.....		88-2, 3	
C				Drag link, steering.....		50-3, 4	
Cable, choke.....		25-2		Drawbar, fixed.....		60-9	
Cable, ignition.....		88-2		Drawbar, swinging.....		60-8	
Cable, spark plug.....		88-2		Drawbar, 3-point hitch.....		60-9	
Cable, tachometer.....		15-9		Drive, hydraulic pump.....	55-3, 5		
Cables, battery.....		85-2		Drive shaft, differential.....		35-7	
Camshaft.....		10-5		Drive shaft, transmission.....		35-5	
Cap, fuel.....		25-3		Drum, clutch.....		30-9	
Cap, main bearing.....		10-2		Dry-type air cleaner.....		15-4	
Cap, radiator.....		20-1		Dual selective control valve breakaway couplers.....		56-6	
Cap, weather.....	15-5, 6			Dual selective control valve couplers.....		56-8	
Carburetor - gasoline.....		27-2		E			
Case, transmission.....		35-2		Electric horn.....		85-8	
Chain, sway.....		60-4		Electrical outlet socket.....		85-4	
Choke cable.....		25-2		Electrical wiring system.....		85-2	
Cigar lighter.....		85-6		Element, air cleaner.....		15-4	
Circuit breaker.....	85-2, 4			Element, fuel filter.....	25-4, 5		
Clutch control valve.....		30-12		Element, hydraulic oil filter.....		55-7	
Clutch disconnect.....		30-4		Element, transmission oil filter.....		35-8	
Clutch disks.....	30-4, 6, 9			Engine, clutch.....	30-4, 5, 6		
Clutch drum.....		30-9		Engine, dipstick.....		10-2	
Clutch, engine.....	30-4, 5, 6			Engine oil filter.....		10-2	
Clutch housing.....		30-2, 3		Engine oil heater.....		85-8	
Clutch linkage.....		30-8		Engine oil pump.....		10-9	
Clutch pedal.....		30-4, 8		Exhaust valve.....		10-5	
Clutch pilot bearing.....		30-5, 7		Extension, fender.....		80-5	
Clutch, PTO.....	30-5, 6, 7			Extension, rear flanged axle.....		70-1	
Clutch shaft.....		30-5, 7		F			
Coil, ignition.....		88-2		Fan.....		20-2	
Cold weather starting aid - diesel.....		25-6		Fan belt.....		20-2	
Connecting rods.....		10-8					

 
ALPHABETICAL INDEX - Continued

	Page		Page
Fan pulley.....	20- 2	Ignition switch.....	85- 6
Fan shroud.....	20- 1	Implement, quick coupler.....	60- 7
Fender extensions.....	80- 5	Indicator light.....	85- 7
Fenders.....	80- 6	Injection nozzle.....	25- 7
Filler, inlet oil, engine.....	10- 3	Injection system, fuel.....	25- 8
Filter, engine oil.....	10- 2	Inlet, oil filler, engine.....	10- 3
Filter, fuel, dual.....	25- 5	Intake, air - diesel.....	15- 4
Filter, fuel, single.....	25- 4	Intake valve.....	10- 5
Filter, hydraulic oil.....	55- 7		
Filter, transmission oil.....	35- 8	K	
Final drive.....	40- 2	Kit, carburetor repair.....	27- 2
Fixed drawbar.....	60- 9	Kit, fuel injection pump gasket.....	26- 5
Flanged axle extension.....	70- 1	Kit, gasket.....	90- 2, 3, 4, 5
Flasher, warning light.....	85- 4	Kit, wire lead.....	88- 4
Flow control valve.....	55-18	L	
Fluid, diesel starting.....	25- 6	Lever, transmission control.....	30-11
Flywheel.....	30- 4, 5, 6	Lift links, 3-point hitch.....	60- 2, 4, 6
Flywheel housing.....	10- 6	Light, front.....	85- 4
Footrests.....	80- 5	Light, indicator.....	85- 7
Foot throttle.....	15- 9	Light, rear.....	85- 5
Frame, side.....	45- 2	Light, switch.....	85- 6
Frame weight.....	45- 3	Light, warning.....	85- 5
Front axle assembly.....	65- 3, 4	Lighter, cigar.....	85- 6
Front axle tie rod assembly.....	65- 6	Liner, cylinder.....	10- 2
Front grille plate.....	80- 2	Linkage, transmission.....	30-11
Front light.....	85- 4	Load control.....	60- 1
Front and rear light wiring system.....	85- 4	Loctite sealant.....	95- 2
Front support.....	45- 1	M	
Front wheel.....	65- 1, 2	Main bearing.....	10- 6
Fuel cap.....	25- 3	Main bearing cap.....	10- 2
Fuel filter, dual.....	25- 5	Manifold, rear exhaust.....	15- 7, 8
Fuel filter, single.....	25- 4	Manifold, vertical muffler.....	15- 5, 6
Fuel gauge.....	85- 7	Manual, operator's.....	95- 2
Fuel gauge sender.....	25- 3	Manual steering gear.....	50- 4
Fuel injection nozzle.....	25- 7	Motor, starting.....	86- 1, 2, 4
Fuel injection pump.....	26- 2, 3, 4, 5	Muffler, rear exhaust.....	15- 7, 8
Fuel lines - diesel.....	25- 4, 5, 8	Muffler, vertical.....	15- 5, 6
Fuel lines - gasoline.....	25- 2	N	
Fuel pump.....	25- 9	Nozzle, fuel injection.....	25- 7
Fuel tank.....	25- 3	O	
G		Oil bath air cleaner.....	15- 2, 3
Gasket, cylinder head.....	10- 4	Oil cooler.....	20- 1
Gasket set.....	90- 2, 3, 4, 5	Oil filler inlet, engine.....	10- 3
Gasoline fuel system.....	25- 2	Oil filter, engine.....	10- 2
Gauge, fuel.....	85- 7	Oil filter, hydraulic.....	55- 7
Gauge, temperature.....	85- 7	Oil filter, transmission.....	35- 8
Gear shifters, transmission.....	35- 4	Oil heater, engine.....	85- 8
Gears, crankshaft.....	10- 6	Oil lines, brake valve and cylinder.....	75- 1
Gears and shafts, PTO.....	35-11, 12, 13, 14	Oil lines, coupler.....	56- 1
Governor - gasoline.....	15-12	 55- 7, 10, 11, 12, 14, 21, 22, 23, 24	
Grille.....	80- 2	Oil lines, power steering.....	50- 7
Guard, powershaft.....	35-15	Oil lines, selective control valve.....	56- 1
H		Oil lines, transmission.....	30-13, 35- 8, 9
Harness, electrical wiring.....	85- 2	Oil pressure relief valve.....	10- 9, 10, 11
Head, cylinder.....	10- 4	Oil pump, engine.....	10- 9
Heater, engine oil.....	85- 8	Oil pump, transmission.....	35- 8
Hitch, 3-point.....	60- 2, 4, 6	Operator's manual.....	95- 2
Hood.....	80- 2	P	
Horn, electric.....	85- 8	Pan, engine oil.....	10- 2
Hoses, remote cylinder.....	56- 9	Pedal, accelerator.....	15- 9
Hour meter.....	85- 8	Pedal, brake.....	75- 1
Hub, front wheel.....	65- 1, 2	Pedal, clutch.....	30- 4, 8
Hydraulic oil accumulator.....	55-16	Pilot bearing, clutch.....	30- 5, 7
Hydraulic oil filter and relief valve.....	55- 7	Pipe, rear exhaust.....	15- 7
Hydraulic oil lines.....	55- 7, 10, 11, 12, 14, 21, 22, 23, 24	Piston, clutch.....	30- 9
Hydraulic oil reservoir.....	55-21, 22, 23, 24	Piston rings.....	10- 8
Hydraulic pump (.69 cu. in.).....	55- 2	Pistons.....	10- 8
Hydraulic pump (1.38 cu. in.).....	55- 4	Planetary and rear axle.....	40- 2
Hydraulic pump (2.41 cu. in.).....	55- 6	Plate, clutch pressure.....	30- 4, 5, 6
Hydraulic pump drive.....	55- 3, 5	Plate, engine front.....	10- 2
Hydraulic pump stroke control valve.....	55- 8	Plug, spark.....	88- 2
I		Power steering arm.....	50- 3
Ignition coil.....	88- 2	Power steering gear.....	50- 2
		Power steering oil lines.....	50- 7

ALPHABETICAL INDEX - Continued

	Page		Page
Power steering pump	50- 6	Socket, electrical outlet	85- 4
Power steering valve housing	50- 5	Solenoid switch	86- 1
Powershaft cover	35-15	Single selective control valve coupler	56- 8
Powershaft shield and guard	35-15	Spark plug	88- 2
Powershaft shifter	36- 3	Speed control linkage	15-10
Pre-cleaner	15- 2, 3	Spindle and knuckle assembly, front axle	65- 3, 5
Pressure plate, clutch	30- 4, 5, 6	Starting aid, cold weather - diesel	25- 6
PTO clutch	30- 5, 6, 7	Starting fluid - diesel	25- 6
Pulley, belt	36- 2	Starting motor	86- 1, 2, 4
Pulley, crankshaft	10- 6	Starting motor attaching parts	86- 1
Pulley, fan	20- 2	Starting motor solenoid switch	86- 1
Pump drive, hydraulic	55- 3, 5	Steel disk rear wheel	70- 1
Pump, engine oil	10- 9	Steering gear	50- 2, 4
Pump, fuel	25- 9	Straight front axle	65- 3
Pump, fuel injection	26- 2, 3, 4, 5	Support, countershaft bearing	35- 6
Pump, hydraulic (.69 cu. in.)	55- 2	Support, front	45- 1
Pump, hydraulic (1.38 cu. in.)	55- 4	Sway blocks	60-10
Pump, hydraulic (2.41 cu. in.)	55- 6	Sway chain	60- 4
Pump, power steering	50- 6	Swept back adjustable front axle	65- 4
Pump, transmission oil	35- 8	Swinging drawbar	60- 8
Pump, water	20- 2	Switch, ignition	85- 6
Push rod	10- 5	Switch, light	85- 6
R		Switch, solenoid	86- 1
Radiator	20- 1	T	
Radiator cap	20- 1	Tachometer	15- 9
Rear axle	40- 2	Tank, fuel	25- 3
Rear light	85- 5	Tappet	10- 5
Rear wheel	70- 1	Temperature gauge	85- 7
Rear wheel weights	70- 2	Thermostat	20- 3
Regular seat	80- 8	3-point hitch	60- 2, 4, 6
Regulator	87- 2	3-point hitch drawbar	60- 9
Relief valve, hydraulic	55- 7	Throttle, foot	15- 9
Relief valve, transmission	35- 2	Throttle linkage	15- 9
Remote cylinder	56- 9, 10	Tie rod assembly	65- 6
Remote cylinder hoses	56- 9	Timing gear cover	10-10, 11
Reservoir, hydraulic oil	55-21, 22, 23, 24	Toolbox	80- 7
Reverse brake	30-14	Transmission case	35- 2
Ring gear	30- 4, 5, 6	Transmission control lever	30-11
Rings, piston	10- 8	Transmission gear shifters	35- 4
Rocker arm	10- 5	Transmission linkage	30-11
Rocker arm cover	10- 4	Transmission oil filter	35- 8
Rocker arm shaft	10- 5	Transmission oil lines	30-13, 35- 8, 9
Rockshaft control lever	55-17	Transmission oil pump	35- 8
Rockshaft cylinder and valve housing	55-19	Transmission relief valve	35- 2
Rockshaft cylinder and valve housing linkage	55-20	Transmission shafts	35- 4
Rockshaft housing	55-18	Transmission shield	80- 4
Rockshaft, piston and lift arms	55-20	Tube, ventilator outlet	10- 4
Rockshaft quadrant	55-17	V	
Rod, connecting	10- 8	Valve, brake	75- 1
Rod, push	10- 5	Valve, clutch control	30-12
Rosa-Master fuel injection system	25- 8	Valve, exhaust	10- 5
Rotator, exhaust valve	10- 5	Valve, flow control	55-18
S		Valve housing, power steering	50-15
Seat, deluxe	80-10	Valve housing, rockshaft	55-19
Seat, regular	80- 8	Valve, hydraulic relief	55- 7
Seat, support base	80- 9	Valve, intake	10- 5
Selective control valve	56- 2, 4	Valve, oil pressure relief	10- 9, 10, 11
Selective control valve lever	56- 2, 4	Valve, selective control	56- 2, 4
Selective control valve oil lines	56- 1	Valve, transmission relief	35- 2
Shaft, clutch	30- 5, 7	Ventilator outlet tube	10- 4
Shaft, final drive	40- 2	Vertical muffler	15- 5, 6
Shaft, hydraulic pump drive	55- 3	W	
Shaft, rear axle	40- 2	Warning light	85- 5
Shaft, rocker arm	10- 5	Warning light flasher	85- 4
Shaft, steering	50- 2, 4	Water pump	20- 2
Shaft, tachometer drive	10- 5	Weather cap	15- 5, 6
Shafts, transmission	35- 4	Weight, frame	45- 3
Shield, powershaft	35-15	Weights, rear wheel	70- 2
Shield, transmission	80- 4	Wheel, front	65- 1, 2
Shroud, fan	20- 1	Wheel, rear	70- 1
Side frames	45- 2	Wheel, steering	50- 2
Single selective control valve breakaway coupler	56- 6	Wheel weights, rear	70- 2
		Wire kit, lead	88- 4

CYLINDER BLOCK ASSEMBLY

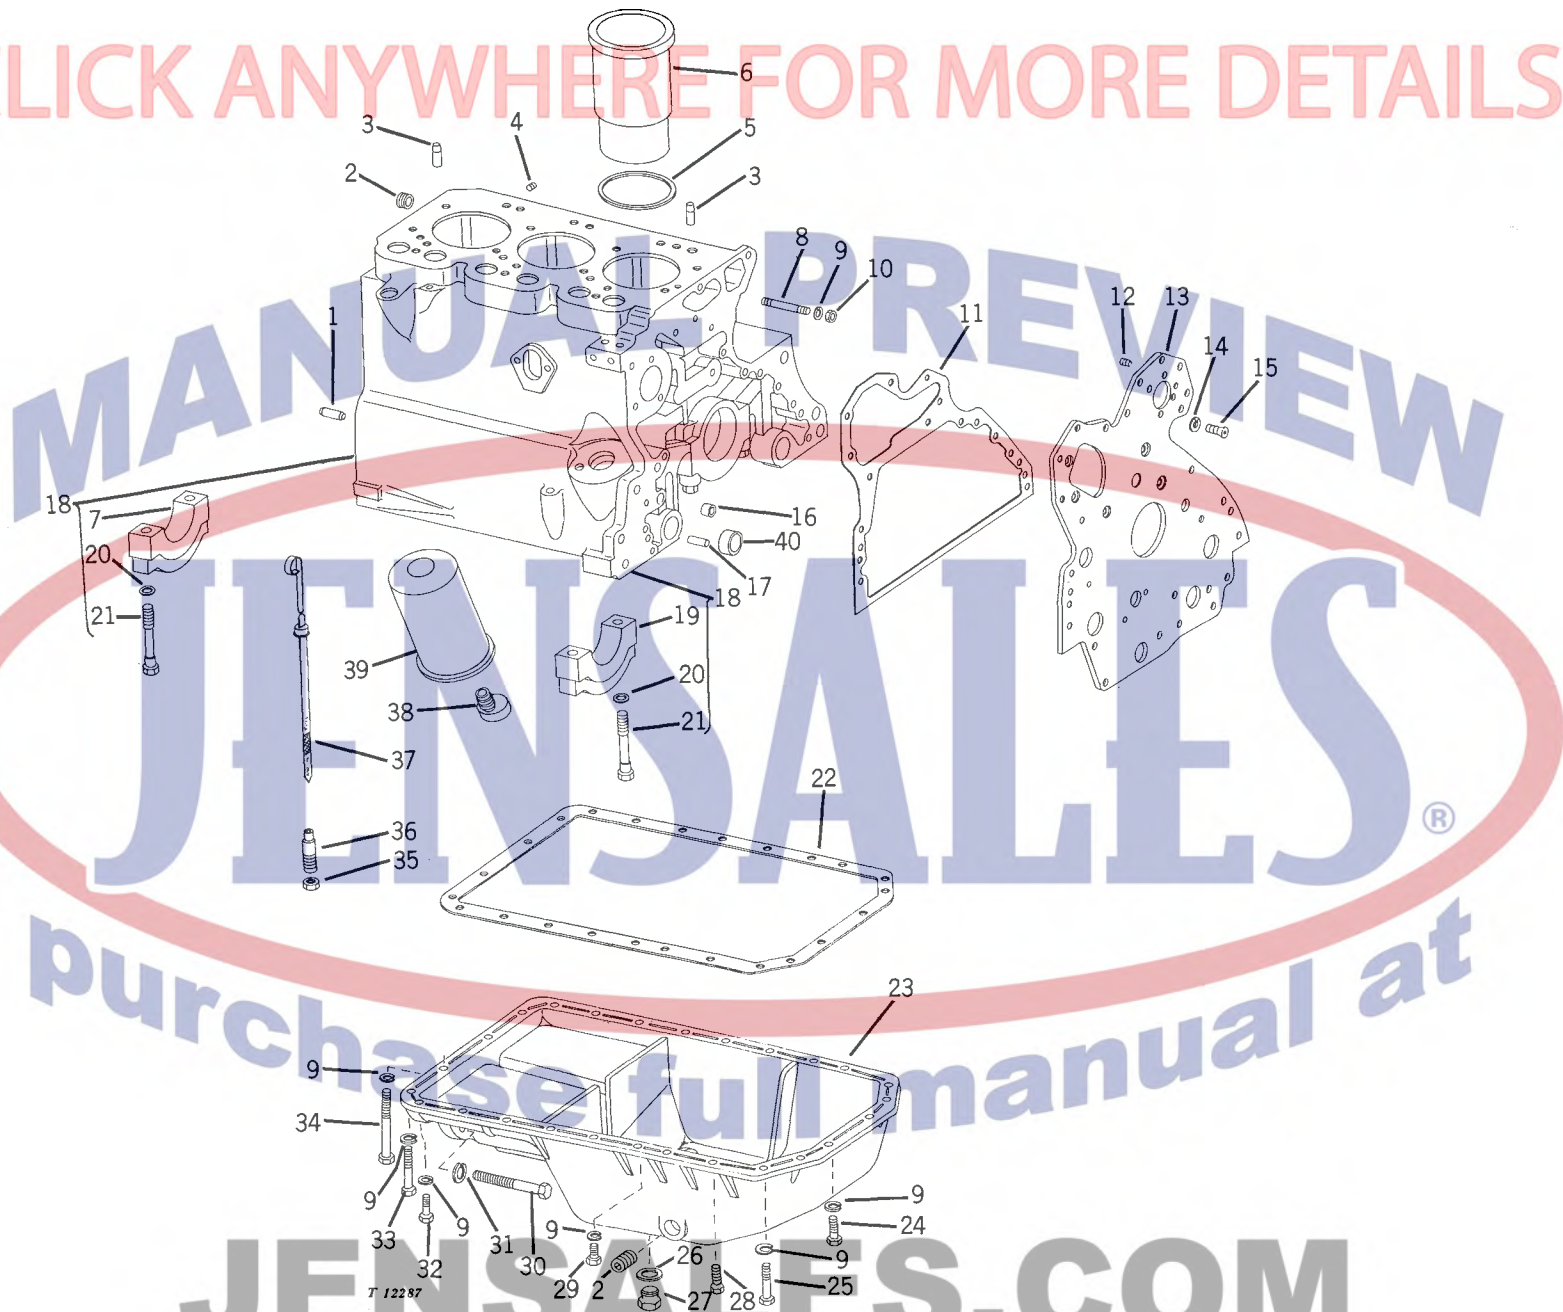


Key	Part No.	Serial No.	Description
1	A 120 R	(-)	Pin, dowel (2 used)
2	15H 649	(-)	Plug, pipe, 3/4" hex. ctsk. (2 used)
3	R 26241 R	(-)	Pin, dowel (2 used)
4	AT 13740 T	(-)	Cock, drain
5	T 23539 T	(-)	Packing (3 used)
6	T 20080 T	(-)	Liner, cylinder (3 used) (gasoline)
	T 20085 T	(-)	Liner, cylinder (3 used) (diesel)
7	AT 21227	(-)	Cap, main bearing, rear, with shims and set gauge
8	T 20173 T	(-)	Stud (2 used)
	R 27612 R	(-)	Stud (1 used)
9	12H 304	(-)	Washer, lock, 3/8" (25 used)
10	14H 812	(-)	Nut, hex., 3/8" (3 used)
11	T 20292 T	(-)	Gasket
12	AT 21191	(-)	Screw, special set (5 used) (diesel)
13	T 20024 T	(-)	Plate, front (gasoline)
	T 20295 T	(-)	Plate, front (diesel)
14	12H 324	(-)	Washer, lock, 3/8" external tooth (5 used)
15	T 20166 T	(-)	Screw, cap, special, 3/8" x 7/8" (5 used)

CYLINDER BLOCK ASSEMBLY - Continued


Key	Part No.	Serial No.	Description
16	R 26493 R	(-)	Bushing, oil pressure relief valve
17	R 26650 R	(-)	Pin, dowel (2 used)
18	AT 18101 T	(-)	Block, cylinder (T23401T) (contains key nos. 1, 3, 4, 7, 8, 16, 17, 19, 20, 21, 38) (gasoline)
	AT 18105 T	(-)	Block, cylinder (T23404T) (contains key nos. 1, 3, 7, 8, 16, 17, 19, 20, 21, 38) (diesel)
19	AT 21226	(-)	Cap, main bearing, front and center with shims and set gauge (2 used) (gasoline)
	AT 21226	(-)	Cap, main bearing, front and center with shims and set gauge (3 used) (diesel)
20	T 20168 T	(-)	Washer, plain, special (6 used) (gasoline)
	T 20168 T	(-)	Washer, plain, special (8 used) (diesel)
21	T 23474 T	(-)	Screw, cap, special (6 used) (gasoline)
	T 23474 T	(-)	Screw, cap, special (8 used) (diesel)
22	T 22769 T	(-)	Gasket
23	T 22908 T	(-)	Pan, oil
24	19H 1765	(-)	Screw, cap, 3/8" x 1-3/4" (5 used)
25	19H 1801	(-)	Screw, cap, 3/8" x 2", front right side hole
26	T 13213 T	(-)	Washer, special, aluminum
27	M 1746 T	(-)	Plug, drain
28	T 20309 T	(-)	Screw, cap, special taper (2 used)
29	19H 1139	(-)	Screw, cap, 3/8" x 1-1/8" (11 used)
30	19H 1752	(-)	Screw, cap, 5/8" x 4" (2 used)
31	12H 294	(-)	Washer, lock, 5/8" (2 used)
32	19H 1732	(-)	Screw, cap, 3/8" x 1-1/4", rear right side hole
33	19H 1733	(-)	Screw, cap, 3/8" x 2-1/2" (2 used)
34	19H 2228	(-)	Screw, cap, 3/8" x 4" (2 used)
35	14H 826	(-)	Nut, hex. jam, 1/2"
36	T 24409	(-)	Nipple, dipstick
37	AT 21534	(-)	Dipstick
38	T 23435 T	(-)	Nipple, oil filter
39	T 19044 T	(-)	Filter, oil
40	T 20330 T	(-)	Sleeve
..	AT 21933	(-)	Short block assembly, complete with cylinder block assembly, crankshaft, camshaft, pistons, connecting rods, cylinder liners, and front plate (diesel)
..	AT 21934	(-)	Short block assembly, complete with cylinder block assembly, crankshaft, camshaft, pistons, connecting rods, cylinder liners, and front plate (gasoline)

 OIL FILLER INLET

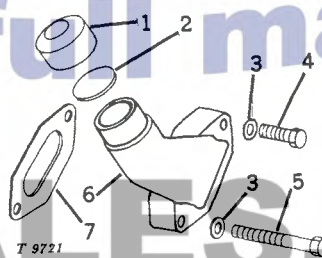


Key	Part No.	Serial No.	Description
1	T 20294 T	(-)	Cap
2	T 20328 T	(-)	Gasket
3	24H 1304	(-)	Washer, plain, 13/32" x 23/32" x .120" (2 used)
4	19H 1807	(-)	Screw, cap, 3/8" x 1-5/8"
5	19H 2128	(-)	Screw, cap, 3/8" x 3"
6	T 23614 T	(-)	Inlet, oil filler
7	T 20336 T	(-)	Gasket

 CAMSHAFT, ROCKER ARMS, AND VALVES

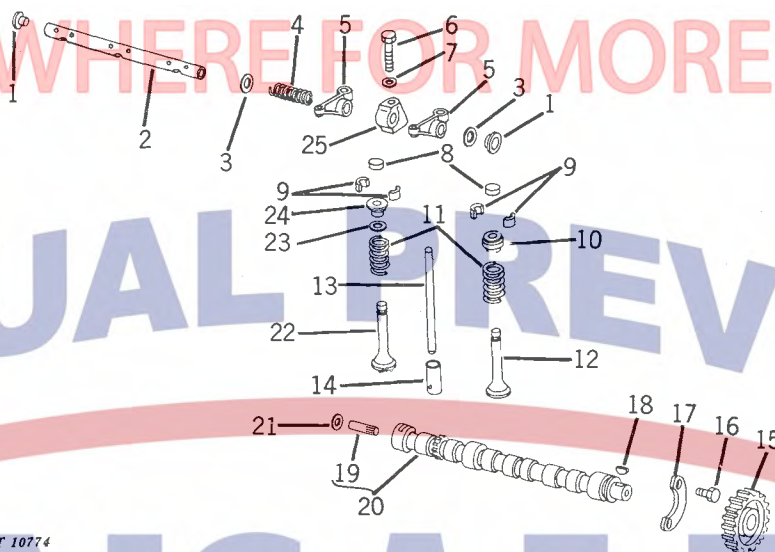


Key	Part No.	Serial No.	Description
1	T 23469 T	()	Plug (2 used)
2	T 23468 T	()	Shaft, rocker arm
3	T 20316 T	()	Washer, special bowed (2 used)
4	T 20314 T	()	Spring (2 used)
5	AT 18129 T	()	Arm, rocker, with adjusting screw (6 used)
	T 23521 T	()	Screw, special adjusting (6 used)
6	19H 1733	()	Screw, cap, 3/8" x 2-1/2" (3 used)
7	T 23594 T	()	Washer, plain, special (3 used)
8	T 20129 T	()	Cap, valve stem (6 used) (diesel)
9	T 20077 T	()	Lock, retainer (12 used)
10	T 20287 T	()	Rotator, exhaust valve (3 used) (gasoline)
	T 20176 T	()	Cap, exhaust valve (3 used) (diesel)
11	R 26125 R	()	Spring, valve (6 used)
12	T 20286 T	()	Valve, exhaust, standard stem (3 used) (gasoline)
	T 23543 T	()	Valve, exhaust, .003" oversize stem (3 used) (gasoline)
	T 23544 T	()	Valve, exhaust, .015" oversize stem (3 used) (gasoline)
	T 23545 T	()	Valve, exhaust, .030" oversize stem (3 used) (gasoline)
	T 20175 T	()	Valve, exhaust, standard stem (3 used) (diesel)
	T 23549 T	()	Valve, exhaust, .003" oversize stem (3 used) (diesel)
	T 23550 T	()	Valve, exhaust, .015" oversize stem (3 used) (diesel)
	T 23551 T	()	Valve, exhaust, .030" oversize stem (3 used) (diesel)
13	T 20297 T	()	Rod, push (6 used) (gasoline)
	T 20310 T	()	Rod, push (6 used) (diesel)
14	T 20073 T	()	Tappet (6 used)
15	T 20070 T	()	Gear, camshaft (48 teeth)
16	19H 1731	()	Screw, cap, 3/8" x 1" (2 used)
17	T 20072 T	()	Plate, thrust
18	26H 72	()	Key, Woodruff, 1/8" x 5/8"
19	T 20071 T	()	Shaft, tachometer drive
20	AT 18053 T	()	Camshaft (T20015T), with tachometer drive shaft
21	T 20304 T	()	Packing, tachometer shaft
22	T 23477 T	()	Valve, intake, standard stem (3 used) (gasoline)
	T 23540 T	()	Valve, intake, .003" oversize stem (3 used) (gasoline)
	T 23541 T	()	Valve, intake, .015" oversize stem (3 used) (gasoline)
	T 23542 T	()	Valve, intake, .030" oversize stem (3 used) (gasoline)
	T 20174 T	()	Valve, intake, standard stem (3 used) (diesel)
	T 23546 T	()	Valve, intake, .003" oversize stem (3 used) (diesel)
	T 23547 T	()	Valve, intake, .015" oversize stem (3 used) (diesel)
	T 23548 T	()	Valve, intake, .030" oversize stem (3 used) (diesel)
23	R 27976 R	()	Packing, "O" ring, intake valve (3 used) (gasoline)
24	T 20169 T	()	Cap, intake valve (3 used) (gasoline)
	T 20176 T	()	Cap, intake valve (3 used) (diesel)
25	T 20315 T	()	Support (3 used)

 CRANKSHAFT AND FLYWHEEL HOUSING

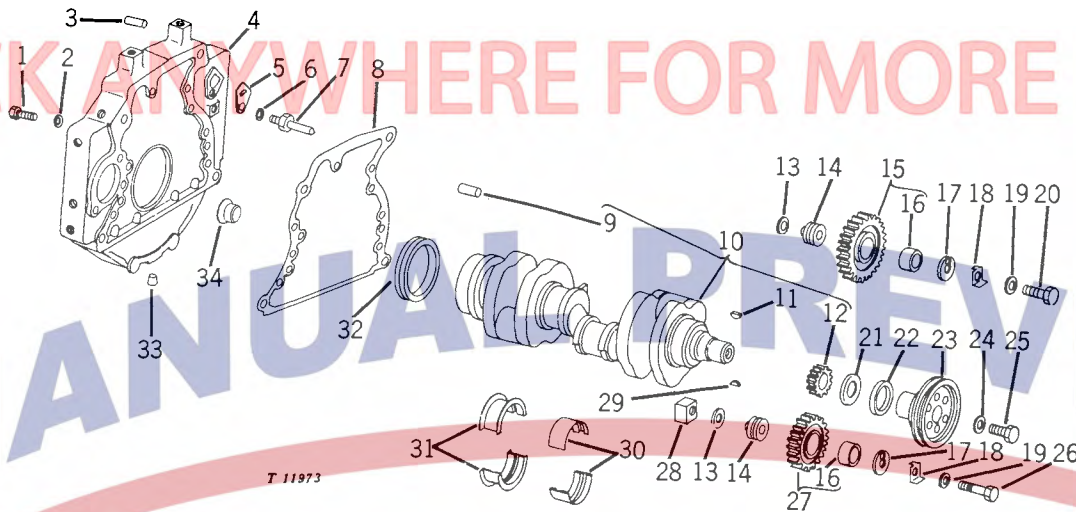

Key	Part No.	Serial No.	Description
1	19H 1800	(-)	Screw, cap, 3/8" x 1-1/2" (8 used)
2	12H 304	(-)	Washer, lock, 3/8" (8 used)
3	C 1220 R	(-)	Pin, dowel (2 used)
4	T 22991 T	(-)	Housing, flywheel
5	T 20089 T	(-)	Cover, timing hole
6	12H 301	(-)	Washer, lock, 1/2"
7	T 20090 T	(-)	Screw, special
8	T 23596 T	(-)	Gasket
9	C 1220 R	(-)	Pin, dowel
10	AT 21072	(-)	Crankshaft (T23484T), with gear, key, and dowel pin (gasoline)
	AT 18031 T	(-)	Crankshaft (T23479T), with gear, key, and dowel pin (diesel)
11	26H 72	(-)	Key, Woodruff, 1/8" x 5/8"
12	T 20094 T	(-)	Gear (24 teeth)
13	T 20037 T	(-)	Washer, special inner thrust (2 used)
14	T 20036 T	(-)	Shaft, idler gear (2 used)
15	AT 18009 T	(-)	Gear (T20029T), crankshaft upper idler, with bushing (55 teeth)
16	T 20034 T	(-)	Bushing (2 used)
17	T 20038 T	(-)	Washer, special outer thrust (2 used)
18	T 20291 T	(-)	Plate, lock (2 used)
19	T 20290 T	(-)	Washer, plain, special (2 used)
20	19H 1805	(-)	Screw, cap, 1/2" x 2-1/4"
21	T 20046 T	(-)	Slinger
22	AT 21608	(-)	Seal, oil, front
23	T 24441	(-)	Pulley
24	T 20217 T	(-)	Washer, plain, special
25	19H 1721	(-)	Screw, cap, 1/2" x 1-1/2"
26	19H 1930	(-)	Screw, cap, 1/2" x 2-1/2"
27	AT 18039 T	(-)	Gear (T20135T), crankshaft, lower idler, with bushing (45 teeth)
28	T 20136 T	(-)	Adapter, lower idler gear oil tube
29	T 23604 T	(-)	Key, special
30	AT 21140	(-)	Bearing, main, standard, plain (2 halves) (2 used) (gasoline)
	AT 21140	(-)	Bearing, main, standard, plain (2 halves) (3 used) (diesel)
	AT 21108	(-)	Bearing, main, .002" undersize, plain (2 halves) (2 used) (gasoline)
	AT 21108	(-)	Bearing, main, .002" undersize, plain (2 halves) (3 used) (diesel)
	AT 21109	(-)	Bearing, main, .003" undersize, plain (2 halves) (2 used) (gasoline)
	AT 21109	(-)	Bearing, main, .003" undersize, plain (2 halves) (3 used) (diesel)
	AT 21110	(-)	Bearing, main, .010" undersize, plain (2 halves) (2 used) (gasoline)
	AT 21110	(-)	Bearing, main, .010" undersize, plain (2 halves) (3 used) (diesel)
	AT 21111	(-)	Bearing, main, .012" undersize, plain (2 halves) (2 used) (gasoline)
	AT 21111	(-)	Bearing, main, .012" undersize, plain (2 halves) (3 used) (diesel)
	AT 21112	(-)	Bearing, main, .020" undersize, plain (2 halves) (2 used) (gasoline)
	AT 21112	(-)	Bearing, main, .020" undersize, plain (2 halves) (3 used) (diesel)
	AT 21113	(-)	Bearing, main, .022" undersize, plain (2 halves) (2 used) (gasoline)
	AT 21113	(-)	Bearing, main, .022" undersize, plain (2 halves) (3 used) (diesel)
	AT 21114	(-)	Bearing, main, .030" undersize, plain (2 halves) (2 used) (gasoline)
	AT 21114	(-)	Bearing, main, .030" undersize, plain (2 halves) (3 used) (diesel)
	AT 21115	(-)	Bearing, main, .032" undersize, plain (2 halves) (2 used) (gasoline)
	AT 21115	(-)	Bearing, main, .032" undersize, plain (2 halves) (3 used) (diesel)

 PISTONS AND CONNECTING RODS

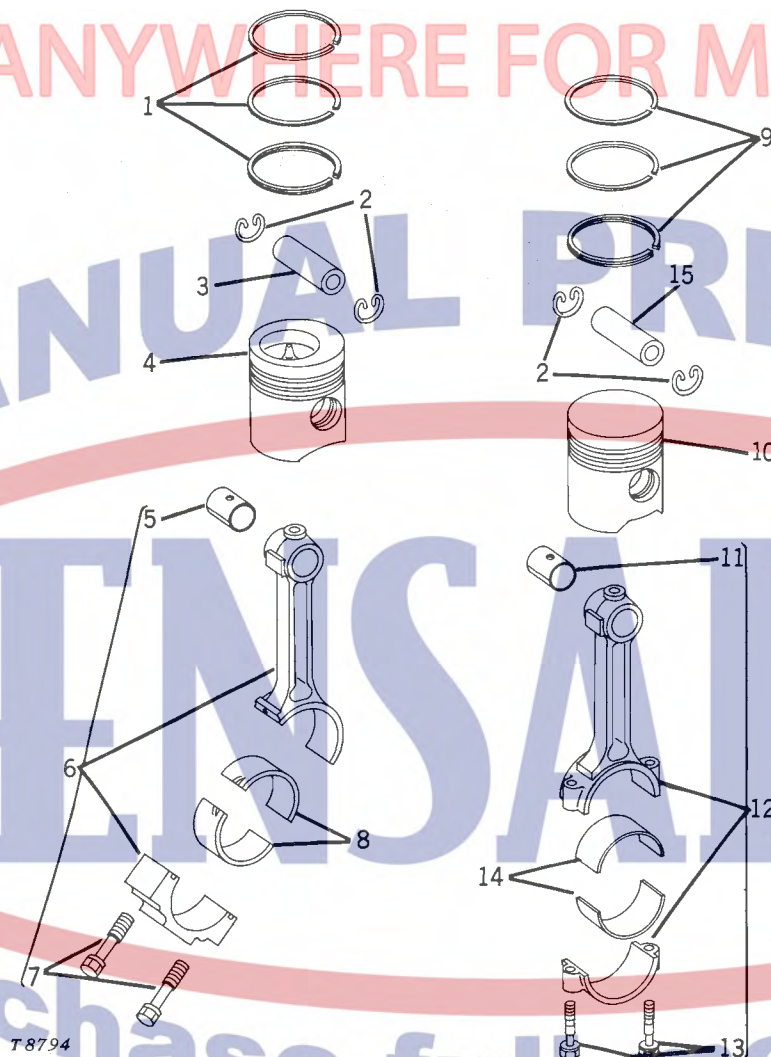

Key	Part No.	Serial No.	Description
1	AT 18012 T	(-)	Rings, piston, standard (set of 3 rings) (3 sets used) (diesel)
2	M 67 T	(-)	Ring, snap (6 used) (packed 2 in a pkg.)
3	T 23482 T	(-)	Pin, piston (3 used) (diesel) (packed 2 in a pkg.)
4	T 23481 T	(-)	Piston, standard (3 used) (diesel)
5	T 23471 T	(-)	Bushing, connecting rod (3 used) (diesel)
6	AT 18005 T	(-)	Rod, connecting, with screws and bushing (3 used) (diesel)
7	T 19812 T	(-)	Screw, connecting rod (6 used) (diesel)
8	AT 21138	(-)	Bearing, connecting rod, standard (2 halves) (3 used) (diesel)
	AT 21122	(-)	Bearing, connecting rod, .002" undersize (2 halves) (3 used) (diesel)
	AT 21123	(-)	Bearing, connecting rod, .003" undersize (2 halves) (3 used) (diesel)
	AT 21124	(-)	Bearing, connecting rod, .010" undersize (2 halves) (3 used) (diesel)
	AT 21125	(-)	Bearing, connecting rod, .012" undersize (2 halves) (3 used) (diesel)
	AT 21126	(-)	Bearing, connecting rod, .020" undersize (2 halves) (3 used) (diesel)
	AT 21127	(-)	Bearing, connecting rod, .022" undersize (2 halves) (3 used) (diesel)
	AT 21128	(-)	Bearing, connecting rod, .030" undersize (2 halves) (3 used) (diesel)
	AT 21129	(-)	Bearing, connecting rod, .032" undersize (2 halves) (3 used) (diesel)
9	AT 18006 T	(-)	Rings, piston, standard (set of 3 rings) (3 sets used) (gasoline)
10	T 23504 T	(-)	Piston, standard (3 used) (gasoline)
11	T 526 T	(-)	Bushing, connecting rod (3 used) (gasoline)
12	AT 18147 T	(-)	Rod, connecting, with screws and bushing (3 used) (gasoline)
13	T 19173 T	(-)	Screw, connecting rod (6 used) (gasoline) (packed 2 in a pkg.)