

John Deere

CLICK ANYWHERE FOR MORE DETAILS

MODEL:

310-A

Backhoe Loader

**OPERATOR'S
MANUAL**



JENSALES.COM

or Call **800-443-0625**

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-O-OMT66837

CLICK ANYWHERE FOR MORE DETAILS

**JOHN DEERE
JD310-A
BACKHOE LOADER**

MANUAL PREVIEW

**OPERATORS MANUAL
JOHN DEERE JD310-A
BACKHOE LOADER**

OMT66837 J9 English

purchase full manual at

**JENSALES.COM
or Call 800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS

OMT66837 J9

LITHO IN THE U.S.A.
ENGLISH



 
Contents

COMPONENTS	1
Become familiar with major machine parts before operation.	
GENERAL SAFETY RULES	2
All persons working around this machine should read these important safety messages.	
CONTROLS AND INSTRUMENTS	3
Instruments and indicators are shown. Control positions are shown with working positions.	
OPERATION SAFETY RULES	4
Follow these cautions when operating this machine to avoid personal injury.	
PRE-START INSPECTION	5
Walk-around checks for preventive maintenance.	
OPERATION	6
Starting and stopping procedures, break-in, towing, cab accessories, optional equipment, and adjustments.	
TRANSPORTING	7
Loading, tie-down, and unloading procedures.	
FUELS AND LUBRICANTS	8
Fuel specifications and lubricants.	
SERVICE SAFETY RULES	9
Follow these safety rules during periodic service or general maintenance.	
PERIODIC SERVICE	10
A chart giving service intervals... and specific information on each item.	
MAINTENANCE	11
Service for parts not in periodic service.	
TROUBLE SHOOTING	12
Common operating problems, causes, and solutions.	
SPECIFICATIONS	13
Useful machine measurements.	
SERIAL NUMBERS	14
Record for machine serial numbers.	
INDEX	15
An alphabetical list of parts, uses, and procedures.	



Components

1

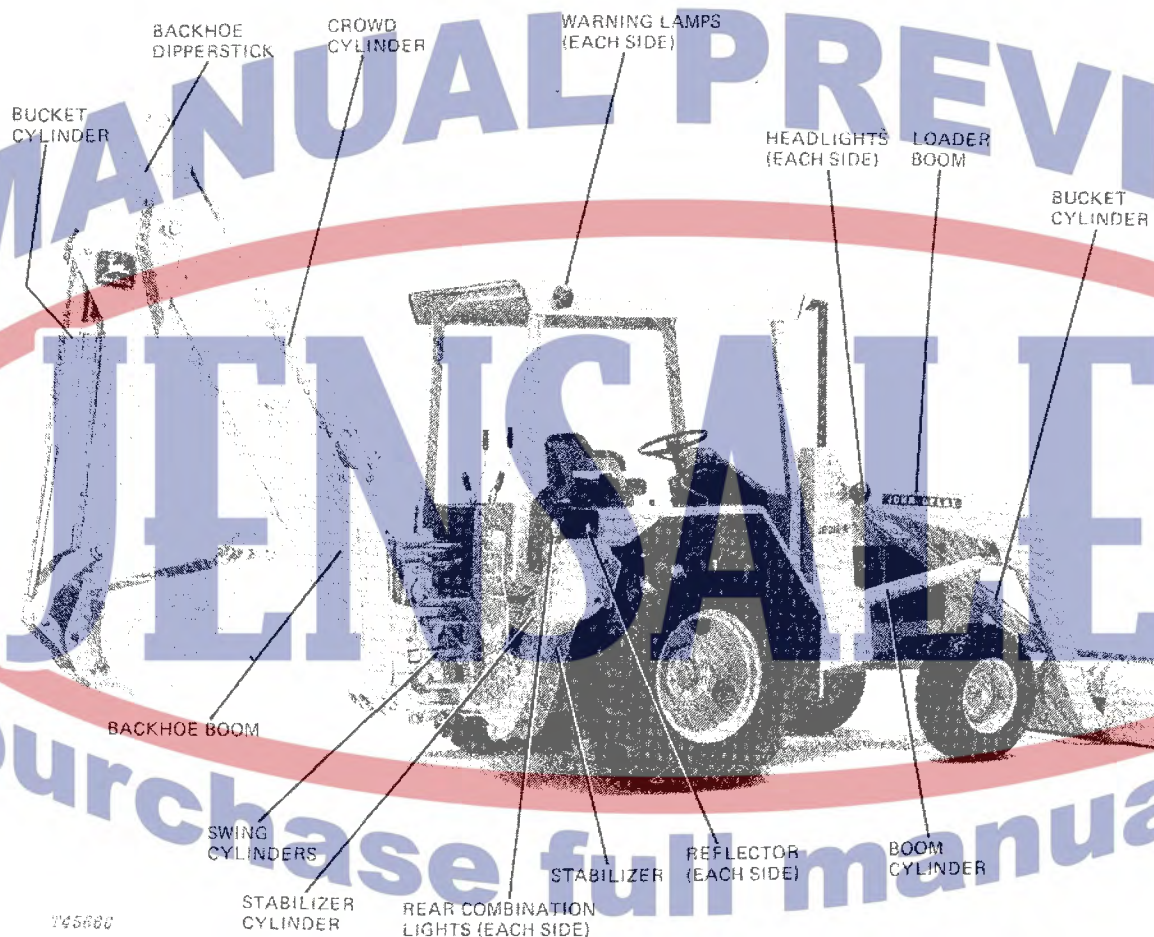



145680

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

  STABILIZER CONTROL LEVERS

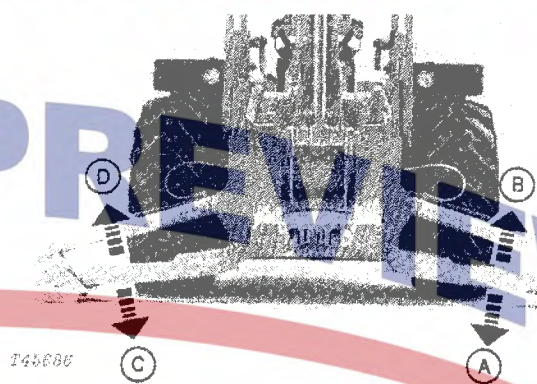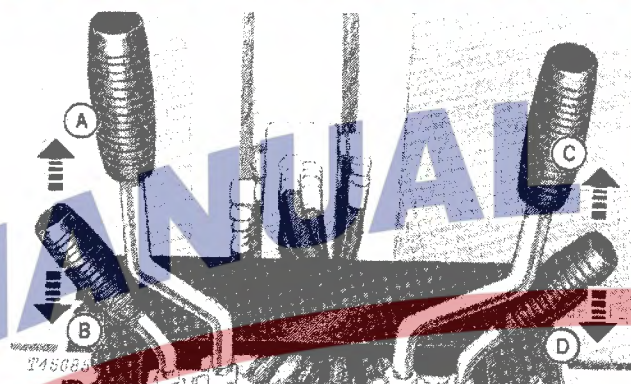

A—Left Stabilizer Down

 
 
B—Left Stabilizer Up

C—Right Stabilizer Down

D—Right Stabilizer Up

CAUTION: Be careful when raising stabilizers. Remember stabilizers may be the only restraint preventing backhoe loader from rolling into excavation.

BACKHOE BOOM CONTROL LEVER

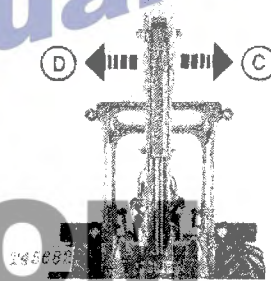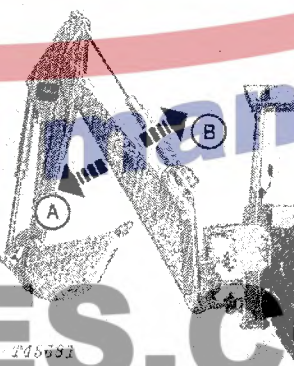

A—Lower

B—Raise

C—Boom Left

D—Boom Right

 
For faster cycle times, move the lever to positions between those shown. You can swing the boom left (L.H.) or right (R.H.) at the same time it is raised or lowered.

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

PREPARING THE BACKHOE FOR HIGHWAY TRAVEL OR LOADER OPERATIONS


Perform the following steps before driving or using loader.

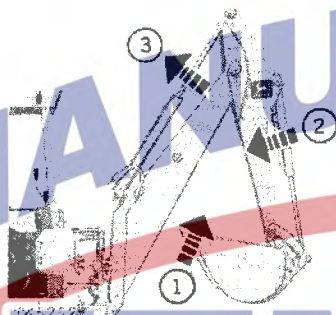


- 1 - Retract bucket.
- 2 - Retract dipperstick.
- 3 - Raise boom.



 - 4 - Center boom.
- 5 - Install swing and boom locking pins.
- 6 - Raise stabilizers.

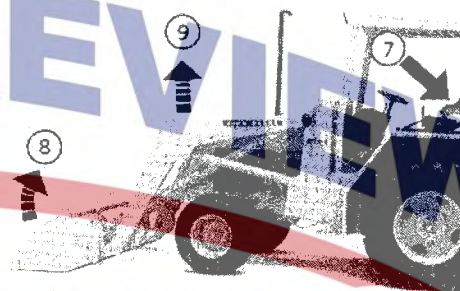

 - 7 - Move seat to loader position.
- 8 - Retract bucket.
- 9 - Raise loader to height of machine ground clearance.

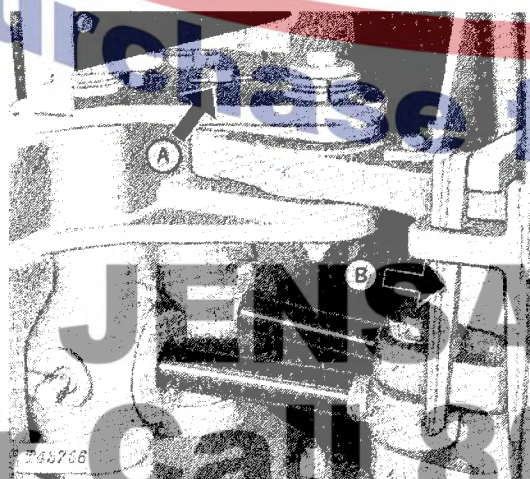

A—Swing Lock Pin

B—Boom Lock Pin

 
Before driving, install swing lock pin and boom lock pin.

JENSALES.COM
or call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS



Specifications

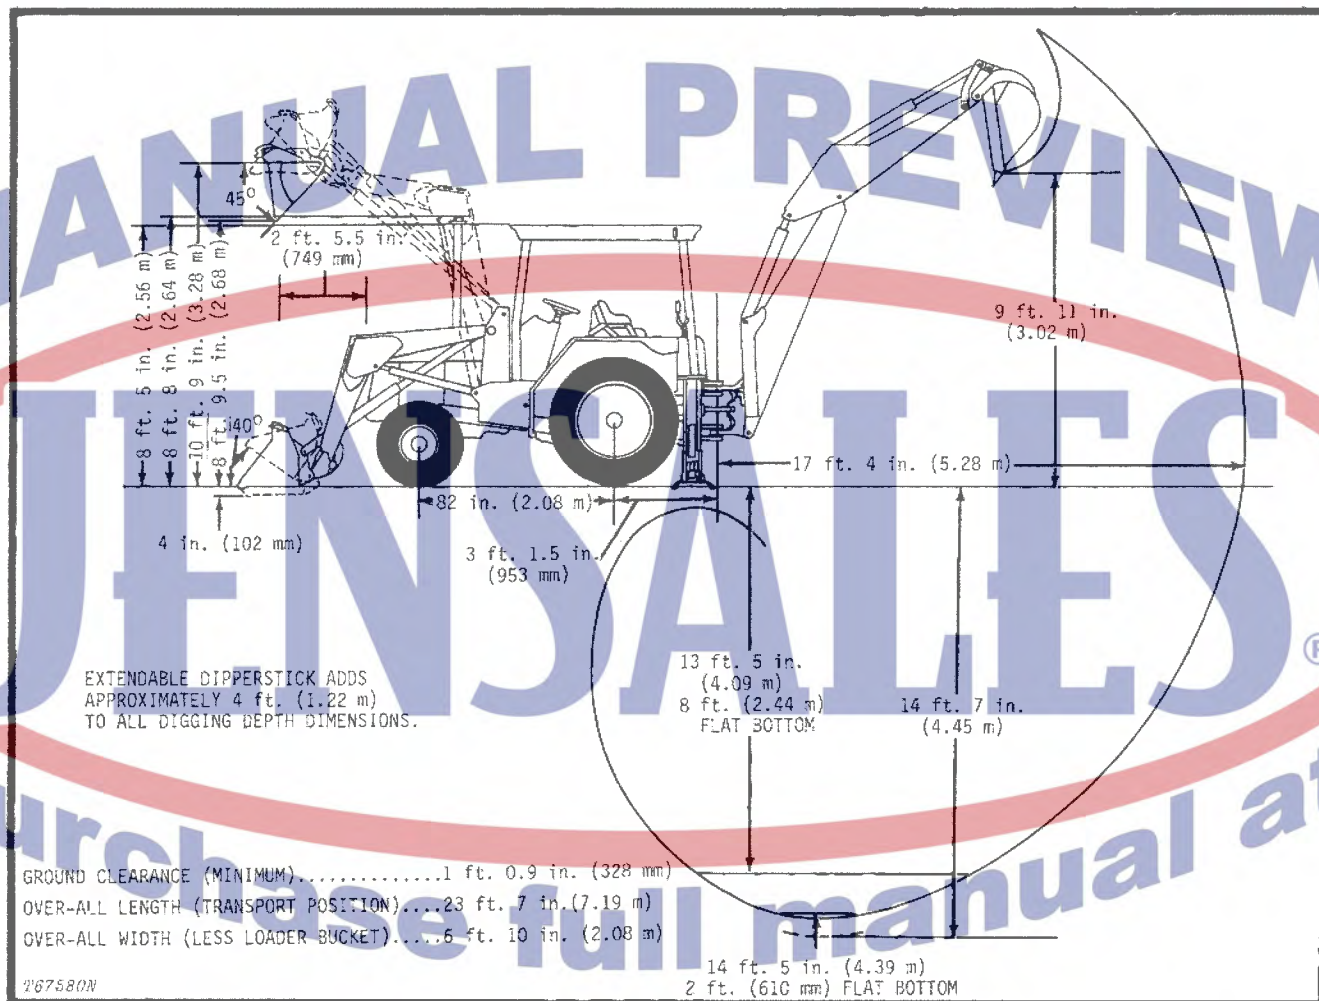

WHEEL TREADS:

Front. 58 in. (1.47 m)
Rear 65 in. (1.65 m)

BACKHOE:

Swing arc 180 deg.
Lifting capacity:
Boom at full reach
and full height. 1500 lb. (680 kg)
Dipper lifting, boom
holding, full height. 3100 lb. (1406 kg)
Digging force (bucket cylinder
in power-dig position). 9636 lb. (43 kN)
Reach from center
of rear axle 20 ft. 5.5 in. (6.24 m)
Transport height 11 ft. 3 in. (3.43 m)

STABILIZER WIDTH:

Transport position 7 ft. 3 in. (2.21 m)
Operating position (overall). 10 ft. 2 in. (3.10 m)
Operating position (ICED) 8 ft. 9 in. (2.67 m)

LOADER:

Maximum dump angle 50 deg.
Lifting capacity,
full height. 5000 lb. (2268 kg)
Raising time to full height. 3.7 sec.
Bucket dump time 1.3 sec.
Lowering time (power) 3.0 sec.

SAE operating weight with ROPS. 13,520 lb. (6133 kg)

(Specifications and design subject to change without notice. Wherever applicable, specifications are in accordance with ICED and SAE Standards. Except where otherwise noted, these specifications are based on a unit equipped with 16.9-24, 8-ply-rating, R4 rear tires; 11L-15, 8-ply-rating front tires; 3/4 cu. yd. (0.57 m³) loader bucket, 24 in. (610 mm) standard backhoe bucket, and standard equipment.)



Index

	Page		Page
A		F	
Accumulator	45	Fan belt	46
After starting	20	Flasher	54
Air cleaner	37,60	Front wheel bearings	41,48
Air intake hoses	46	Fuel filter	39
		Fuel system	52
B		Fuel tank filter	51
Backhoe bucket position	24	Fuels	30
Backhoe and loader components	54	Fuses	55
Backhoe controls	13,14,24		
Backhoe operation	26,27	G	
Backhoe tapered pins	56	Gauges	6
Backhoe transport position	27	Grease	31
Batteries	44	Grease fittings	40-42,47
Booster battery	19	Grilles	33
Brakes	9		
Break-in chart	22	H	
Bucket level indicator	24	Hour meter	33
Bucket teeth	25	Hydraulic filters	43,47
C		I	
Cab accessories	28	Injection nozzles	51
Circuit breakers	53,54	Injection pump	51
Clutch pedal	59		
Cold weather starting	18	L	
Components	2	Lights	10,23,54
Control valves and cylinders	57	Loader control lever	12,24
Controls	5	Lubricants	31
Controls and instruments	5-14		
Coolant heater	19	M	
Cooling system	52	Main hydraulic pump	49
Crankcase vent tube	47	Maintenance	52-58
Cycle times	56	Miscellaneous components	57
D		O	
Differential lock	7	Oil lines	60
		Oils	31
E		Operation	17-28
Electrical system	53		
Engine disconnect pedal	10,19	P	
Engine filter change	44	Parking	21
Engine oil change	44,60	Parking brake	9,58
Engine oil level	40	Periodic service	33-50
Engine speeds	48	Periodic service chart	34-36
Engine starting	17	Pre-start inspection	16
Engine valves	47		
Extendable dipperstick	14,55		

CLICK ANYWHERE FOR MORE DETAILS

	Page		Page
R		T	
Radiator	38	Tires	23,43,60
Rear axle bearings	47	Toe-in	57
Removing air from fuel system	39,52	Torque chart	42
Reverser	8,60	Towing	22
Ripper tooth	28	Transmission filter	43,47
		Transmission oil change	50
S		Transmission oil level	38
Safety rules, general	3,4	Transmission shifting	8
Safety rules, operation	15	Transporting	29
Safety rules, service	32	Trouble shooting	61
Seat	11,40		
Sediment bowl	39	W	
Serial numbers	64	Warm-up period	20
Spark-arresting muffler	58	Wheel retainers	59
Specifications	63		
Speed controls	7		
Stabilizers	13		
Starter	49		
Starting aid	18		

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS