

John Deere


CLICK ANYWHERE FOR MORE DETAILS

MODEL:

4230 Tractor

Volume 1 of 2

**PARTS
MANUAL**

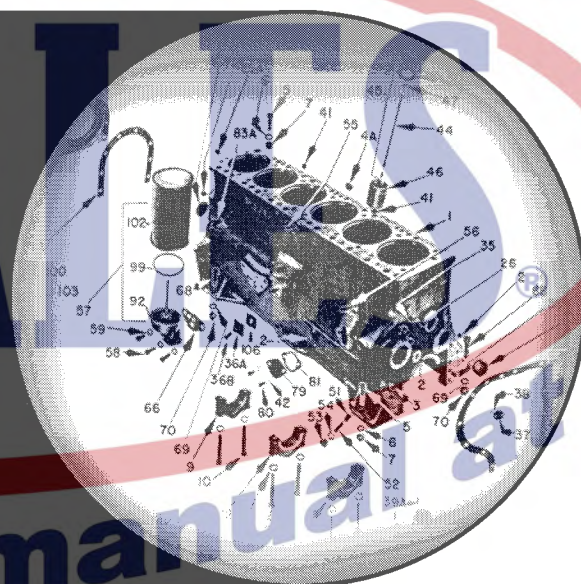

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-P-PC1294

CLICK ANYWHERE FOR MORE DETAILS

**4230
Tractor**

MANUAL PREVIEW



**JENSALES.COM
or Call 800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS

**Waterloo Tractor Works
PC-1294**

LITHO IN U.S.A. (REVISED)

CLICK ANYWHERE FOR MORE DETAILS



John Deere 4230 Tractor

Specifications and design subject to change without notice.

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

SECTIONAL INDEX

General	10
Engine	20
Fuel and Air	30
Electrical	40
Power Train	50
Steering and Brakes	60
Hydraulics	70
Wheels, Front Axles, Sheet Metal	80
Operator's Station	90
Numerical Index	95

ABBREVIATIONS USED IN THE ALPHABETICAL INDEX

PFWD - POWER FRONT WHEEL DRIVE

PWTB - POWER WEIGHT TRANSFER HITCH

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
	A		2F17	AXLE, REAR	50-119
4B20	ABSORBER, SHOCK, SEAT SUPPORT	90-24		B	
4C5	ABSORBER, SHOCK, SEAT SUPPORT	90-34	4B19	BACK, SEAT	90-23
2E15	ACCUMULATOR PISTON, CLUTCH OIL	50-90	4B23	BACK, SEAT	90-27
2I1	ACCUMULATOR, BRAKE	60-41	3H6	BAFFLE, HOOD	80-42
1D5	ADAPTER, STARTING AID (DIESEL)	30-9	1C11	BAFFLES, RADIATOR, KIT	20-34
1D4	ADAPTER, STARTING AID (ELECTRIC)	30-8	3D4	BALL, IMPLEMENT HITCH	70-53
3F18	ADJUSTABLE TREAD FRONT AXLE	80-2	3D5	BALL, IMPLEMENT HITCH	70-54
4B8	AIR CIRCULATION PRESSURIZER BLOWER, SGB	90-12	1F15	BATTERY (DIESEL)	40-13
1C23	AIR CLEANER	30-2	1F14	BATTERY (GASOLINE)	40-12
1C22	AIR CLEANER ELEMENT GUN	30-1	3G20	BATTERY BOX	80-30
4A23	AIR COMPRESSOR WIRING	90-1	3G22	BATTERY BOX	80-32
3B22	AIR CONDITIONING CONDENSER	70-21	3H1	BATTERY BOX	80-36
4A24	AIR CONDITIONING, BELT, COMPRESSOR	90-2	3H3	BATTERY BOX	80-38
4A24	AIR CONDITIONING, COMPRESSOR	90-2	1F12	BATTERY CABLES	40-10
1D9	AIR INTAKE PIPE (DIESEL)	30-13	1F13	BATTERY CABLES	40-11
1D8	AIR INTAKE PIPE (GASOLINE)	30-12	3G20	BATTERY CLAMPS	80-30
1C25	AIR STACK	30-4	3G22	BATTERY CLAMPS	80-32
1C23	ALR CLEANER	30-2	3H1	BATTERY CLAMPS	80-36
1G7	ALTERNATOR	40-30	3H3	BATTERY CLAMPS	80-38
1G8	ALTERNATOR	40-31	1B19	BEARING, CONNECTING ROD (DIESEL)	20-17
1G9	ALTERNATOR	40-32	1B18	BEARING, CONNECTING ROD (GASOLINE)	20-16
1G7	ALTERNATOR BELT	40-30	1B21	BEARING, CONNECTING RODS (UNDERSIZE)	20-19
1G8	ALTERNATOR BELT	40-31	1B21	BEARING, MAIN	20-19
1C13	ALTERNATOR BELT (GASOLINE)	20-36	1B22	BEARING, MAIN	20-20
1G10	ALTERNATOR BRUSHES	40-33	1B22	BEARING, MAIN THRUST	20-20
1G7	ALTERNATOR MOUNTING BRACKET	40-30	1G7	BELT, FAN AND ALTERNATOR DRIVE	40-30
1G8	ALTERNATOR MOUNTING BRACKET	40-31	1G8	BELT, FAN AND ALTERNATOR DRIVE	40-31
1G10	ALTERNATOR PARTS	40-33	1C13	BELT, FAN AND ALTERNATOR DRIVE (GAS)	20-36
1G7	ALTERNATOR PULLEY	40-30	4B12	BELT, SEAT	90-16
1G8	ALTERNATOR PULLEY	40-31	4B13	BELT, SEAT	90-17
1G9	ALTERNATOR PULLEY	40-32	4B19	BELT, SEAT	90-23
1G9	ALTERNATOR REGULATOR	40-32	4C1	BELT, SEAT	90-30
1H21	ANTENNA BRACKET, CB RADIO	40-74	2C6	BEVEL GEAR, DIFFERENTIAL	50-27
1H22	ANTENNA, FENDER MOUNTED	40-75	2C7	BEVEL GEAR, DIFFERENTIAL	50-28
1H19	ANTENNA, RADIO KIT	40-72	2C20	BEVEL GEAR, DIFFERENTIAL	50-44
1D18	ARM, GOVERNOR (GASOLINE)	30-23	2F3	BEVEL GEAR, DIFFERENTIAL	50-104
3C9	ARM, LIFT	70-34	2F4	BEVEL GEAR, DIFFERENTIAL	50-105
3C10	ARM, LOAD CONTROL	70-35	2F5	BEVEL GEAR, DIFFERENTIAL	50-106
3C11	ARM, LOAD CONTROL	70-36	2F7	BEVEL GEAR, DIFFERENTIAL	50-108
3F1	ARM, REMOTE CYLINDER TRANSPORT	70-100	2C6	BEVEL PINION, DIFFERENTIAL	50-27
1B7	ARM, ROCKER	20-4	2C7	BEVEL PINION, DIFFERENTIAL	50-28
3C9	ARM, ROCKSHAFT CRANK	70-34	2F3	BEVEL PINION, DIFFERENTIAL	50-104
3D3	ARM, ROCKSHAFT CRANK	70-52	2F4	BEVEL PINION, DIFFERENTIAL	50-105
2C20	ARM, SHIFTER	50-44	2F5	BEVEL PINION, DIFFERENTIAL	50-106
2C21	ARM, SHIFTER	50-45	2F7	BEVEL PINION, DIFFERENTIAL	50-108
3F23	ARM, STEERING	80-7	2C20	BEVEL, PINION, DIFFERENTIAL	50-44
3F24	ARM, STEERING	80-8	3H12	BI-LINGUAL DECAL SET	80-48
3F25	ARM, STEERING	80-9	1B16	BLOCK, CYLINDER (DIESEL)	20-13
3G12	ARM, STEERING	80-22	1B15	BLOCK, CYLINDER (GASOLINE)	20-12
1G17	ARMATURE, STARTER	40-42	2F22	BLOCK, MOTOR CYLINDER (PFWD)	50-124
4C2	ARMREST, SEAT	90-31	3D21	BLOCK, SWAY CONTROL	70-70
2C22	ARMS, SHIFTER SHAFTS	50-46	2C9	BLOCKER, TRANSMISSION	50-30
2C24	ARMS, SHIFTER SHAFTS	50-48	2C8	BLOCKERS, TRANSMISSION	50-29
4D8	ASH TRAY	90-64	2C11	BLOCKERS, TRANSMISSION	50-32
3B13	ATTENUATOR, HYDRAULIC OIL	70-12	2C12	BLOCKERS, TRANSMISSION	50-33
3B15	ATTENUATOR, HYDRAULIC OIL	70-14	4B9	BLOWER MOTOR RESISTOR	90-13
3E22	AUXILIARY HYDRAULIC OUTLET KIT	70-97	4B7	BLOWER, PRESSURIZER	90-11
3E21	AUXILIARY OUTLET COUPLER KIT	70-96	4B8	BLOWER, PRESSURIZER, SGB	90-12
3E23	AUXILIARY OUTLET COUPLER KIT	70-98	4C11	BODY, SOUND-GARD	90-40
3F18	AXLE PIVOT BRACKET, FRONT	80-2	1G5	BOOT, SPARK PLUG	40-28
3F18	AXLE, FRONT	80-2	3G20	BOX, BATTERY	80-30
3F20	AXLE, FRONT	80-4	3G22	BOX, BATTERY	80-32
3G13	AXLE, FRONT	80-23	3H1	BOX, BATTERY	80-36
2F12	AXLE, REAR	50-114			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
3H3	BOX, BATTERY	80-38	2B18	CLUTCH DRIVE SHAFT	50-14
3G24	BRACE, PLATFORM EXTENSION	80-34	2B20	CLUTCH DRUM	50-16
1H21	BRACKET, CB RADIO ANTENNA	40-74	2C16	CLUTCH DRUM	50-38
1H21	BRACKET, CB RADIO MOUNTING	40-74	2C18	CLUTCH DRUM	50-40
1H15	BRACKET, FENDER	40-67	2B5	CLUTCH HOUSING	50-1
3F17	BRACKET, FRONT AXLE PIVOT	80-1	2B15	CLUTCH HOUSING	50-11
2I1	BRAKE ACCUMULATOR	60-41	2B19	CLUTCH OIL MANIFOLD	50-15
2H25	BRAKE FACING	60-40	2B10	CLUTCH OIL PRESSURE VALVE HOUSING	50-6
2I2	BRAKE OIL PIPES	60-43	2B8	CLUTCH OPERATING PISTON HOUSING	50-4
2I5	BRAKE OIL PIPES	60-47	2B6	CLUTCH PEDAL	50-2
2I3	BRAKE OIL PIPES (UPPER)	60-44	2B7	CLUTCH PTO	50-3
2H21	BRAKE PEDALS	60-36	2B21	CLUTCH PTO	50-17
2C16	BRAKE PISTON HOUSING	50-38	2B7	CLUTCH SHAFT	50-3
2C18	BRAKE PISTON HOUSING	50-40	2C25	CLUTCH, CONTROL, TRANSMISSION	50-49
2H25	BRAKE PLATES	60-40	2E15	CLUTCH, OIL ACCUMULATOR PISTON	50-90
2H23	BRAKE VALVE	60-38	1D5	COLD WEATHER STARTING AID (DIESEL)	30-9
2H24	BRAKE VALVE OVERHAUL KIT	60-39	1D4	COLD WEATHER STARTING AID (ELECTRIC)	30-8
3E6	BREAKAWAY COUPLER	70-81	2C11	COLLAR, SYNCHRONIZER DRIVE	50-32
3E7	BREAKAWAY COUPLER	70-82	2C12	COLLAR, SYNCHRONIZER DRIVE	50-33
3E9	BREAKAWAY COUPLER (ISO)	70-84	4A24	COMPRESSOR	90-2
3E8	BREAKAWAY COUPLER OVERHAUL KIT	70-83	4A25	COMPRESSOR	90-3
1F24	BREAKER, CIRCUIT	40-22	4A25	COMPRESSOR CLUTCH	90-3
1G10	BRUSHES, ALTERNATOR	40-33	4A25	COMPRESSOR COIL	90-3
1B19	BUSHING, PISTON PIN (DIESEL)	20-17	4A25	COMPRESSOR PULLEY	90-3
1B18	BUSHING, PISTON PIN (GASOLINE)	20-16	1G6	CONDENSER	40-29
			4B1	CONDENSER LINES	90-4
			4B2	CONDENSER LINES	90-5
			3B22	CONDENSER, AIR CONDITIONING	70-21
			1B19	CONNECTING ROD BEARINGS (DIESEL)	20-17
			1B18	CONNECTING ROD BEARINGS (GASOLINE)	20-16
			1B21	CONNECTING ROD BEARINGS (UNDERSIZE)	20-19
			1B19	CONNECTING RODS (DIESEL)	20-17
			1B18	CONNECTING RODS (GASOLINE)	20-16
			4D7	CONSOLE SUPPORT	90-63
			4D17	CONSOLE, CONTROL	90-74
			2E20	CONTROL CABLES, TRANSMISSION	50-96
			4D17	CONTROL CONSOLE	90-74
			3C21	CONTROL LINKAGE, ROCKSHAFT	70-46
			4D11	CONTROL SUPPORT	90-68
			4D11	CONTROL SUPPORT COVERS	90-68
			2G3	CONTROL VALVE OVERHAUL KIT (PFWD)	50-130
			2E16	CONTROL VALVES, TRANSMISSION	50-91
			1E20	CONTROL, FOOT SPEED	30-51
			3C10	CONTROL, LOAD	70-35
			3C11	CONTROL, LOAD	70-36
			3C21	CONTROL, LOAD SELECTOR	70-46
			2C25	CONTROL, TRANSMISSION SHIFTER	50-49
			2D12	CONTROL, TRANSMISSION SHIFTER	50-62
			1H10	CONTROL, TURN SIGNAL	40-61
			3C15	CONTROL, VALVE HOUSING, ROCKSHAFT	70-40
			3C17	CONTROL, VALVE HOUSING, ROCKSHAFT	70-42
			3F10	CONVERSION KIT, REMOTE CYLINDER	70-110
			3F11	CONVERSION KIT, REMOTE CYLINDER	70-111
			1C8	COOLER, ENGINE OIL (DIESEL)	20-31
			1C7	COOLER, ENGINE OIL (GASOLINE)	20-30
			3B22	COOLER, HYDRAULIC OIL	70-21
			3B23	COOLER, HYDRAULIC OIL	70-22
			4B4	CORE, EVAPORATOR	90-8
			2C5	COUNTERSHAFT, TRANSMISSION	50-26
			3E21	COUPLER, AUXILIARY OUTLET	70-96
			3E6	COUPLER, BREAKAWAY	70-81
			3E7	COUPLER, BREAKAWAY	70-82
			3E9	COUPLER, BREAKAWAY (ISO)	70-84
			3E10	COUPLER, FLEXIBLE OIL LINE	70-85
			3D19	COUPLER, IMPLEMENT QUIK	70-68
			3D20	COUPLER, IMPLEMENT QUIK	70-69
			3B4	COUPLER, MAIN PUMP DRIVE	70-1

C

4B8	CAB PRESSURIZER BLOWER	90-12
1F12	CABLE, BATTERY	40-10
1E17	CABLE, CHOKE (GASOLINE)	30-47
1G5	CABLE, SPARK PLUG	40-28
4D13	CABLE, SPEED-HOUR METER	90-70
1H12	CABLE, WIRING	40-64
1B12	CAMSHAFT (DIESEL)	20-9
1B11	CAMSHAFT (GASOLINE)	20-8
1B12	CAMSHAFT GEAR (DIESEL)	20-9
1B11	CAMSHAFT GEAR (GASOLINE)	20-8
4B17	CANOPY	90-21
1C25	CAP, AIR STACK	30-4
1B25	CAP, CRANKCASE (DIESEL)	20-23
1D12	CAP, FUEL FILTER (DIESEL)	30-16
1D10	CAP, FUEL FILTER (GASOLINE)	30-14
1C9	CAP, RADIATOR	20-32
1H15	CAPACITOR, RADIO NOISE SUPPRESSOR	40-67
1D19	CARBURETOR	30-24
1D20	CARBURETOR	30-25
1D18	CARRIER, GOVERNOR WEIGHT (GASOLINE)	30-23
2C13	CARRIER, PLANET PINION	50-34
2C14	CARRIER, PLANET PINION	50-35
2E9	CARRIER, PLANET PINION	50-84
2F12	CARRIER, PLANET PINION	50-114
2C3	CASE, TRANSMISSION	50-24
2E3	CASE, TRANSMISSION	50-78
3G6	CAST DISK WHEELS	80-16
1H21	CB RADIO MOUNTING KIT	40-74
1E17	CHOKE CABLE (GASOLINE)	30-47
1H9	CIGAR LIGHTER	40-60
1F24	CIRCUIT BREAKER	40-22
1F22	CIRCUIT BREAKERS	40-20
3G20	CLAMP, BATTERY	80-30
3G22	CLAMP, BATTERY	80-32
3H1	CLAMP, BATTERY	80-36
3H3	CLAMP, BATTERY	80-38
1C22	CLEANING GUN, DRY AIR CLEANER ELEMENT	30-1
2B7	CLUTCH DISK	50-3

PAGE	GRID	PAGE
3E12	COUPLINGS, REUSABLE	70-87
4D11	COVER, CONTROL SUPPORT	90-68
3E7	COVER, DUST, BREAKAWAY COUPLER	70-82
3E10	COVER, DUST, BREAKAWAY COUPLER	70-85
1C6	COVER, ENGINE OIL FILTER (DIESEL)	20-29
1C5	COVER, ENGINE OIL FILTER (GASOLINE)	20-28
1D6	COVER, EXHAUST MUFFLER	30-10
1D7	COVER, EXHAUST MUFFLER (LOW-PROFILE)	30-11
1B9	COVER, ROCKER ARM	20-6
1B10	COVER, ROCKER ARM	20-7
3C5	COVER, ROCKSHAFT HOUSING	70-30
3D15	COVER, ROCKSHAFT HOUSING	70-64
3C12	COVER, ROCKSHAFT PISTON	70-37
3C1	COVER, SELECTIVE CONTROL	70-25
2G16	COVER, STEERING VALVE CYLINDER	60-4
2G22	COVER, STEERING VALVE CYLINDER	60-10
1B25	COVER, TIMING GEAR (DIESEL)	20-23
1B24	COVER, TIMING GEAR (GASOLINE)	20-22
2C4	COVER, TRANSMISSION CASE	50-25
2E4	COVER, TRANSMISSION CASE	50-79
3C7	COVER, TRANSMISSION, REAR	70-32
4D11	COWL	90-68
3C9	CRANK, ROCKSHAFT ARM	70-34
1B20	CRANKSHAFT	20-18
1B21	CRANKSHAFT (UNDERSIZE)	20-19
2D4	CREEPER CONTROL RODS	50-53
4C1	CUSHION, BACKREST	90-30
4B19	CUSHION, SEAT	90-23
4C1	CUSHION, SEAT	90-30
1B16	CYLINDER BLOCK (DIESEL)	20-13
1B15	CYLINDER BLOCK (GASOLINE)	20-12
2F22	CYLINDER BLOCK, MOTOR (PFWD)	50-124
1B5	CYLINDER HEAD	20-2
1B19	CYLINDER LINER (DIESEL)	20-17
1B18	CYLINDER LINER (GASOLINE)	20-16
3D13	CYLINDER, DUAL LIFT ASSIST, KIT	70-62
3D3	CYLINDER, LIFT ASSIST	70-52
3D17	CYLINDER, LIFT ASSIST PIPES	70-66
3F1	CYLINDER, REMOTE	70-100
3F3	CYLINDER, REMOTE	70-102
3F7	CYLINDER, REMOTE	70-107
3F8	CYLINDER, REMOTE	70-108
3F4	CYLINDER, REMOTE, OVERHAUL KIT	70-103
3D11	CYLINDER, SINGLE LIFT ASSIST, KIT	70-60
2G15	CYLINDER, STEERING VALVE	60-3
D		
1B20	DAMPER, CRANKSHAFT	20-18
4D13	DASH, ASSEMBLY	90-70
4D13	DASH, SUPPORT	90-70
3H14	DECALS	80-50
1C12	DEFLECTOR, FAN BLAST (DIESEL)	20-35
4B19	DELUXE SEAT	90-23
4B22	DELUXE SEAT SUPPORT	90-26
4B20	DELUXE SEAT SUSPENSION	90-24
3G6	DEMOUNTABLE RIMS	80-16
2F3	DIFFERENTIAL	50-104
2F4	DIFFERENTIAL	50-105
2F5	DIFFERENTIAL	50-106
2F7	DIFFERENTIAL	50-108
2C6	DIFFERENTIAL DRIVE SHAFT	50-27
2C7	DIFFERENTIAL DRIVE SHAFT	50-28
2E13	DIFFERENTIAL DRIVE SHAFT	50-88
2F3	DIFFERENTIAL DRIVE SHAFT	50-104
2F4	DIFFERENTIAL DRIVE SHAFT	50-105
2F5	DIFFERENTIAL DRIVE SHAFT	50-106
2F7	DIFFERENTIAL DRIVE SHAFT	50-108
2F8	DIFFERENTIAL DRIVE SHAFT	50-109
2F9	DIFFERENTIAL DRIVE SHAFT	50-110
2F10	DIFFERENTIAL DRIVE SHAFT	50-111
2F11	DIFFERENTIAL DRIVE SHAFT	50-112
2F12	DIFFERENTIAL DRIVE SHAFT	50-113
2F13	DIFFERENTIAL DRIVE SHAFT	50-114
2F14	DIFFERENTIAL DRIVE SHAFT	50-115
2F15	DIFFERENTIAL DRIVE SHAFT	50-116
2F16	DIFFERENTIAL DRIVE SHAFT	50-117
2F17	DIFFERENTIAL DRIVE SHAFT	50-118
2F18	DIFFERENTIAL DRIVE SHAFT	50-119
2F19	DIFFERENTIAL DRIVE SHAFT	50-120
2F20	DIFFERENTIAL DRIVE SHAFT	50-121
2F21	DIFFERENTIAL DRIVE SHAFT	50-122
2F22	DIFFERENTIAL DRIVE SHAFT	50-123
2F23	DIFFERENTIAL DRIVE SHAFT	50-124
2F24	DIFFERENTIAL DRIVE SHAFT	50-125
2F25	DIFFERENTIAL DRIVE SHAFT	50-126
2F26	DIFFERENTIAL DRIVE SHAFT	50-127
2F27	DIFFERENTIAL DRIVE SHAFT	50-128
2F28	DIFFERENTIAL DRIVE SHAFT	50-129
2F29	DIFFERENTIAL DRIVE SHAFT	50-130
2F30	DIFFERENTIAL DRIVE SHAFT	50-131
2F31	DIFFERENTIAL DRIVE SHAFT	50-132
2F32	DIFFERENTIAL DRIVE SHAFT	50-133
2F33	DIFFERENTIAL DRIVE SHAFT	50-134
2F34	DIFFERENTIAL DRIVE SHAFT	50-135
2F35	DIFFERENTIAL DRIVE SHAFT	50-136
2F36	DIFFERENTIAL DRIVE SHAFT	50-137
2F37	DIFFERENTIAL DRIVE SHAFT	50-138
2F38	DIFFERENTIAL DRIVE SHAFT	50-139
2F39	DIFFERENTIAL DRIVE SHAFT	50-140
2F40	DIFFERENTIAL DRIVE SHAFT	50-141
2F41	DIFFERENTIAL DRIVE SHAFT	50-142
2F42		

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2D19	ELEMENT, OIL FILTER, TRANSMISSION	50-69	1E20	FOOT SPEED CONTROL	30-51
2E22	ELEMENT, OIL FILTER, TRANSMISSION	50-98	3G14	FRAME	80-24
4D24	EMBLEM, SLOW MOVING VEHICLE	90-81	3G14	FRAME PLATE	80-24
2G13	EMBLEM, STEERING WHEEL	60-1	3G14	FRAME, SIDE	80-24
2G14	EMBLEM, STEERING WHEEL	60-2	3F19	FRONT AXLE HOUSING	80-3
2H7	EMBLEM, STEERING WHEEL	60-20	3F20	FRONT AXLE HOUSING	80-4
2H9	EMBLEM, STEERING WHEEL	60-22	3G13	FRONT AXLE HOUSING	80-23
3F23	END, TIE ROD	80-7	3F21	FRONT AXLE KNEE	80-5
3F24	END, TIE ROD	80-8	3F22	FRONT AXLE KNEE	80-6
3F25	END, TIE ROD	80-9	3G11	FRONT AXLE KNEE	80-21
3G12	END, TIE ROD	80-22	3F18	FRONT AXLE, ADJUSTABLE TREAD	80-2
1H11	ENGINE COOLANT HEATER	40-63	1F4	FRONT LAMPS	40-2
1C1	ENGINE OIL	20-24	1F8	FRONT LAMPS	40-6
1C8	ENGINE OIL COOLER (DIESEL)	20-31	1G23	FRONT LAMPS	40-50
1C7	ENGINE OIL COOLER (GASOLINE)	20-30	1H1	FRONT LAMPS	40-52
1C6	ENGINE OIL FILTER (DIESEL)	20-29	1H3	FRONT LAMPS	40-54
1C5	ENGINE OIL FILTER (GASOLINE)	20-28	3G16	FRONT WEIGHTS	80-26
1C3	ENGINE OIL PUMP (DIESEL)	20-26	3G17	FRONT WEIGHTS	80-27
1C2	ENGINE OIL PUMP (GASOLINE)	20-25	3G18	FRONT WEIGHTS	80-28
1B8	ENGINE VALVE STEM LUBRICANT	20-5	3G4	FRONT WHEELS	80-13
4B4	EVAPORATOR	90-8	3G5	FRONT WHEELS	80-15
1D2	EXHAUST MANIFOLD (DIESEL)	30-6	1D15	FUEL FILTER (DIESEL)	30-19
1D1	EXHAUST MANIFOLD (GASOLINE)	30-5	4D15	FUEL GAUGE	90-72
1B7	EXHAUST VALVE	20-4	1D12	FUEL GAUGE SENDER (DIESEL)	30-16
1B5	EXHAUST VALVE SEAT INSERT	20-2	1D10	FUEL GAUGE SENDER (GASOLINE)	30-14
1D6	EXTENSION, MUFFLER	30-10	1E1	FUEL INJECTION AUTOMATIC ADVANCE	30-30
3G3	EXTENSION, SPINDLE FRONT WHEEL	80-12	1D21	FUEL INJECTION NOZZLE	30-26
3G2	EXTENSION, SPINDLE, FRONT WHEEL	80-11	1E5	FUEL INJECTION NOZZLE	30-34
			1E15	FUEL INJECTION NOZZLE	30-44
			1E16	FUEL INJECTION NOZZLE	30-45
			1D21	FUEL INJECTION PUMP	30-26
			1D23	FUEL INJECTION PUMP	30-28
			1E1	FUEL INJECTION PUMP	30-30
			1E2	FUEL INJECTION PUMP	30-31
			1E3	FUEL INJECTION PUMP	30-32
			1E5	FUEL INJECTION PUMP	30-34
			1E7	FUEL INJECTION PUMP	30-36
			1E9	FUEL INJECTION PUMP	30-38
			1E11	FUEL INJECTION PUMP	30-40
			1E12	FUEL INJECTION PUMP	30-41
			1E9	FUEL INJECTION PUMP AUTOMATIC ADVANCE	30-38
			1E1	FUEL INJECTION PUMP DRIVE SHAFT	30-30
			1E9	FUEL INJECTION PUMP DRIVE SHAFT	30-38
			1E11	FUEL INJECTION PUMP GOVERNOR	30-40
			1E11	FUEL INJECTION PUMP HEAD AND ROTOR	30-40
			1E1	FUEL INJECTION PUMP HOUSING	30-30
			1E9	FUEL INJECTION PUMP HOUSING	30-38
			1D23	FUEL INJECTION PUMP LINKAGE	30-28
			1E7	FUEL INJECTION PUMP LINKAGE	30-36
			1E4	FUEL INJECTION PUMP TRANSFER PUMP	30-33
			1E12	FUEL INJECTION PUMP TRANSFER PUMP	30-41
			1D16	FUEL PIPES (DIESEL)	30-20
			1D14	FUEL PIPES (GASOLINE)	30-18
			1D16	FUEL PUMP (DIESEL)	30-20
			1D14	FUEL PUMP (GASOLINE)	30-18
			1D12	FUEL TANK (DIESEL)	30-16
			1D10	FUEL TANK (GASOLINE)	30-14
			1E13	GASKET OVERHAUL KIT, INJECTION PUMP	30-42
			1C19	GASKET SET (DIESEL)	20-43
			1C17	GASKET SET (GASOLINE)	20-40
			1B5	GASKET, CYLINDER HEAD	20-2
			1B9	GASKET, ROCKER ARM COVER	20-6
			1B10	GASKET, ROCKER ARM COVER	20-7