

John Deere

 
CLICK ANYWHERE FOR MORE DETAILS

MODEL:

5010 Industrial

MANUAL PREVIEW

**PARTS
MANUAL**

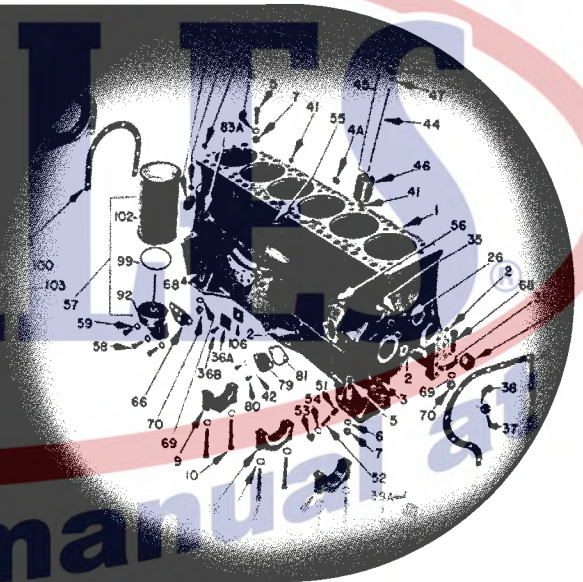

purchase full manual

JENSALES.COM

 
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS


THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-P-PC831

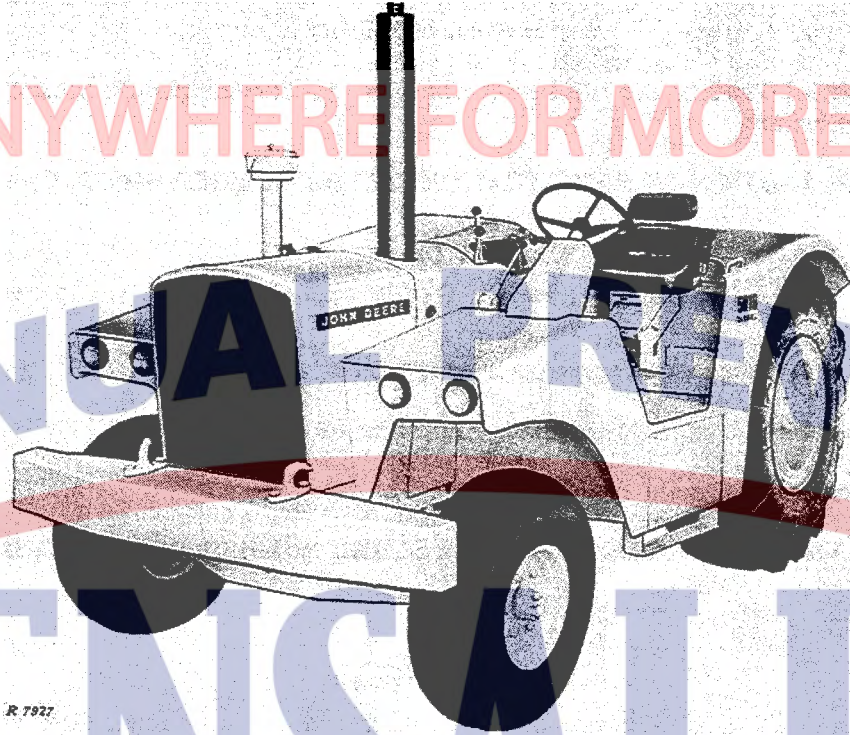

R 7927

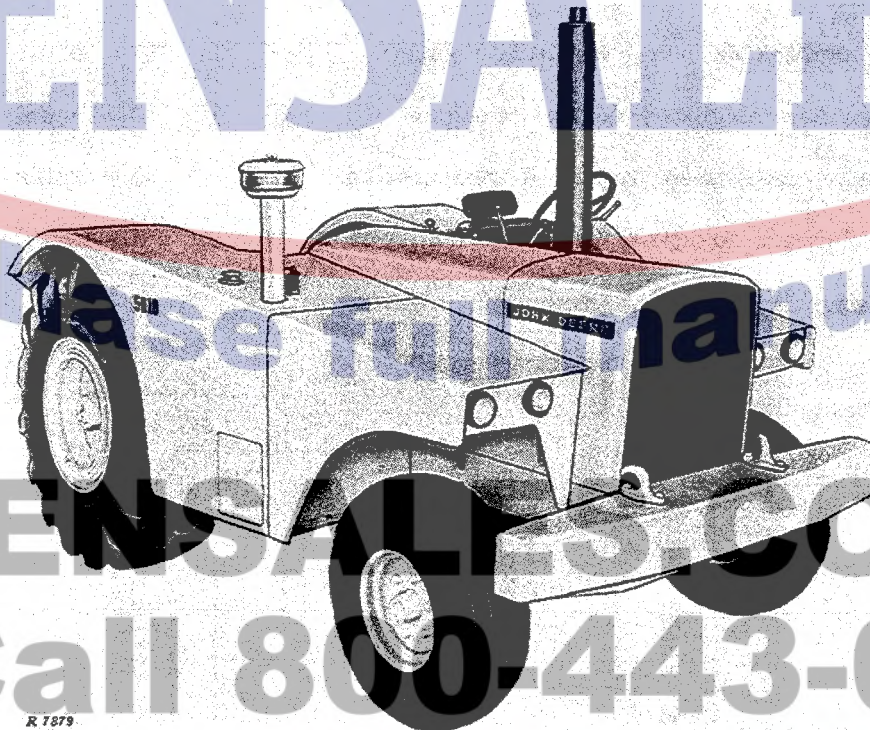 

R 7879

John Deere 5010-I Tractor

Specification and design subject to change without notice.

SUBJECT INDEX

	Page
General Information	I-X
Engine	1-14
Engine Accessories	15-21
Cooling System	22-25
Fuel System	26-39
Engine Drive Clutches and Controls	40-45
Transmission and PTO	46-67
Final Drive	68-73
Steering	74-83
Frame	84-85
Hydraulic System	86-103
Drawbar	104-105
Front Axle and Wheels	106-108
Rear Wheels	109-
Brakes	110-123
Sheet Metal and Miscellaneous	124-139
Electrical System	140-156
Decals	157-159
Numerical Index	160-

ALPHABETICAL INDEX

	Page		Page
A		Oil pipes	113
Absorber, shock, seat support	126	Pedals	112
Accumulator, brake	114, 116	Piston oil pipes	46
Accumulator, hydraulic	117	Plates	112
Adapter, cold weather starting aid	137	Valve	110
Air cleaner	18	Breaker, circuit	148, 150
Air intake pipe	18	Bushing, piston pin	10
Air stack	18	Bumper	85
Alternator	140, 141, 142	Bypass valve, hydraulic oil cooler	92
And starter wiring	148		
Parts	141, 142	C	
Pulley	140, 141, 142	Cable:	
Regulator	140	Battery	148
Regulator and mounting bracket	140	Control, PTO clutch	62
Arm:		Kit, spark plug and lead wire	156
Rocker	9	Speed-hour meter	148, 154
Speed control	20	Cam followers	9
Steering	106	Camshaft	9
Axle:		Camshaft gear	9
Front	106	Cap:	
Pivot bracket, front	106	Fuel filler	26
Rear	68	Radiator	22
		Transmission rear cover	46
B		Carrier:	
Back, seat	124	Clutch release bearing	42
Battery	139	Planet pinion	68
Cables	148	Cast disk wheels	109
Clamps	134	Cigarette lighter	148, 154
Door	134	Circuit breaker	148, 150
Tray	134	Clamp, battery	148
Bearing:		Cleaner, air	18
Connecting rod	10	Cleaner, Pre-	19
Main	2, 4	Clutch:	
Main thrust	2, 4	Control, PTO	62
Bell crank, steering	106	Control, transmission	42
Belt, fan and alternator drive	24, 25, 140	Disk	41
Bevel gear, differential	50, 69, 70	Housing	40
Bevel pinion, differential	50, 69, 70	Pedal	42
Block, cylinder	2, 4	Pedal valve	44
Block, junction	95	Plate	41
Blockers, transmission	51	PTO	64
Body, engine oil filter	12	PTO, valve, lever, and linkage	62
Box, tool	134	Shaft	41
Bracket:		Transmission	41
Front axle pivot	106	Cold weather starting aid	137
Rear lamp	152	Connecting rod	10
Steering valve	76, 78	Connecting rod bearings	10
Brake:		Control:	
Accumulator	114, 116	Transmission shifter	56
Facings	112	Valve, pressure	93

ALPHABETICAL INDEX -- Continued

	Page		Page
Control -- Cont.		Muffler cover	138
Valve, selective	96, 97, 98	Valves	9
Valve, selective, oil pipes	101, 102	Valve rotators	9
Cooler:			F
Engine	14	Facing, brake	112
Hydraulic oil	90	Fan:	
Hydraulic oil, bypass valve	92	Belt	24, 25, 140
Countershaft, transmission	48	Pulley	24, 25
Coupler:		Shroud	22
Flexible oil line	103	Fenders	130, 135
Main pump drive	86	Filter:	
Cover:		Engine oil	12
Clutch inspection	40	Fuel	28
Dust, coupler	103	Transmission hydraulic oil	60
Engine oil filter	12	Final drive shaft and sun pinion	68
Exhaust muffler	138	Flexible oil line coupler	103
Protection	137	Fluid, starting	137
Rocker arm	7	Flywheel	11
Steering valve	76, 78	Follower, cam	9
Timing gear	2, 4	Foot speed control:	
Transmission	46	Arm	20
Crankshaft	11	Pedal	20
Cushion, seat	124	Rod	20
Cushion, seat back	124	Frame	84
Cylinder:		Plates	84
Block	2, 4	Seat	124
Head	7	Front axle	106
Head gasket set	7, 8	Front and rear lamps	150, 152
Liner	2, 4	Front wheels	108
Steering	82	Fuel:	
Steering valve	74	Filter	28
	D	Gauge	154
Damper, crankshaft	11	Gauge sender	26
Dash:		Injection nozzles	29, 36, 37
Assembly	128	Injection pipes	29
Lamp	154	Injection pump	29, 30, 32,
Support	128		34
Decals	157, 158	Pipes	26, 39
Deluxe seat	124	Tank	26
Deluxe seat support	126	Tank housing	130
Demountable rims	108, 109	Fuse holder	150
Differential:			G
Drive and bevel pinion shaft	50, 69, 70	Gasket, cylinder head	7, 8
Lock valve	71	Gasket sets:	
Lock valve linkage	71	Cylinder head replacement	8
Lock valve oil pipes	72	Oil pan replacement	6
Disk:		Gauge, fuel	154
Brake	112	Gauge, water temperature	154
Engine clutch	41	Gear:	
PTO clutch	64	Bevel, differential	50, 69, 70
Transmission synchronizer	51	Camshaft	9
Drawbar:		Crankshaft	11
Regular	104	Countershaft, transmission	48
Support	104	Oil pump drive	12
Drive:		PTO drive	64
Hydraulic pump	86	Shifters	52
Planetary	68	Shift lever	56
Speed-hour meter, gear	12	Shifter quadrants	56
Drum, transmission synchronizer	51	Shifter rod	54
	E	Speed-hour meter drive	12
Electrical outlet socket	150	Starter	144, 145
Element:		Transmission	51
Engine oil filter	12	Grille	129
Oil heating	137	Ground strap, battery	148
Transmission oil filter	60	Guard, PTO	66
Emblem, steering wheel	74		H
Engine oil cooler	14	Harness, wiring	248, 250
Engine oil pump	12	Head, cylinder	7
End, tie rod	106	Heater, oil	137
Exhaust:		Hood	128
Manifold	15		

	Page		Page
Pipes -- Cont.		Rods:	
Oil, brake	113	Connecting	10
Oil, brake piston	46	Gear shifter	54
Oil, differential lock	72	Push	9
Oil, main hydraulic	94	Rotators, exhaust valve	9
Oil, cooler	90		
Oil, selective control valve	101, 102		
Oil, steering	80, 81		
Piston:		S	
Brake accumulator	114, 116	Screener, Pre-	19
Engine	10	Seal, water pump	24, 25
Hydraulic pump	87	Sealant, loctite	138
Pin bushings	10	Seat:	
Pins	10	Back	124
Rings	10	Back cushion	124
Steering valve	74	Cushion	124
Pivot, bracket, front axle	106	Deluxe	124
Planet, pinion carrier	68	Support, deluxe	126
Planet pinion shaft	68	Selective control valve levers	100
Plate:		Selective control valve oil pipes	101, 102
Brake backing	112	Selective control valve	96, 98
Brake pressure	112	Sender, fuel gauge	26, 148
Frame	84	Shaft:	
Name	129	Clutch	41
PTO clutch drive	64	Differential drive and bevel pinion	50, 69, 70
Plates, synchronizer, transmission	51	Final drive	68
Pre-cleaner	19	Planet pinion	68
Pre-screener	19	PTO drive	64
Pressure control valve	92	PTO vertical	66
Pressure switch	154	Rear axle	68
Protection covers	137	Rocker arm	9
PTO:		Shifter	52
Clutch lever	62	Steering	74
Clutch linkage	62	Transmission drive	51
Clutch valve	62	Shield, PTO master	64
Drive gear	64	Shifter shafts	52
Drive shaft	64	Shifters, gear	52
Guard	66	Shock absorber, seat support	126
Master shield	64	Shroud, fan	22
Vertical	66	Sleeve, clutch release bearing	42
Pulley:		Socket, electrical outlet	150
Alternator	140, 141, 142	Special, oil, type 303	93
Crankshaft	11	Speed control linkage	20
Fan	24, 25	Speed-hour meter	154
Pump:		Speed-hour meter drive	12
Drive coupler	86	Springs, valve	9
Fuel	26, 39	Starter	144, 145, 148
Fuel injection	29, 30, 32,	Switch assembly	146
	34	Switch	148, 154
Oil, engine	12	Starting fluid	137
Oil, hydraulic, main	87	Steering:	
Oil, transmission	58	Cylinder	82
Ventilator	17	Oil pipes	80, 81
Water	24, 25	Valve assembly	74
Push rod	9	Valve cylinder	74
		Valve piston	74
		Wheel	74
		Wheel emblem	74
Q		Storage, off-season, kit	138
Quadrant, speed change	56	Strap, battery ground	148
Quadrant, speed range	56	Stroke control valve, hydraulic pump	88
		Support:	
R		Drawbar	104
Radiator	22	Hydraulic oil pump	86
Rear and front lamp	150, 152	Rear lamp	152
Rear axle housing	68	Switch:	
Rear axle shaft	68	Assembly, starter	146, 154
Rear wheels	109	Horn	148, 153, 154
Regular drawbar	104	Key	148, 154
Regulator, alternator	140, 148	Light	150, 154
Relief valve, oil filter	93	Oil pressure	148
Reservoir, hydraulic oil	91	Starter	148, 154
Rim, demountable	108, 109	Synchronizer, transmission:	
Rings, piston	10	Disks	51
Rocker arm cover	7	Drum	51
Rocker arms	9	Plates	51

