

John Deere


CLICK ANYWHERE FOR MORE DETAILS

MODEL:

6030

Volume 1 of 2

**PARTS
MANUAL**

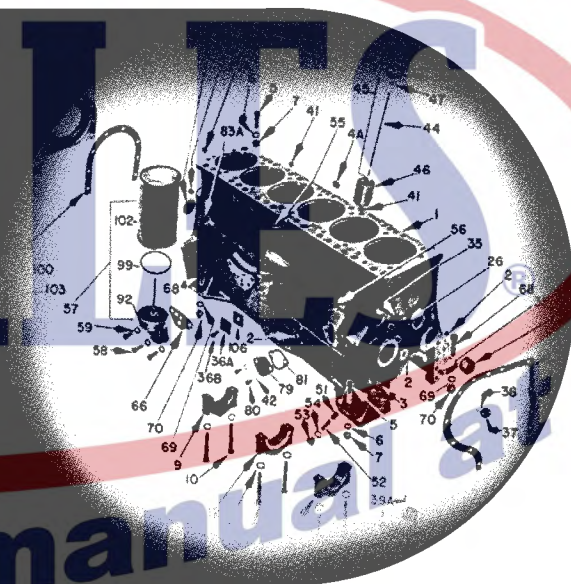

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-P-PC1290

CLICK ANYWHERE FOR MORE DETAILS

6030 Tractor

MANUAL PREVIEW

PARTS
CATALOG

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Waterloo Tractor Works
PC-1290

LITHO IN U.S.A. (REVISED)

CLICK ANYWHERE FOR MORE DETAILS



R0066

John Deere 6030 Row Crop Tractor

purchase full manual at

JENSALES.COM
or Call 800-443-0625

(Specifications and design subject to change without notice.)

CLICK ANYWHERE FOR MORE DETAILS

SECTIONAL INDEX

General	10
Engine	20
Fuel and Air	30
Electrical	40
Power Train	50
Steering and Brakes	60
Hydraulics	70
Wheels, Front Axles, Sheet Metal	80
Operator's Station	90
Numerical Index	95

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
	A			B	
3B14	ABSORBER, SHOCK, SEAT SUPPORT	90-16	2H21	AXLE, PIVOT BRACKET, FRONT	80-8
2D18	ACCUMULATOR	60-26	2C14	AXLE, REAR	50-46
2D19	ACCUMULATOR CHECK VALVE	60-27			
2G7	ADAPTER, IMPLEMENT QUIK-COUPLER	70-48			
1I10	ADAPTER, STARTING AID (6531A)	40-50			
1I12	ADAPTER, STARTING AID (6531A)	40-52			
1I11	ADAPTER, STARTING AID (6531D)	40-51			
1I13	ADAPTER, STARTING AID (6531D)	40-53			
2C3	ADAPTER, 1-3/8" PTO SHAFT	50-32			
2C2	ADAPTER, 1-3/8" PTO SHAFT (6531D)	50-31			
1D19	AIR CLEANER (6531A)	30-6			
1D17	AIR CLEANER (6531D)	30-4			
1D15	AIR INTAKE PIPE (6531A)	30-1			
1E1	AIR INTAKE PIPE (6531D)	30-10			
1D21	AIR STACK (6531D)	30-8			
1H1	ALTERNATOR	40-16			
1G16	ALTERNATOR (6531A)	40-8	3B12	BACK, SEAT	90-14
1G16	ALTERNATOR (6531A)	40-8	2I19	BAFFLE, HOOD	80-29
1G20	ALTERNATOR (6531A)	40-12	3C16	BASE, CONTROL SUPPORT	90-41
1H2	ALTERNATOR (6531A)	40-17	1G13	BATTERY	40-4
1H2	ALTERNATOR (6531A)	40-17	2I17	BATTERY BOX	80-27
1G18	ALTERNATOR (6531D)	40-10	1G10	BATTERY CABLES	40-1
1G18	ALTERNATOR (6531D)	40-10	2I17	BATTERY CLAMPS	80-27
1G22	ALTERNATOR (6531D)	40-14	1C1	BEARING, CONNECTING ROD (6531A)	20-28
1G22	ALTERNATOR (6531D)	40-14	1C2	BEARING, CONNECTING ROD (6531D)	20-29
1H3	ALTERNATOR (6531D)	40-18	1C5	BEARING, MAIN	20-32
1H3	ALTERNATOR (6531D)	40-18	1C5	BEARING, MAIN THRUST	20-32
1D3	ALTERNATOR BELT (6531A)	20-54	2H18	BELL CRANK, STEERING	80-4
1G16	ALTERNATOR BELT (6531A)	40-8	2H19	BELL CRANK, STEERING	80-6
1G20	ALTERNATOR BELT (6531A)	40-12	2H23	BELL CRANK, STEERING	80-9
1D5	ALTERNATOR BELT (6531D)	20-56	1D3	BELT, FAN AND ALTERNATOR DRIVE (6531A)	20-54
1G18	ALTERNATOR BELT (6531D)	40-10	1G16	BELT, FAN AND ALTERNATOR DRIVE (6531A)	40-8
1G22	ALTERNATOR BELT (6531D)	40-14	1G20	BELT, FAN AND ALTERNATOR DRIVE (6531A)	40-12
1I7	ALTERNATOR INDICATOR LAMP	40-46	1D5	BELT, FAN AND ALTERNATOR DRIVE (6531D)	20-56
1G16	ALTERNATOR MOUNTING BRACKET (6531A)	40-8	1G18	BELT, FAN AND ALTERNATOR DRIVE (6531D)	40-10
1G20	ALTERNATOR MOUNTING BRACKET (6531A)	40-12	1G22	BELT, FAN AND ALTERNATOR DRIVE (6531D)	40-14
1G18	ALTERNATOR MOUNTING BRACKET (6531D)	40-10	3B17	BELT, SEAT	90-20
1G22	ALTERNATOR MOUNTING BRACKET (6531D)	40-14	3B19	BELT, SEAT	90-22
1H1	ALTERNATOR PULLEY	40-16	2C7	BEVEL GEAR, DIFFERENTIAL	50-38
1G16	ALTERNATOR PULLEY (6531A)	40-8	2C9	BEVEL GEAR, DIFFERENTIAL	50-40
1G20	ALTERNATOR PULLEY (6531A)	40-12	2B11	BEVEL PINION, DIFFERENTIAL	50-17
1H2	ALTERNATOR PULLEY (6531A)	40-17	2C7	BEVEL PINION, DIFFERENTIAL	50-38
1G18	ALTERNATOR PULLEY (6531D)	40-10	2C9	BEVEL PINION, DIFFERENTIAL	50-40
1G22	ALTERNATOR PULLEY (6531D)	40-14	1B12	BLOCK, CYLINDER (6531A)	20-16
1H3	ALTERNATOR PULLEY (6531D)	40-18	1B14	BLOCK, CYLINDER (6531D)	20-18
1F11	ANEROID (6531A)	30-46	2G10	BLOCK, SWAY CONTROL	70-51
1F13	ANEROID CONTROL (6531A)	30-48	2B12	BLOCKERS, TRANSMISSION	50-18
1F20	ARM, FOOT SPEED CONTROL	30-56	2I17	BOX, BATTERY	80-27
2F8	ARM, LIFT	70-27	3C1	BOX, TOOL	90-26
2F16	ARM, LOAD CONTROL	70-36	3C3	BOX, TOOL	90-28
1B6	ARM, ROCKER (6531A)	20-10	3D3	BOX, TOOL	90-50
1B7	ARM, ROCKER (6531D)	20-11	1I23	BRACKET, FENDER	40-64
2F8	ARM, ROCKSHAFT CRANK	70-27	2H16	BRACKET, FRONT AXLE PIVOT	80-2
2B19	ARM, SPEED CHANGE SHIFTER	50-25	2H21	BRACKET, FRONT AXLE PIVOT	80-8
2B19	ARM, SPEED RANGE SHIFTER	50-25	2D4	BRACKET, STEERING VALVE	60-11
2H18	ARM, STEERING	80-4	2D18	BRAKE ACCUMULATOR	60-26
2H19	ARM, STEERING	80-6	2D19	BRAKE ACCUMULATOR	60-27
2H23	ARM, STEERING	80-9	2D12	BRAKE FACING	60-20
1H9	ARMATURE	40-24	2D16	BRAKE OIL PIPES	60-24
2E17	ATTENUATOR	70-14	2D14	BRAKE OVERHAUL KIT	60-22
2E21	ATTENUATOR INSTALLATION KIT	70-18	2D17	BRAKE PEDALS	60-25
1J8	AUXILIARY ELECTRICAL OUTLET, 7-TERMINAL	40-75	2D12	BRAKE PLATES	60-20
2H16	AXLE, FRONT	80-2	2D13	BRAKE VALVE	60-21
2H21	AXLE, FRONT	80-8	2B9	BRAKE, PISTON OIL PIPES	50-15
2H16	AXLE, PIVOT BRACKET, FRONT	80-2	2G15	BREAKAWAY COUPLER	70-56
			2G19	BREAKAWAY COUPLER (ISO)	70-60
			2G17	BREAKAWAY COUPLER OVERHAUL KIT	70-58
			1G14	BREAKER, CIRCUIT	40-6
			1H13	BREAKER, CIRCUIT (6531A)	40-28
			1H15	BREAKER, CIRCUIT (6531D)	40-30
			1J7	BREAKER, ELECTRICAL OUTLET CIRCUIT	40-74
			1C1	BUSHING, PISTON PIN (6531A)	20-28
			1C2	BUSHING, PISTON PIN (6531D)	20-29

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
	C				
3B1	CAB AIR COMPRESSOR WIRING	90-4	3B16	CANOPY	90-18
3B6	CAB BLOWER	90-9A	1E17	CAP, FUEL FILLER (6531A)	30-26
3B8	CAB BLOWER	90-10	1E19	CAP, FUEL FILLER (6531D)	30-28
3B4	CAB CIRCUIT BREAKER	90-7	1C21	CAP, RADIATOR (6531A)	20-50
3B10	CAB CIRCUIT BREAKER	90-12	1D1	CAP, RADIATOR (6531D)	20-52
3A20	CAB COMPRESSOR (6531A)	90-1	2F9	CAP, ROCKSHAFT CONTROL VALVE HOUSING	70-28
3A21	CAB COMPRESSOR (6531D)	90-2	2F7	CAP, TRANSMISSION REAR COVER	70-26
3A22	CAB COMPRESSOR CLUTCH	90-3	1I23	CAPACITOR, RADIO NOISE SUPPRESSOR	40-64
3A22	CAB COMPRESSOR COIL	90-3	2B8	CARRIER, CLUTCH RELEASE BEARING	50-14
3B5	CAB COMPRESSOR LINES	90-8	2C14	CARRIER, PLANET PINION	50-46
3B6	CAB CONDENSATE TRAY	90-9A	2B9	CASE, TRANSMISSION	50-15
3B3	CAB CONDENSER	90-6	2I3	CAST DISK WHEELS	80-11
3C9	CAB CONDENSER COVER	90-34	2G5	CENTER LINK	70-46
3B4	CAB CONDENSER FAN MOTOR	90-7	1F1	CHECK VALVE, FUEL	30-34
3B6	CAB CONSOLE FRONT COVER	90-9A	1I6	CIGAR LIGHTER	40-45
3B10	CAB CONTROL PANEL	90-12	1G14	CIRCUIT BREAKER	40-6
1I3	CAB DIMMER SWITCH	40-42	1H13	CIRCUIT BREAKER (6531A)	40-28
1I3	CAB DOME LIGHT	40-42	1H15	CIRCUIT BREAKER (6531D)	40-30
3C7	CAB DOOR	90-32	1J7	CIRCUIT BREAKER, ELECTRICAL OUTLET	40-74
3B5	CAB EVAPORATOR	90-8	1J9	CIRCUIT BREAKER, SUPPLEMENTARY WIRING	40-76
3C15	CAB FLOOR MAT	90-40	2I17	CLAMP, BATTERY	80-27
3C10	CAB GLASS	90-35	1D19	CLEANER, AIR	30-6
3B1	CAB HARNESS, WIRING	90-4	1D17	CLEANER, AIR (6531D)	30-4
3B11	CAB HEATER	90-13	2B3	CLUTCH	50-8
3B5	CAB HEATER AND HOSES	90-8	2C6	CLUTCH CONTROL, PTO	50-36
1H16	CAB LAMPS	40-32	2B3	CLUTCH DISK	50-8
1H18	CAB LAMPS	40-34	2A20	CLUTCH HOUSING	50-2
3B8	CAB MOTOR, BLOWER	90-10	2A22	CLUTCH HOUSING	50-4
2I21	CAB MOUNTING BRACKET	80-32	2B1	CLUTCH PEDAL	50-6
2I23	CAB MOUNTING BRACKET	80-34	2B3	CLUTCH PLATE	50-8
3C11	CAB PANELS, COWL	90-36	2B8	CLUTCH RELEASE	50-14
3C13	CAB PANELS, REAR FILLER	90-38	2B21	CLUTCH, PTO	50-28
3C14	CAB PANELS, REAR FILLER	90-39	2C1	CLUTCH, PTO (6531A)	50-30
3B10	CAB REAR CONSOLE COVER	90-12	2C2	CLUTCH, PTO (6531D)	50-31
3C18	CAB REAR VIEW MIRROR	90-43	2C4	CLUTCH, PTO, LEVER AND LINKAGE	50-34
3B3	CAB RECEIVER-DRYER	90-6	2C1	CLUTCH, SHAFT (6531A)	50-30
3C9	CAB ROOF	90-34	2C2	CLUTCH, SHAFT (6531D)	50-31
3C11	CAB SEALING BAFFLES	90-36	1H11	COIL, FIELD	40-26
3D7	CAB SEALING BAFFLES	90-54	1C1	CONNECTING ROD BEARINGS (6531A)	20-28
2I21	CAB STEP	80-32	1C2	CONNECTING ROD BEARINGS (6531D)	20-29
2I23	CAB STEP	80-34	1C1	CONNECTING RODS (6531A)	20-28
3C5	CAB STRUCTURE	90-30	1C2	CONNECTING RODS (6531D)	20-29
1H18	CAB TAIL LAMPS	40-34	3C21	CONSOLE, ROCKSHAFT AND SELECTIVE CONTROL	90-46
3D4	CAB TOOL BOX	90-51	3C16	CONTROL SUPPORT	90-41
3B8	CAB TRAY, CONDENSATE	90-10	1G14	CONTROL SUPPORT COVER	40-6
3C12	CAB UPHOLSTERING	90-37	2F16	CONTROL, LOAD	70-36
3C15	CAB UPHOLSTERING	90-40	2F18	CONTROL, ROCKSHAFT	70-38
1H18	CAB WARNING LAMPS	40-34	2B18	CONTROL, TRANSMISSION SHIFTER	50-24
1J2	CAB WASHER, WINDSHIELD	40-67	2H11	CONVERSION KIT, REMOTE CYLINDER	70-77
3C7	CAB WINDOW PANEL	90-32	1C17	COOLER, ENGINE OIL (6531A)	20-46
1J2	CAB WINDSHIELD WASHER	40-67	1C19	COOLER, ENGINE OIL (6531D)	20-48
1J1	CAB WINDSHIELD WIPER	40-66	2F1	COOLER, HYDRAULIC OIL (6531A)	70-20
3B1	CAB WIRING, AIR COMPRESSOR	90-4	2F3	COOLER, HYDRAULIC OIL (6531D)	70-22
1H16	CAB WIRING, LAMP	40-32	3B11	CORE, HEATER	90-13
2I21	CAB WIRING, LAMP	80-32	2B10	COUNTERSHAFT, TRANSMISSION	50-16
2I23	CAB WIRING, LAMP	80-34	2G15	COUPLER, BREAKAWAY	70-56
1G10	CABLE, BATTERY	40-1	2G19	COUPLER, BREAKAWAY (ISO)	70-60
2C4	CABLE, PTO CLUTCH CONTROL	50-34	2G18	COUPLER, FLEXIBLE OIL LINE	70-59
1I7	CABLE, SPEED-HOUR METER	40-46	2G7	COUPLER, IMPLEMENT QUICK	70-48
1I17	CABLE, WIRING	40-58	2E4	COUPLER, MAIN PUMP DRIVE (6531A)	70-1
2B8	CAM, CLUTCH RELEASE	50-14	2E5	COUPLER, MAIN PUMP DRIVE (6531D)	70-2
1B8	CAMSHAFT (6531A)	20-12	1E11	COUPLING, TURBOCHARGER	30-20
1B9	CAMSHAFT (6531D)	20-13	2H13	COUPLINGS, REUSABLE	70-79
1B8	CAMSHAFT GEAR (6531A)	20-12	1G14	COVER, CONTROL SUPPORT	40-6
1B9	CAMSHAFT GEAR (6531D)	20-13	1B1	COVER, CRANKCASE VENT (6531A)	20-4
			2G15	COVER, DUST, BREAKAWAY COUPLER	70-56
			2G18	COVER, DUST, BREAKAWAY COUPLER	70-59

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
	C				
3B1	CAB AIR COMPRESSOR WIRING	90-4	3B16	CANOPY	90-18
3B6	CAB BLOWER	90-9A	1E17	CAP, FUEL FILLER (6531A)	30-26
3B8	CAB BLOWER	90-10	1E19	CAP, FUEL FILLER (6531D)	30-28
3B4	CAB CIRCUIT BREAKER	90-7	1C21	CAP, RADIATOR (6531A)	20-50
3B10	CAB CIRCUIT BREAKER	90-12	1D1	CAP, RADIATOR (6531D)	20-52
3A20	CAB COMPRESSOR (6531A)	90-1	2F9	CAP, ROCKSHAFT CONTROL VALVE HOUSING	70-28
3A21	CAB COMPRESSOR (6531D)	90-2	2F7	CAP, TRANSMISSION REAR COVER	70-26
3A22	CAB COMPRESSOR CLUTCH	90-3	1I23	CAPACITOR, RADIO NOISE SUPPRESSOR	40-64
3A22	CAB COMPRESSOR COIL	90-3	2B8	CARRIER, CLUTCH RELEASE BEARING	50-14
3B5	CAB COMPRESSOR LINES	90-8	2C14	CARRIER, PLANET PINION	50-46
3B6	CAB CONDENSATE TRAY	90-9A	2B9	CASE, TRANSMISSION	50-15
3B3	CAB CONDENSER	90-6	2I3	CAST DISK WHEELS	80-11
3C9	CAB CONDENSER COVER	90-34	2G5	CENTER LINK	70-46
3B4	CAB CONDENSER FAN MOTOR	90-7	1F1	CHECK VALVE, FUEL	30-34
3B6	CAB CONSOLE FRONT COVER	90-9A	1I6	CIGAR LIGHTER	40-45
3B10	CAB CONTROL PANEL	90-12	1G14	CIRCUIT BREAKER	40-6
1I3	CAB DIMMER SWITCH	40-42	1H13	CIRCUIT BREAKER (6531A)	40-28
1I3	CAB DOME LIGHT	40-42	1H15	CIRCUIT BREAKER (6531D)	40-30
3C7	CAB DOOR	90-32	1J7	CIRCUIT BREAKER, ELECTRICAL OUTLET	40-74
3B5	CAB EVAPORATOR	90-8	1J9	CIRCUIT BREAKER, SUPPLEMENTARY WIRING	40-76
3C15	CAB FLOOR MAT	90-40	2I17	CLAMP, BATTERY	80-27
3C10	CAB GLASS	90-35	1D19	CLEANER, AIR	30-6
3B1	CAB HARNESS, WIRING	90-4	1D17	CLEANER, AIR (6531D)	30-4
3B11	CAB HEATER	90-13	2B3	CLUTCH	50-8
3B5	CAB HEATER AND HOSES	90-8	2O6	CLUTCH CONTROL, PTO	50-36
1H16	CAB LAMPS	40-32	2B3	CLUTCH DISK	50-8
1H18	CAB LAMPS	40-34	2A20	CLUTCH HOUSING	50-2
3B8	CAB MOTOR, BLOWER	90-10	2A22	CLUTCH HOUSING	50-4
2I21	CAB MOUNTING BRACKET	80-32	2B1	CLUTCH PEDAL	50-6
2I23	CAB MOUNTING BRACKET	80-34	2B3	CLUTCH PLATE	50-8
3C11	CAB PANELS, COWL	90-36	2B8	CLUTCH RELEASE	50-14
3C13	CAB PANELS, REAR FILLER	90-38	2B22	CLUTCH, PTO	50-28
3C14	CAB PANELS, REAR FILLER	90-39	2C1	CLUTCH, PTO (6531A)	50-30
3B10	CAB REAR CONSOLE COVER	90-12	2C2	CLUTCH, PTO (6531D)	50-31
3C18	CAB REAR VIEW MIRROR	90-43	2C4	CLUTCH, PTO, LEVER AND LINKAGE	50-34
3B3	CAB RECEIVER-DRYER	90-6	2C1	CLUTCH, SHAFT (6531A)	50-30
3C9	CAB ROOF	90-34	2C2	CLUTCH, SHAFT (6531D)	50-31
3C11	CAB SEALING BAFFLES	90-36	1H11	COIL, FIELD	40-26
3D7	CAB SEALING BAFFLES	90-54	1C1	CONNECTING ROD BEARINGS (6531A)	20-28
2I21	CAB STEP	80-32	1C2	CONNECTING ROD BEARINGS (6531D)	20-29
2I23	CAB STEP	80-34	1C1	CONNECTING RODS (6531A)	20-28
3C5	CAB STRUCTURE	90-30	1C2	CONNECTING RODS (6531D)	20-29
1H18	CAB TAIL LAMPS	40-34	3C21	CONSOLE, ROCKSHAFT AND SELECTIVE CONTROL	90-46
3D4	CAB TOOL BOX	90-51	3C16	CONTROL SUPPORT	90-41
3B8	CAB TRAY, CONDENSATE	90-10	1G14	CONTROL SUPPORT COVER	40-6
3C12	CAB UPHOLSTERING	90-37	2F16	CONTROL, LOAD	70-36
3C15	CAB UPHOLSTERING	90-40	2F18	CONTROL, ROCKSHAFT	70-38
1H18	CAB WARNING LAMPS	40-34	2B18	CONTROL, TRANSMISSION SHIFTER	50-24
1J2	CAB WASHER, WINDSHIELD	40-67	2H11	CONVERSION KIT, REMOTE CYLINDER	70-77
3C7	CAB WINDOW PANEL	90-32	1C17	COOLER, ENGINE OIL (6531A)	20-46
1J2	CAB WINDSHIELD WASHER	40-67	1C19	COOLER, ENGINE OIL (6531D)	20-48
1J1	CAB WINDSHIELD WIPER	40-66	2F1	COOLER, HYDRAULIC OIL (6531A)	70-20
3B1	CAB WIRING, AIR COMPRESSOR	90-4	2F3	COOLER, HYDRAULIC OIL (6531D)	70-22
1H16	CAB WIRING, LAMP	40-32	3B11	CORE, HEATER	90-13
2I21	CAB WIRING, LAMP	80-32	2B10	COUNTERSHAFT, TRANSMISSION	50-16
2I23	CAB WIRING, LAMP	80-34	2G15	COUPLER, BREAKAWAY	70-56
1G10	CABLE, BATTERY	40-1	2G19	COUPLER, BREAKAWAY (ISO)	70-60
2C4	CABLE, PTO CLUTCH CONTROL	50-34	2G18	COUPLER, FLEXIBLE OIL LINE	70-59
1I7	CABLE, SPEED-HOUR METER	40-46	2G7	COUPLER, IMPLEMENT QUIK	70-48
1I17	CABLE, WIRING	40-58	2E4	COUPLER, MAIN PUMP DRIVE (6531A)	70-1
2B8	CAM, CLUTCH RELEASE	50-14	2E5	COUPLER, MAIN PUMP DRIVE (6531D)	70-2
1B8	CAMSHAFT (6531A)	20-12	1E11	COUPLING, TURBOCHARGER	30-20
1B9	CAMSHAFT (6531D)	20-13	2H13	COUPLINGS, REUSABLE	70-79
1B8	CAMSHAFT GEAR (6531A)	20-12	1G14	COVER, CONTROL SUPPORT	40-6
1B9	CAMSHAFT GEAR (6531D)	20-13	1B1	COVER, CRANKCASE VENT (6531A)	20-4
			2G15	COVER, DUST, BREAKAWAY COUPLER	70-56
			2G18	COVER, DUST, BREAKAWAY COUPLER	70-59

1E22	FILTER, FUEL (6531D)	30-32
2B21	FILTER, TRANSMISSION HYDRAULIC OIL	50-26
2C14	FINAL DRIVE SHAFT AND SUN PINION	50-46
2H21	FIXED TREAD FRONT AXLE	80-8
1G10	FLASHER, WARNING LAMP	40-1
2G18	FLEXIBLE OIL LINE COUPLER	70-59
2H13	FLEXIBLE OIL LINE, BULK	70-79
1110	FLUID, STARTING (6531A)	40-50
1112	FLUID, STARTING (6531A)	40-52
1111	FLUID, STARTING (6531D)	40-51
1113	FLUID, STARTING (6531D)	40-53
1C3	FLYWHEEL (6531A)	20-30
1C4	FLYWHEEL (6531D)	20-31
1B6	FOLLOWER, CAM (6531A)	20-10
1B7	FOLLOWER, CAM (6531D)	20-11
1F20	FOOT SPEED CONTROL LINKAGE	30-56
219	FRAME (6531A)	80-18
2111	FRAME (6531D)	80-20
2H16	FRONT AXLE HOUSING	80-2
2H16	FRONT AXLE KNEE	80-2
2H21	FRONT AXLE, FIXED TREAD	80-8
1G11	FRONT LAMPS	40-2
1G12	FRONT LAMPS	40-3
1H19	FRONT LAMPS	40-36
1H21	FRONT LAMPS	40-38
2118	FRONT PLATE	80-28
2113	FRONT WEIGHTS	80-22
2114	FRONT WEIGHTS	80-23
2115	FRONT WEIGHTS	80-24
211	FRONT WHEELS	80-10
1F1	FUEL CHECK VALVE	30-34
1E21	FUEL FILTER (6531A)	30-30
1E22	FUEL FILTER (6531D)	30-32
117	FUEL GAUGE	40-46
1E17	FUEL GAUGE SENDER (6531A)	30-26
1E19	FUEL GAUGE SENDER (6531D)	30-28
1F2	FUEL INJECTION NOZZLE (6531A)	30-36
1F16	FUEL INJECTION NOZZLE (6531A)	30-52
1F4	FUEL INJECTION NOZZLE (6531D)	30-38
1F17	FUEL INJECTION NOZZLE (6531D)	30-53
1F2	FUEL INJECTION PIPES (6531A)	30-36
1F4	FUEL INJECTION PIPES (6531D)	30-38
1F2	FUEL INJECTION PUMP (6531A)	30-36
1F6	FUEL INJECTION PUMP (6531A)	30-40
1F8	FUEL INJECTION PUMP (6531A)	30-42
1F11	FUEL INJECTION PUMP (6531A)	30-46
1F15	FUEL INJECTION PUMP (6531A)	30-50
1F4	FUEL INJECTION PUMP (6531D)	30-38
1G1	FUEL INJECTION PUMP (6531D)	30-58
1G3	FUEL INJECTION PUMP (6531D)	30-60
1G4	FUEL INJECTION PUMP (6531D)	30-61
1G5	FUEL INJECTION PUMP (6531D)	30-62
1G3	FUEL INJECTION PUMP DRIVE SHAFT (6531D)	30-60
1G3	FUEL INJECTION PUMP DRIVE SHAFT (6531D)	30-60
1D9	GASKET SET, ENGINE OVERHAUL (6531A)	20-60
1D11	GASKET SET, ENGINE OVERHAUL (6531D)	20-62
1A21	GASKET, CYLINDER HEAD (6531A)	20-2
1A22	GASKET, CYLINDER HEAD (6531D)	20-3
1B1	GASKET, ROCKER ARM COVER (6531A)	20-4
1B3	GASKET, ROCKER ARM COVER (6531D)	20-6
117	GAUGE, FUEL	40-46
117	GAUGE, WATER TEMPERATURE	40-46
2B19	GEAR SHIFT RODS	50-25A
2B17	GEAR SHIFTERS	50-23
2C7	GEAR, BEVEL, DIFFERENTIAL	50-38
2C9	GEAR, BEVEL, DIFFERENTIAL	50-40
1B8	GEAR, CAMSHAFT (6531A)	20-12
1B9	GEAR, CAMSHAFT (6531D)	20-13
2B10	GEAR, COUNTERSHAFT, TRANSMISSION	50-16
1C3	GEAR, CRANKSHAFT (6531A)	20-30
1C4	GEAR, CRANKSHAFT (6531D)	20-31
1C10	GEAR, OIL PUMP DRIVE (6531A)	20-38
1C12	GEAR, OIL PUMP DRIVE (6531D)	20-40
2B22	GEAR, PTO DRIVE	50-28
1B11	GEAR, SPEED-HOUR METER DRIVE (6531D)	20-15
1C3	GEAR, STARTER (6531A)	20-30
1C4	GEAR, STARTER (6531D)	20-31
1C10	GEARS, ENGINE OIL PUMP (6531A)	20-38
1C12	GEARS, ENGINE OIL PUMP (6531D)	20-40
2F14	GEARS, ROCKSHAFT CONTROL VALVE	70-34
2B11	GEARS, TRANSMISSION	50-17
2B5	GEARS, TRANSMISSION OIL PUMP	50-10
2B18	GEARSHIFT LEVER	50-24
1F8	GOVERNOR, FUEL INJECTION PUMP (6531A)	30-42
1G3	GOVERNOR, FUEL INJECTION PUMP (6531D)	30-60
2118	GRILLE	80-28
1G10	GROUND CABLE, STARTER	40-1
2C3	GUARD, PTO	50-32
2C1	GUARD, PTO (6531A)	50-30
2C2	GUARD, PTO (6531D)	50-31
1E3	GUN, ELEMENT CLEANING	30-12
H		
1F13	HAND SPEED CONTROL LINKAGE	30-54
2G5	HANDLE, CENTER LINK ADJUSTING	70-46
2G1	HANDLE, LIFT LINK ADJUSTING	70-42
2G7	HANDLE, LIFT LINK ADJUSTING	70-48
2119	HANDLE, TRACTOR MOUNTING	80-29
3C20	HANDLE, TRACTOR MOUNTING	90-45
1G10	HARNES, WIRING	40-1
1J9	HARNES, WIRING, SUPPLEMENTARY WIRING KIT	40-76
1G1	HEAD AND ROTOR, INJECTION PUMP (6531D)	30-58
1A21	HEAD, CYLINDER (6531A)	20-2

1E17 FUEL PIPE (6531A).....	30-26	3B11 HEATER, CAB.....	90-13
1E19 FUEL PIPE (6531D).....	30-28	2G5 HITCH, 3-POINT, CENTER LINK.....	70-46
TRACTOR - 6030 PC-1290 (08-AUG-79) LITHO IN U.S.A.			10-11