

John Deere

CLICK ANYWHERE FOR MORE DETAILS

MODEL:

6600 Combine

Volume 1 of 2

**PARTS
MANUAL**



JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-P-PC1166

CLICK ANYWHERE FOR MORE DETAILS

**6600
Combine**

MANUAL PREVIEW

JENSALES

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

John Deere Harvester Works

PC-1166

LITHO IN U.S.A. (REVISED)

HP1568

CLICK ANYWHERE FOR MORE DETAILS



JOHN DEERE 6600 COMBINE WITH 653 ROW-CROP HEAD
(MANUFACTURED 1970-1978)

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

SECTIONAL INDEX

SECTION		SECTION	
GENERAL INFORMATION	1	SEPARATOR SHEETS, CROSS BRACE, CURTAINS, LADDER, AND REAR HOOD	50
BASIC ENGINE - DH	5	PRIMARY AND SECONDARY COUNTERSHAFTS, CYLINDER DRIVE INTERMEDIATE SHAFT, AND SEPARATOR AND UNLOADING AUGER DRIVE BELT GUIDES	55
BASIC ENGINE - TH	6	ROTARY DEFLECTOR, CYLINDERS AND CONCAVES	60
FUEL LINES, FILTERS, AND TANKS	7	SHOE GRAIN SUPPLY AUGERS, HOUSING, DRIVE SHAFT AND GEARS	65
RADIATOR, COUNTERSHAFT, AND ROTARY SCREEN	8	CLEANING FAN, AIR DUCTS, AND SHIELD	70
ENGINE AIR CLEANERS, MUFFLERS, SUPPORTS, ALTERNATOR, BATTERY AND POWERSHAFT	9	SHOE AND STRAW WALKERS	75
FEEDER HOUSE	10	STRAW CHOPPER AND SPREADER	80
DRIVE WHEELS, AXLE, AND AXLE DRIVE TRAIN, PROPULSION DRIVE COUNTER- SHAFT, SHEAVE, AND SHIELD	15	ELEVATORS AND AUGERS	85
REAR WHEELS, SUPPORTS, AND STEERING TIE RODS	20	GRAIN TANK AND AUGERS	90
OPERATOR'S PLATFORM, LADDER, AND ENGINE COMPARTMENT	25	IDLERS AND TIGHTENERS	100
OPERATOR'S CAB, AIR CONDITIONER, AND HEATER	30	BELTS-CHAINS, SHEAVES, SPROCKETS AND TIGHTENERS ON RIGHT AND LEFT-HAND SIDE	105
CONTROLS ON OPERATOR'S PLATFORM	35	DECALS	110
ELECTRICAL SYSTEM	40	NUMERICAL INDEX	115
HYDRAULIC SYSTEM	45		

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
A					
3F10	ACTUATOR SWITCH AND MOUNTING	40-47	4E3	AUGER, DIP AND POUR ELEVATOR, LOWER	85-19
3F4	ACTUATOR, LOW SHAFT SPEED INDICATOR	40-41	4E18	AUGER, GRAIN TANK AUXILIARY UNLOADING	90-10
3F5	ACTUATOR, LOW SHAFT SPEED INDICATOR	40-42	4D19	AUGER, GRAIN TANK LOADING AND EXTENSION	85-10
1119	ADJUSTING STRAP, ALTERNATOR	6-59	4D21	AUGER, GRAIN TANK LOADING AND EXTENSION	85-12
2C15	AID, STARTING, COLD WEATHER	9-6	4E4	AUGER, GRAIN TANK LOADING, DIP AND POUR ELEVATOR	85-20
2C18	AIR CLEANER	9-9	4E20	AUGER, INNER UNLOADING	90-12
2C19	AIR CLEANER	9-10	4D13	AUGER, LOWER TAILINGS	85-3
3B15	AIR CONDITIONER	30-14	4E24	AUGER, OUTER UNLOADING	90-17
3B25	AIR CONDITIONER	30-24	4D14	AUGER, UPPER TAILINGS	85-5
3B17	AIR CONDITIONER COMPRESSOR	30-16	4B23	AUGERS HOUSING, SHOE GRAIN SUPPLY	65-5
3B23	AIR CONDITIONER COMPRESSOR MOUNTING	30-22	4B19	AUGERS, SHOE GRAIN SUPPLY	65-1
3B24	AIR CONDITIONER COMPRESSOR MOUNTING	30-23	1F1	AUTOMATIC ADVANCE, FUEL INJECTION PUMP	5-102
3B23	AIR CONDITIONER COMPRESSOR SUPPORTS	30-22	1F5	AUTOMATIC ADVANCE, FUEL INJECTION PUMP	5-106
3B24	AIR CONDITIONER COMPRESSOR SUPPORTS	30-23	3K16	AUTOMATIC HYD. LATCH SWING CYLINDER	45-117
3C1	AIR CONDITIONER CONDENSER EVAPORATOR	30-25	3K18	AUTOMATIC HYDRAULIC LATCH CYLINDER	45-119
3B11	AIR CONDITIONER CONDENSER HOUSING	30-10	3K19	AUTOMATIC HYDRAULIC LATCH CYLINDER	45-120
3C2	AIR CONDITIONER LINES	30-26	3K17	AUTOMATIC HYDRAULIC LATCH SWING CYLINDER	45-118
3C4	AIR CONDITIONER LINES	30-28	3K18	AUTOMATIC HYDRAULIC LATCH SWITCH	45-119
3B15	AIR CONDITIONER RECIRCULATOR FILTER	30-14	3C18	AUX. UNLOAD. AUGER, HYD. DR. CONTROL	35-10
3B12	AIR CONDITIONER, CAB AIR INTAKE	30-11	4G6	AUX. UNLOADING AUGER DRIVE TIGHTENERS	100-28
3B13	AIR CONDITIONER, CAB AIR INTAKE	30-12	311	AUX. UNLOADING AUGER HYD. DR. MOTOR	45-48
3E6	AIR CONDITIONER, WIRING ON ENGINE	40-16	313	AUX. UNLOADING AUGER HYD. DR. SELECTOR VALVE	45-50
3C6	AIR CONDITIONING - KIT, O-RING	30-30	2B7	AUXILIARY FUEL TANK AND LINES (SIDEHILL)	7-6
3E8	AIR CONDITIONING WIRING ON ENGINE	40-18	4E18	AUXILIARY UNLOADING AUGER	90-10
4C4	AIR DUCTS, CLEANING FAN	70-3	312	AUXILIARY UNLOADING AUGER DRIVE MOTOR SUPPORT	45-49
4C6	AIR DUCTS, CLEANING FAN	70-6	315	AUXILIARY UNLOADING AUGER HYDRAULIC DRIVE OIL LINES	45-52
1B24	AIR INTAKE MANIFOLD	5-20	314	AUXILIARY UNLOADING AUGER HYDRAULIC DRIVE SELECTOR VALVE SUPPORT	45-51
2C22	AIR INTAKE TUBES	9-13	2G13	AXLE SPACERS	15-4
2C23	AIR INTAKE TUBES	9-14	2G12	AXLE, DRIVE WHEEL	15-3
2C20	AIR INTAKE TUBES (AIR CLEANER)	9-11	219	AXLE, DRIVE WHEEL (SH)	15-52
2C21	AIR INTAKE TUBES (AIR CLEANER)	9-12	2G24	AXLE, FINAL DRIVE	15-17
2C24	AIR INTAKE TUBES (AIR CLNR. TO MANIFOLD)	9-15	2111	AXLE, FINAL DRIVE, GEAR, AND BRGS. (SH)	15-54
3B14	AIR INTAKE-REAR OF OPERATOR'S CAB	30-13	2118	AXLE, REAR	20-4
2C20	AIR PRE-CLEANER	9-11	2121	AXLE, REAR	20-7
1C4	AIRTEX FUEL TRANSFER PUMP ASSEMBLY	5-25	2125	AXLE, REAR	20-11
2D2	ALTERNATOR	9-18	2J1	AXLE, REAR	20-12
1119	ALTERNATOR ADJUSTING STRAP	6-59	2J2	AXLE, REAR	20-13
1F20	ALTERNATOR BRACKETS	5-122	2118	AXLE, REAR 'T' WEIGHT	20-4
1119	ALTERNATOR BRACKETS	6-59	2119	AXLE, REAR, FRAME AND SUPPORT	20-5
3D14	ALTERNATOR INDICATOR LIGHT	35-32	2120	AXLE, REAR, HOUSING AND KNEE	20-6
1C24	ALTERNATOR SUPPORTS, FRONT AND REAR	5-46	B		
3F13	AMPLIFIER - CONVERSION TO DIAL-A-MATIC	40-50	4B16	BANK SYSTEM, LUBE, L.H. SIDE	60-16
3F13	AMPLIFIER AND CIRCUIT BOX - CONVERSION TO DIAL-A-MATIC	40-50	4B17	BANK SYSTEM, LUBE, R.H. SIDE	60-17
3E20	ANTENNA, RADIO	40-31	4B6	BAR, CYLINDER SHEAR	60-6
3E21	ANTENNA, RADIO	40-32	4C9	BAR, FINGER, CHAFFER FRAME	75-2
3E22	ANTENNA, RADIO	40-33	4B7	BAR, RASP	60-7
3E23	ANTENNA, RADIO	40-34	2D4	BATTERY, BRACKETS, CABLES, AND SHIELDS	9-20
3E24	ANTENNA, RADIO	40-35	4C15	BEARING BLOCK, STRAW WALKER	75-8
2F19	ARM, FH VAR. DR. MIDDLE BELT TIGHTNR-SH	10-62	1B16	BEARING, MAIN	5-12
2F18	ARM, IDLER, FDR. HSE. LOWER BELT TIGHTNR-SH	10-61	1H2	BEARING, MAIN	6-13
1C22	ARMATURE ASSEMBLY, STARTER MOTOR	5-44	1H2	BEARING, MAIN THRUST	6-13
1F21	ARMATURE, STARTER	5-123	2H1	BEARINGS AND FINAL DRIVE PINION	15-18
1F22	ARMATURE, STARTER	5-124	2G24	BEARINGS, FINAL DRIVE	15-17
1G3	ARMATURE, STARTER	5-130	1D15	BEARINGS, MAIN	5-64
1110	ARMATURE, STARTER	6-48	1D15	BEARINGS, MAIN THRUST	5-64
1114	ARMATURE, STARTER	6-53	4B13	BEATER GRATE (CONVERSION)	60-13
2J18	ARMREST	25-15	2124	BELL CRANK, TIE RODS, AND STEERING ARMS	20-10
1D20	ARMS, ROCKER	5-69	2F19	BELT TIGHTENER, FDR. HSE. SH-CONVEYOR TYPE	10-62
1H6	ARMS, ROCKER	6-17	2B13	BELT, RADIATOR FAN	8-3
2J10	ASH TRAY	25-6			
4F1	AUGER AND HOUSING, OUTER UNLOADING	90-18			
3F14	AUGER LATCH WIRING HARNESS	40-51			
3H20	AUGER SWING CONTROL VALVE, UNLOADING	45-41			
4D18	AUGER, CLEAN GRAIN	85-9			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2F14	BELT,FDR.HSE.LOWER SHEAVE-SH-CONV.TYPE	10-57	3B15	CAB ROOF RECIRCULATING FILTERS	30-14
2F15	BELT,FEEDER HOUSE LOWER SHEAVES-SH-CONV.	10-50	3E5	CAB, OPERATOR'S, ELECTRICAL WIRING	40-15
4H2	BELTS, DRIVE, DIP AND POUR ELEVATOR	105-16	3D12	CABLE, ENGINE TACH-HOUR METER	35-29
4G24	BELTS, DRIVE, L.H. SIDE	105-13	3C23	CABLE, GEARSHIFT	35-15
4G14	BELTS, DRIVE, R.H. SIDE	105-2	3C12	CABLE, GROUND SPEED INDICATOR	35-3
4H4	BELTS, DRIVE, ROTARY SCREEN	105-18	3C14	CABLE, GROUND SPEED INDICATOR	35-5
4H5	BELTS, DRIVE, ROTARY SCREEN	105-19	3C19	CABLE, PARKING BRAKE	35-11
3B25	BLADE, AIR CONDITIONER FAN	30-24	3D4	CABLE, UNLOADING AUGER DRIVE	35-21
4C3	BLADE, CLEANING FAN	70-2	3D11	CABLE, VAR. SPEED CYL. TACHOMETER	35-28
4C24	BLADE, STRAW CHOPPER	80-8	3F15	CABLE, WIRING	40-52
4D2	BLADE, STRAW SPREADER	80-11	2F2	CABLES, PLATFORM LEVELING (SH)	10-45
4C23	BLADES AND ROD, STRAW CHOPPER	80-7	2G4	CABLES,HEADER LEVELING,L.H.-SH-CONV.	10-72
3K10	BLOCK, CHECK (AUTO HEIGHT)	45-110	1B18	CAMSHAFT	5-14
3J22	BLOCK, CHECK (SH)	45-95	1D19	CAMSHAFT	5-68
1B10	BLOCK, CYLINDER	5-6	1H5	CAMSHAFT	6-16
1D6	BLOCK, CYLINDER	5-54	1H5	CAMSHAFT GEAR	6-16
1G16	BLOCK, CYLINDER	6-2	3E21	CAPACITOR, RADIO	40-32
3J7	BLOCK, CYLINDER, MOTOR	45-80	3E22	CAPACITOR, RADIO	40-33
1G16	BLOCK, SHORT	6-2	3E23	CAPACITOR, RADIO	40-34
3J20	BLOCK, VALVE, MAIN (SH)	45-93	3E24	CAPACITOR, RADIO	40-35
2G4	BLOCK,CABLE,HDR.LEVELING,L.H.-SH-CONV.	10-72	1B16	CAPS, MAIN BEARING	5-12
2F12	BOTTOM,FALSE,FEEDER HOUSE-SH-CONVEYOR	10-55	3J9	CARRIER, COVER, AND PLANET PINION	45-82
3F9	BOX AND LEAD, LEVELING CONTROL (SH)	40-46	1H19	CENTER HOUSING, TURBOCHARGER	6-31
3F5	BOX CONTROL, LOW SHAFT SPEED INDICATOR	40-42	1H22	CENTER HOUSING, TURBOCHARGER	6-34
3F4	BOX, CONTROL, LOW SHAFT SPEED INDICATOR	40-41	2E23	CENTER PADDLES-PADDLE FDR. HSE. (SH)	10-41
3L7	BOX, TOOL	50-12	2E23	CENTER SHAFTS FOR PADDLE FDR. HSE. (SH)	10-41
2G2	BRACE,FEEDER HOUSE,R.H.-SH-CONVEYOR	10-70	2E23	CENTER SPROCKETS-PADDLE FDR. HSE. (SH)	10-41
3B3	BRACKET, MIRROR, L.H.	30-1	4C12	CHAFFER AND SIEVE	75-5
2G3	BRACKET,FDR.CONVEYOR DRIVE-SH-CONV.	10-71	4C9	CHAFFER FRAME, UPPER SHOE	75-2
2F22	BRACKET,FDR.CONVEYOR IDLER SHAFT-SH-CONV.	10-65	2E8	CHAIN, CONVEYOR, FEEDER	10-25
2F10	BRACKET,FDR.HSE.BOTTOM SHEETS-SH-CONV.	10-53	2F23	CHAIN, CONVEYOR, FEEDER-SH-CONVEYOR TYPE	10-66
2F15	BRACKET,FDR.HSE.LOWER SHEAVES-SH-CONV.	10-58	2E7	CHAIN, FEEDER CONVEYOR	10-23
2F12	BRACKET,FDR.HSE.SIDE SHEETS-SH-CONV.	10-55	2G3	CHAIN,DRIVE,FDR.CONVEYOR-SH-CONV.	10-71
2F8	BRACKET,FDR.HSE.TOP SHEETS-SH-CONV.TYPE	10-51	2F14	CHAIN,FDR.HSE.LOWER SPROCKET-SH-CONVEYOR	10-57
2F25	BRACKET,FEEDER HOUSE RH SHIELD-SH-CONV.	10-68	2F21	CHAIN,FEEDER HOUSE LOWER SHAFT-SH-CONV.	10-64
2G2	BRACKET,FEEDER HOUSE,R.H.-SH-CONVEYOR	10-70	2F24	CHAIN,FEEDER HOUSE UPPER SHAFT-SH-CONV.	10-67
2F21	BRACKET,FEEDER HS. LOWER SHAFT-SH-CONV.	10-64	4G16	CHAINS, DRIVE, DIP AND POUR ELEVATOR	105-4
2F19	BRACKET,FH VAR.DR.MIDDLE BELT TIGHTNR-SH	10-62	4G20	CHAINS, DRIVE, L.H. SIDE	105-8
2G4	BRACKET,HDR.LEVELING,L.H.-SH-CONV.	10-72	4H9	CHAINS, FEEDER HOUSE, ON R.H. SIDE (SH)	105-23
1F20	BRACKETS, ALTERNATOR	5-122	2G2	CHAINS,FEEDER HOUSE,R.H.-SH-CONV.	10-70
1I19	BRACKETS, ALTERNATOR	6-59	3K10	CHECK BLOCK (AUTO HEIGHT)	45-110
3J25	BRACKETS, PIVOT, LEVELING CYLINDER (SH)	45-99	3J22	CHECK BLOCK (SH)	45-95
3J8	BRAKE PLATES	45-81	3C25	CHOKE CONTROL	35-17
3H11	BRAKE, LINES	45-32	4C18	CHOPPER, STRAW	80-1
3H10	BRAKE, MASTER CYLINDER	45-31	4C19	CHOPPER, STRAW	80-2
2H17	BRAKE, PARKING	15-34	4C22	CHOPPER, STRAW	80-6
3C21	BRAKE, PEDALS	35-13	4C23	CHOPPER, STRAW	80-7
2H17	BRAKE, SHOES AND DRUM	15-34	3D14	CIGARETTE LIGHTER	35-32
3H9	BRAKE, SLAVE CYLINDER	45-30	3F13	CIRCUIT BOX - CONVERSION TO DIAL-A-MATIC	40-50
3D20	BREAKER, CIRCUIT	40-2	3F13	CIRCUIT BOX AND AMPLIFIER - CONVERSION TO DIAL-A-MATIC	40-50
4D12	BRGS. AND SPROCKETS, TAILINGS ELEVATOR	85-2	3D20	CIRCUIT BREAKER	40-2
4D17	BUCKET, CLEAN GRAIN ELEVATOR	85-8	2F21	CLAMP,FDR.HSE.LOWER SHAFT-SH-CONVEYOR	10-64
4E2	BUCKET, DIP AND POUR ELEVATOR	85-18	4D18	CLEAN GRAIN AUGER AND HOUSING	85-9
4D12	BUCKET, TAILINGS ELEVATOR	85-2	4D17	CLEAN GRAIN ELEVATOR BUCKET	85-8
3C15	BULB	35-6	4D17	CLEAN GRAIN ELEVATOR CONVEYOR CHAIN	85-8
3D14	BULB	35-32	4G1	CLEAN GRAIN ELEVATOR DRIVE IDLER	100-23
3D20	BULB	40-2	4F25	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER	100-22
3E1	BULB	40-10	4D17	CLEAN GRAIN ELEVATOR, BUCKET	85-8
3E16	BULB	40-27	4D17	CLEAN GRAIN ELEVATOR, CONVEYOR CHAIN	85-8
3F4	BULB	40-41	4D15	CLEAN GRAIN ELEVATOR, DOOR	85-6
1E1	BYPASS VALVE, OIL COOLER	5-76	4D15	CLEAN GRAIN ELEVATOR, HOUSING	85-6
			4D17	CLEAN GRAIN ELEVATOR, PADDLE	85-8
			4D18	CLEAN GRAIN LOWER AUGER AND HOUSING	85-9
			2C18	CLEANER, AIR	9-9
			2C19	CLEANER, AIR	9-10
			4C2	CLEANING FAN AND HOUSING	70-1

C

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4C3	CLEANING FAN AND HOUSING	70-2	3C21	CONTROLS, BRAKE, FOOT	35-13
4C4	CLEANING FAN AND HOUSING	70-3	3C19	CONTROLS, BRAKE, PARKING	35-11
4C6	CLEANING FAN AND HOUSING	70-6	3D3	CONTROLS, CLUTCH	35-20
3L14	CLEANING FAN DRIVE ADJUSTMENT	55-6	3D7	CONTROLS, CONCAVE	35-24
2F18	CLEVIS,FDR.HSE.LOWER BELT TIGHTENER-SH	10-61	3D1	CONTROLS, DIESEL THROTTLE	35-18
2F20	CLEVIS,FH VAR.DRIVE SHEAVE CTL-SH-CONV.	10-63	3D11	CONTROLS, ENGINE TACH-HOUR METER	35-28
2F22	CLIP,FDR.CONVEYOR IDLER SHAFT-SH-CONV.	10-65	3C10	CONTROLS, FLOAT SPRING INDICATOR	35-1
2F10	CLIP,FDR.HSE.BOTTOM SHEETS-SH-CONVEYOR	10-53	3C12	CONTROLS, FLOAT SPRING INDICATOR	35-3
2G1	CLIP,FDR.HSE.LH SHIELD-SH-CONV.TYPE	10-69	3C13	CONTROLS, FLOAT SPRING INDICATOR	35-4
2F12	CLIP,FEEDER HOUSE FRAME-SH-CONV.TYPE	10-55	3C14	CONTROLS, FLOAT SPRING INDICATOR	35-5
2F12	CLIP,FEEDER HOUSE SIDE SHEETS-SH-CONV.	10-55	3C23	CONTROLS, GEARSHIFT	35-15
2F8	CLIP,FEEDER HOUSE TOP SHEETS-SH-CONV.	10-51	3C18	CONTROLS, GROUND SPEED	35-10
2J22	CLOSURE, ENGINE POWERSHAFT	25-19	3C10	CONTROLS, GROUND SPEED INDICATOR	35-1
2F6	CLOSURE,INNER,FEEDER HOUSE-SH-CONV.TYPE	10-49	3C11	CONTROLS, GROUND SPEED INDICATOR	35-2
2F6	CLOSURE,OUTER,FEEDER HOUSE-SH-CONV.TYPE	10-49	3C12	CONTROLS, GROUND SPEED INDICATOR	35-3
2H14	CLUTCH AND SHAFT, DRIVE WHEEL	15-31	3D10	CONTROLS, HYDRAULIC AUGER SWING	35-27
3D3	CLUTCH PEDAL AND LINKAGE	35-20	3C20	CONTROLS, HYDROSTATIC DRIVE	35-12
4E19	CLUTCH, AUXILIARY UNLOADING AUGERS	90-11	3D10	CONTROLS, HYDROSTATIC DRIVE REEL	35-27
3H8	CLUTCH, DRIVE WHEEL CYLINDERS	45-29	3D13	CONTROLS, LADDER, PIVOTING	35-31
3B17	CLUTCH, ELECTROMAGNETIC	30-16	3D3	CONTROLS, OIL PRESSURE GAUGE TUBE	35-20
4D13	CLUTCH, LOWER TAILINGS AUGER SLIP	85-3	3C17	CONTROLS, PLATFORM LIFT	35-9
3D3	CLUTCH, PEDAL, DRIVE WHEEL	35-20	3C17	CONTROLS, REEL, HYDRAULIC LIFT	35-9
3E18	CLUTCH, PLATFORM ELECTROMAGNETIC	40-29	3D5	CONTROLS, SEPARATOR DRIVE	35-22
4C13	CLUTCH, STRAW WLKR, FRONT SLIP	75-6	3C15	CONTROLS, STEERING COLUMN AND WHEEL	35-6
1C23	COIL ASSEMBLY, STARTING MOTOR	5-45	3C24	CONTROLS, THROTTLE	35-16
1G6	COIL STARTER	5-133	3C25	CONTROLS, THROTTLE	35-17
1F23	COIL, STARTER	5-125	3D4	CONTROLS, UNLOADING AUGER DRIVE	35-21
1F24	COIL, STARTER	5-126	3D10	CONTROLS, UNLOADING AUGER SWING	35-27
1I11	COIL, STARTER	6-49	3L14	CONTROLS, VARIABLE SPEED CLEANING FAN	55-6
1I15	COIL, STARTER	6-54	3D8	CONTROLS, VARIABLE SPEED CYLINDER	35-25
3J21	COILS FOR LEVELING VALVE (SH)	45-94	3D9	CONTROLS, VARIABLE SPEED CYLINDER	35-26
2C15	COLD WEATHER STARTING AID	9-6	3F12	CONVERSION,WIRING HARNESS (DIAL-A-MATIC HEADER HEIGHT CONTROL)	40-49
1F23	COMMUTATOR END FRAME, STARTER	5-125	4D17	CONVEYOR CHAIN, CLEAN GRAIN ELEVATOR	85-8
1F24	COMMUTATOR END FRAME, STARTER	5-126	4E2	CONVEYOR CHAIN, DIP AND POUR ELEVATOR	85-18
1G7	COMMUTATOR END FRAME, STARTER	5-135	2E7	CONVEYOR CHAIN, FEEDER HOUSE	10-23
1I11	COMMUTATOR END FRAME, STARTER	6-49	2F23	CONVEYOR CHAIN, FEEDER-SH-CONVEYOR TYPE	10-66
1I16	COMMUTATOR END FRAME, STARTER	6-55	4D12	CONVEYOR CHAIN, TAILINGS ELEVATOR	85-2
3B19	COMPRESSOR AND VALVE, OPERATOR'S CAB	30-18	2F21	CONVEYOR TYPE	10-64
3B20	COMPRESSOR COIL, CLUTCH, AND PULLEY	30-19	2F22	CONVEYOR TYPE	10-65
3B17	COMPRESSOR, AIR CONDITIONER	30-16	2F25	CONVEYOR TYPE	10-68
3B22	COMPRESSOR, AIR CONDITIONER	30-21	2G1	CONVEYOR TYPE	10-69
3B21	COMPRESSOR, AIR CONDITIONER, COMPRESSOR	30-20	2G2	CONVEYOR TYPE	10-70
3D7	CONCAVE ADJUSTING CONTROLS	35-24	2G3	CONVEYOR TYPE	10-71
4B12	CONCAVE, ADJUSTING, SHAFT	60-12	2G4	CONVEYOR TYPE	10-72
4B10	CONCAVE, OPEN BAR	60-10	2G5	CONVEYOR TYPE	10-73
4B11	CONCAVE, OPEN BAR	60-11	2G6	CONVEYOR TYPE	10-74
4B12	CONCAVE, SECTOR	60-12	2G7	CONVEYOR TYPE	10-75
4B10	CONCAVE, SNAP-ON COVER PLATES	60-10	2F19	CONVEYOR TYPE-FDR.HSE.BELT TIGHTENER-SH	10-62
4B11	CONCAVE, SNAP-ON COVER PLATES	60-11	2F20	CONVEYOR TYPE-FH VAR.DR.SHEAVE CTL-SH	10-63
4B14	CONCAVE, SPIKE-TOOTH	60-14	1B9	COOLANT CONDITIONER	5-5
3B25	CONDENSER, AIR CONDITIONER	30-24	2C16	COOLANT HEATER, ENGINE	9-7
3B11	CONDENSER, HOUSING, AIR CONDITIONER	30-10	1B22	COOLER, ENGINE OIL	5-18
3B15	CONDITIONER, AIR	30-14	1E3	COOLER, ENGINE OIL	5-78
1D21	CONNECTING RODS	5-70	1H11	COOLER, ENGINE OIL	6-23
1H7	CONNECTING RODS	6-18	3I21	COOLER, OIL, HYDROSTATIC DRIVE	45-69
3F17	CONNECTOR, ELECTRICAL, SERVICE KIT	40-54	3C7	CORE HEATER	30-31
3F21	CONNECTORS, SUPPLEMENTARY TERMINALS	40-58	2K2	CORNER FRAME	25-24
3H21	CONTROL PLUG, UNLOADING AUGER FLOW	45-42	2I3	COUNTERSHAFT SHEAVE, PROPULSION DRIVE	15-46
3E9	CONTROL SWITCH,HEADER HEIGHT-CONVERSION	40-19	4E6	COUNTERSHAFT, CLEAN GRAIN ELEVATOR DRIVE	85-22
3J11	CONTROL VALVE AND FLOW CONTROL VALVES	45-84	4E7	COUNTERSHAFT, DIP AND POUR ELEVATOR DR.	85-23
3J18	CONTROL VALVE SOLENOID	45-91	2B14	COUNTERSHAFT, ENGINE FAN DRIVE	8-4
3C25	CONTROL, CHOKE	35-17	2I5	COUNTERSHAFT, PROPULSION DRIVE	15-48
3D2	CONTROL, DIESEL FUEL SHUT-OFF	35-19	2I7	COUNTERSHAFT, PROPULSION DRIVE	15-50
2E7	CONTROL, FEEDER HOUSE VAR. BELT DRIVE	10-23	3L12	COUNTERSHAFT, SEPARATOR, PRIMARY	55-4
3H14	CONTROL, HYDRD. DR. REEL CONTROL VALVE	45-35	3L14	COUNTERSHAFT, SEPARATOR, SECONDARY	55-6
2E7	CONTROL, PLATFORM VAR. BELT DRIVE	10-23	4F3	COUNTERSHAFT, UNLOADING AUGER	90-20
3F4	CONTROLS, BOX, LOW SHAFT SPEED INDICATOR	40-41			

GRID		PAGE
3H9	CYLINDER, HYDRAULIC, BRAKE, SLAVE	45- 30
3H2	CYLINDER, HYDRAULIC, PLATFORM LIFT	45- 23
3G22	CYLINDER, HYDRAULIC, POWER STEERING	45- 18
3J23	CYLINDER, LEVELING (SH)	45- 96
3K1	CYLINDER, LEVELING (SH)	45- 100
4B6	CYLINDER, RASP-BAR	60- 6
3H4	CYLINDER, SELECTIVE GROUND SPEED	45- 25
3L16	CYLINDER, SEP., INTERMEDIATE SHAFT DR.	55- 8
4B7	CYLINDER, SEPARATOR, RASP-BAR	60- 7
4B7	CYLINDER, SEPARATOR, ROCKER WRENCH	60- 7
4B8	CYLINDER, SEPARATOR, ROCKER WRENCH	60- 8
4B7	CYLINDER, SEPARATOR, SHEAR BAR	60- 7
4B8	CYLINDER, SEPARATOR, SPIKE-TOOTH	60- 8
3J16	CYLINDER, STEERING	45- 89
D		
3C10	DECALS	35- 1
4H11	DECALS	110- 2
3B10	DEFLECTOR, AIR (OPERATOR'S CAB)	30- 9
4B2	DEFLECTOR, ROTARY	60- 2
4B4	DEFLECTOR, SIX-WING, ROTARY	60- 4
2F6	DEFLECTOR,FEEDER HOUSE-SH-CONVEYOR TYPE	10- 49
1I4	DELIVERY VALVE, FUEL INJECTION	6- 42
3F12	DIAL-A-MATIC HEADER HEIGHT CONTROL WIRING HARNESS (CONVERSION)	40- 49
3F13	DIAL-A-MATIC, AMPLIFIER (CONVERSION)	40- 50
3F13	DIAL-A-MATIC, CIRCUIT BOX (CONVERSION)	40- 50
2B8	DIESEL FUEL FILTER, EXPORT	7- 7
2B3	DIESEL FUEL LINES AND FILTER	7- 2
2B9	DIESEL FUEL LINES, EXPORT	7- 8
3D2	DIESEL FUEL SHUT-OFF CONTROL	35- 19
3D1	DIESEL THROTTLE CONTROLS	35- 18
2H3	DIFFERENTIAL AND TRANSMISSION	15- 20
2H4	DIFFERENTIAL AND TRANSMISSION	15- 21
2H8	DIFFERENTIAL AND TRANSMISSION	15- 25
2H9	DIFFERENTIAL AND TRANSMISSION	15- 26
2H10	DIFFERENTIAL AND TRANSMISSION	15- 27
2H11	DIFFERENTIAL AND TRANSMISSION	15- 28
2H14	DIFFERENTIAL AND TRANSMISSION	15- 31
2H16	DIFFERENTIAL AND TRANSMISSION	15- 33
2H17	DIFFERENTIAL AND TRANSMISSION	15- 34
2H18	DIFFERENTIAL AND TRANSMISSION	15- 35
2H19	DIFFERENTIAL AND TRANSMISSION	15- 36
2H21	DIFFERENTIAL AND TRANSMISSION	15- 38
4E2	DIP AND POUR ELEVATOR CONVEYOR CHAIN	85- 18
4E2	DIP AND POUR ELEVATOR, BUCKET	85- 18
4D24	DIP AND POUR ELEVATOR, DOOR	85- 15
4E1	DIP AND POUR ELEVATOR, DOOR	85- 17
4E1	DIP AND POUR ELEVATOR, HOUSING	85- 17
4D24	DIP AND POUR ELEVATOR, TOP HOOD	85- 15
4D25	DIP AND POUR ELEVATOR, TOP SHIELD	85- 16
1D4	DIPSTICK TUBE	5- 52
1G18	DIPSTICK TUBE	6- 4
1B13	DIPSTICK, ENGINE OIL	5- 9
1D4	DIPSTICK, ENGINE OIL	5- 52
1D6	DIPSTICK, ENGINE OIL	5- 54
1G18	DIPSTICK, ENGINE OIL	6- 4
2C9	DISPLACER, ROTARY SCREEN	8- 24
2C8	DISPLACERS, ROTARY SCREEN DRIVE BELT	8- 23
4D15	DOOR, CLEAN GRAIN ELEVATOR	85- 6
3K21	DOOR, CYLINDER	50- 1
4D24	DOOR, DIP AND POUR ELEVATOR	85- 15
4E1	DOOR, DIP AND POUR ELEVATOR	85- 17
2K15	DOOR, ENGINE COMPARTMENT, LOWER	25- 37
2K16	DOOR, ENGINE COMPARTMENT, LOWER	25- 38

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2K17	DOOR, ENGINE COMPARTMENT, LOWER	25-39	4D24	ELEVATOR, DIP AND POUR	85-15
2K13	DOOR, ENGINE COMPARTMENT, MIDDLE	25-35	4E1	ELEVATOR, DIP AND POUR	85-17
2K14	DOOR, ENGINE COMPARTMENT, MIDDLE	25-36	4D11	ELEVATOR, TAILINGS	85-1
2K8	DOOR, ENGINE COMPARTMENT, UPPER	25-30	1G7	END FRAME, STARTER COMMUTATOR	5-135
2K9	DOOR, ENGINE COMPARTMENT, UPPER	25-31	1116	END FRAME, STARTER COMMUTATOR	6-55
2D18	DOOR, FEEDER HOUSE TOP	10-9	2J12	ENGINE AND OPERATOR'S PLATFORM ANGLES	25-8
4E14	DOOR, GRAIN TANK COVER	90-6	2J12	ENGINE AND OPERATOR'S PLATFORM SUPPORTS	25-8
2K4	DOOR, OIL RESERVOIR	25-26	2K5	ENGINE COMPARTMENT REAR SHEET	25-27
3L5	DOOR, REAR HOOD	50-10	2K18	ENGINE COMPARTMENT WALKWAY	25-40
2J22	DOOR, TAILINGS ELEVATOR	25-19	2C16	ENGINE COOLANT HEATER	9-7
4D11	DOOR, TAILINGS ELEVATOR	85-1	2C17	ENGINE COOLANT HEATER	9-8
2K7	DOOR, UPPER	25-29	2C2	ENGINE FAN COUNTERSHAFT DRIVE TIGHTENER	8-17
2F8	DOOR, CENTER, FDR.HSE.TOP SHEETS-SH-CONV.	10-51	2C3	ENGINE FAN CTR.SHAFT. DRIVE TIGHTENER	8-18
2F8	DOOR, FRONT, FDR.HSE.TOP SHEETS-SH-CONV.	10-51	2B14	ENGINE FAN DRIVE COUNTERSHAFT	8-4
2F8	DOOR, REAR, FDR.HSE.TOP SHEETS-SH-CONV.	10-51	2B17	ENGINE FAN DRIVE COUNTERSHAFT	8-7
3B7	DOORS AND HINGES FOR OPERATOR'S CAB	30-5	2B14	ENGINE FAN DRIVE COUNTERSHAFT, RETRO-FIT	8-4
4H2	DR. BELTS AND CHAINS, DIP AND POUR		2C2	ENGINE FAN DRIVE TIGHTENER	8-17
	ELEVATOR	105-16	2C4	ENGINE FAN DRIVE TIGHTENER	8-19
4G15	DRIVE BELT ON RIGHT-HAND SIDE	105-3	1B17	ENGINE FRONT PLATE	5-13
4G24	DRIVE BELTS AND CHAINS, L.H. SIDE	105-13	1I20	ENGINE GASKET SET	6-60
4G14	DRIVE BELTS AND CHAINS, R.H. SIDE	105-2	1D3	ENGINE OIL	5-51
4H4	DRIVE BELTS AND CHAINS, ROTARY SCREEN	105-18	1G15	ENGINE OIL	6-1
2G3	DRIVE CHAIN, FDR.CONVEYOR-SH-CONV.	10-71	1B22	ENGINE OIL COOLER	5-18
2H1	DRIVE SHAFT AND FINAL DRIVE PINION	15-18	1E3	ENGINE OIL COOLER	5-78
2I13	DRIVE SHAFT, FINAL (SH)	15-56	1H11	ENGINE OIL COOLER	6-23
2F4	DRIVE SHAFT, HEADER (SH)	10-47	1D4	ENGINE OIL DIPSTICK	5-52
2B16	DRIVE SHAFT, ROTARY SCREEN	8-6	1D6	ENGINE OIL DIPSTICK	5-54
2G5	DRIVE SHAFT, HEADER-SH-CONVEYOR TYPE	10-73	1G18	ENGINE OIL DIPSTICK	6-4
2I9	DRIVE WHEEL AXLE (SH)	15-52	1B13	ENGINE OIL FILTER AND DIPSTICK	5-9
2H14	DRIVE WHEEL CLUTCH AND SHAFT	15-31	3D3	ENGINE OIL PRESSURE GAUGE TUBE	35-20
2H11	DRIVE WHEEL CLUTCH SHEAVE	15-28	1B19	ENGINE OIL PUMP	5-15
2H11	DRIVE WHEEL SHAFT AND HOUSING	15-28	1E1	ENGINE OIL PUMP	5-76
2G10	DRIVE WHEELS AND SPACERS	15-1	1H12	ENGINE OIL PUMP	6-24
2H10	DRIVE WHEELS AND SPACERS, CLUTCH	15-27	1B5	ENGINE OIL, TORQ-GARD SUPREME	5-1
2G11	DRIVE WHEELS AND SPACERS, FENDERS	15-2	2D5	ENGINE POWERSHAFT	9-21
2G23	DRIVE, FINAL	15-15	2J22	ENGINE POWERSHAFT CLOSURE	25-19
2G24	DRIVE, FINAL	15-17	1G8	ENGINE REBUILD GASKET KIT	5-136
1E23	DRIVE, FUEL INJECTION PUMP	5-100	1B20	ENGINE ROCKER ARM COVER	5-16
1F3	DRIVE, FUEL INJECTION PUMP	5-104	2C11	ENGINE SUPPORTS	9-2
1I4	DRIVE, FUEL INJECTION PUMP	6-42	2C13	ENGINE SUPPORTS	9-4
1D23	DRIVE, METER, SPEED-HOUR	5-72	1B6	ENGINE VALVE STEM LUBRICANT	5-2
1F21	DRIVE, STARTER	5-123	1B20	ENGINE VENTILATOR TUBE	5-16
1F22	DRIVE, STARTER	5-124	2J23	ENGINE, FAN SHROUD	25-20
1I10	DRIVE, STARTER	6-48	2J24	ENGINE, FAN SHROUD	25-21
1D22	DRIVE, TACHOMETER	5-71	2J25	ENGINE, FAN SHROUD	25-22
1H8	DRIVE, TACHOMETER	6-19	2K1	ENGINE, FAN SHROUD	25-23
3K11	DROP RATE VALVE (AUTO HEIGHT)	45-111	2J23	ENGINE, GRILLE	25-20
2H17	DRUM, BRAKE	15-34	2J24	ENGINE, GRILLE	25-21
2D19	DRUM, FEEDER	10-10	2J25	ENGINE, GRILLE	25-22
2D20	DRUM, FEEDER HOUSE	10-11	2K1	ENGINE, GRILLE	25-23
2F22	DRUM, FEEDER-SH-CONVEYOR TYPE	10-65	2K15	ENGINE, LOWER DOOR	25-37
2C20	DRY AIR CLEANER ELEMENT CLEANING GUN	9-11	2K16	ENGINE, LOWER DOOR	25-38
4C4	DUCT, AIR, CLEANING FAN	70-3	2K10	ENGINE, MIDDLE DOOR FRAME	25-32
4C6	DUCT, AIR, CLEANING FAN	70-6	2K11	ENGINE, MIDDLE DOOR FRAME	25-33
			2K12	ENGINE, MIDDLE DOOR FRAME	25-34
			2K14	ENGINE, MIDDLE DOOR FRAME	25-36
			2K13	ENGINE, MIDDLE DOOR LOUVERS AND SCREENS	25-35
			2K20	ENGINE, SEALS AND RUBBER CUSHIONS	25-42
3B25	ELECTRIC MOTOR, AIR CONDITIONER FAN	30-24	2K21	ENGINE, SEALS AND RUBBER CUSHIONS	25-43
1C17	ELECTRIC SHUT-OFF KIT, FUEL INJECTION PUMP	5-39	2K22	ENGINE, SEALS AND RUBBER CUSHIONS	25-44
3F17	ELECTRICAL CONNECTOR SERVICE KIT	40-54	2K7	ENGINE, SOUND SHIELD	25-29
3F3	ELECTRICAL WIRING	40-40	3D12	ENGINE, TACH-HOUR METER	35-29
3B17	ELECTROMAGNETIC CLUTCH	30-16	2K6	ENGINE, UPPER DOOR FRAME AND HINGES	25-28
3E18	ELECTROMAGNETIC CLUTCH, PLATFORM	40-29	2K7	ENGINE, UPPER DOOR LOUVERS	25-29
3D14	ELECTROMAGNETIC CLUTCH, SWITCH, PLATFORM	35-32	2K8	ENGINE, UPPER DOOR LOUVERS	25-30
4D15	ELEVATOR, CLEAN GRAIN	85-6	3D25	ENGINE, WIRING HARNESS	40-9
			3B25	EVAPORATOR, AIR CONDITIONER	30-24