

John Deere

CLICK ANYWHERE FOR MORE DETAILS

MODEL:

400 & 500

Series Engines

**PARTS
MANUAL**



JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. **JOHN DEERE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-P-PC1326

CLICK ANYWHERE FOR MORE DETAILS



**Parts
Catalog**

**John Deere
400 and 500 Series
Engines**


purchase full manual at

**JENSALES.COM
or Call 800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS

PC-1326

CLICK ANYWHERE FOR MORE DETAILS

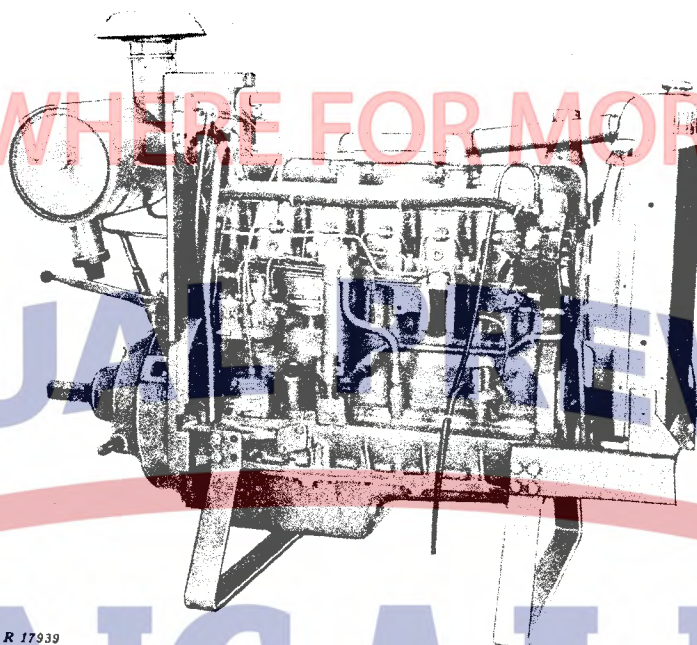

R 17939

John Deere 6404 Stationary Engine
(-357083)



R 21254

John Deere 6404D Stationary Engine
(357084-)
(Specifications and design subject to change without notice.)

CLICK ANYWHERE FOR MORE DETAILS

SECTIONAL INDEX

General Information	5-1 to 5-8
Engine	10-1 to 10-73
Engine Accessories	15-2 to 15-47
Cooling System	20-2 to 20-20
Fuel System	25-1 to 25-151
PTO	40-2 to 40-4
Operator's Station	75-1 to 75-11
Electrical System	85-2 to 85-30
Numerical Index	95-1 to 95-40

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
A			C		
1F10	AIR CLEANER	15-35	2H17	CABLE, THROTTLE CONTROL	75-10
1F8	AIR CLEANER (6404A)	15-33	2H18	CABLE, THROTTLE CONTROL	75-11
1F12	AIR CLEANER (6531A)	15-37	2H20	CABLES, SPARK PLUG	85-2
1F7	AIR CLEANER, DRY	15-32	1C21	CAMSHAFT	10-53
1F11	AIR CLEANER, DRY	15-36	1F9	CAP, AIR STACK (6404A)	15-34
1F13	AIR INTAKE (6531A)	15-38	1G3	CAP, RADIATOR	20-2
1F16	AIR INTAKE PIPE	15-41	1G5	CAP, RADIATOR	20-4
1F14	AIR INTAKE PIPE (4270 OR 6404)	15-39	2G21	CARBURETOR (LP-GAS)	25-145
1F17	AIR INTAKE PIPE (6362)	15-42	2A17	CARBURETOR (MARVEL-SCHEBLER)	25-2
1F15	AIR INTAKE PIPE (6531)	15-40	2A19	CARBURETOR (MARVEL-SCHEBLER)	25-4
1F18	AIR INTAKE PIPE (6531D)	15-43	2A21	CARBURETOR (ZENITH)	25-6
1F13	AIR STACK (6531A)	15-38	2A22	CARBURETOR (ZENITH)	25-7
2I2	ALTERNATOR	85-6	2G22	CARBURETOR (6362)	25-146
2I1	ALTERNATOR (6404)	85-5	2H1	CARBURETOR (6362)	25-147
2I4	ALTERNATOR (6531A)	85-8	2B7	CHECK VALVE, FUEL	25-12
2I5	ALTERNATOR PARTS (12-VOLT)	85-9	1F10	CLEANER, AIR	15-35
2I6	ALTERNATOR PARTS (12-VOLT)	85-10	1F8	CLEANER, AIR (6404A)	15-33
2I7	ALTERNATOR PARTS (12-VOLT)	85-11	1F12	CLEANER, AIR (6531A)	15-37
2I8	ALTERNATOR PARTS (12-VOLT)	85-12	1F7	CLEANER, DRY AIR	15-32
2G14	ANEROID CONTROL (6404)	25-138	1F11	CLEANER, DRY AIR	15-36
2G15	ANEROID CONTROL (6404)	25-139	2H20	COIL	85-2
2G16	ANEROID CONTROL (6531A)	25-140	1C8	CONNECTING ROD (4241, 6362)	10-39
2G18	ANEROID CONTROL (6531A)	25-142	1C9	CONNECTING ROD (4270, 6404D)	10-40
2E21	ANEROID, INJECTION PUMP (6404A)	25-98	1C11	CONNECTING ROD (6404A, T)	10-42
2D21	ANEROID, INJECTION PUMP (6404A, T)	25-76	1C10	CONNECTING ROD (6404D)	10-41
2E10	ANEROID, INJECTION PUMP (6404T)	25-86	1C12	CONNECTING ROD (6531D)	10-43
2G7	ANEROID, INJECTION PUMP (6531A)	25-130	1C12	CONNECTING ROD (6531D)	10-43
2B11	AUTO ADVANCE, INJECTION PUMP (4270)	25-16	2G14	CONTROL, ANEROID (6404)	25-138
2B17	AUTO ADVANCE, INJECTION PUMP (4270)	25-22	2G15	CONTROL, ANEROID (6404)	25-139
2D9	AUTO. ADVANCE, INJECTION PUMP (6404A, T)	25-64	2G16	CONTROL, ANEROID (6531A)	25-140
2C1	AUTO. ADVANCE, INJECTION PUMP (6404D)	25-32	2G18	CONTROL, ANEROID (6531A)	25-142
2C9	AUTO. ADVANCE, INJECTION PUMP (6404D)	25-40	2H15	CONTROL, SPEED	75-8
2C17	AUTO. ADVANCE, INJECTION PUMP (6404D)	25-48	2H16	CONTROL, SPEED (6531)	75-9
2D1	AUTO. ADVANCE, INJECTION PUMP (6404D)	25-54	2H2	CONVERTER PARTS, FUEL	25-148
2F12	AUTO. ADVANCE, INJECTION PUMP (6531D)	25-112	2G20	CONVERTER, FUEL (LP-GAS)	25-144
2F16	AUTO. ADVANCE, INJECTION PUMP (6531D)	25-116	1F19	COOLANT HEATER, ENGINE	15-44
B			1D13	COOLER, ENGINE OIL	10-67
1C7	BALANCER, ENGINE (4241, 4270)	10-38	1D14	COOLER, ENGINE OIL (6362)	10-68
1C3	BEARING, MAIN	10-34	1D16	COOLER, ENGINE OIL (6404)	10-70
1C3	BEARING, MAIN THRUST	10-34	1D15	COOLER, ENGINE OIL (6404A, T)	10-69
1C2	BEARINGS, MAIN (6531)	10-33	1D18	COOLER, ENGINE OIL (6531A)	10-72
1C2	BEARINGS, MAIN THRUST (6531)	10-33	1D17	COOLER, ENGINE OIL (6531D)	10-71
1G7	BELT, FAN	20-6	2D11	COVER, INJECTION PUMP GOVERNOR (6404A,T)	25-66
1G8	BELT, FAN (4241, 6362)	20-7	1E8	COVER, MUFFLER	15-11
1G10	BELT, FAN (6404)	20-9	1E10	COVER, MUFFLER (6531A)	15-13
1G9	BELT, FAN (6404A, T)	20-8	1C16	COVER, ROCKER ARM	10-48
1G12	BELT, FAN (6531A)	20-11	1C17	COVER, ROCKER ARM	10-49
1G11	BELT, FAN (6531D)	20-10	1G17	COVER, THERMOSTAT (6404A, T)	20-16
2I2	BELTS, FAN	85-6	1G18	COVER, THERMOSTAT (6404A, T)	20-17
2I1	BELTS, FAN (6404)	85-5	1G20	COVER, THERMOSTAT (6531A)	20-19
2I4	BELTS, FAN (6531A)	85-8	1B19	COVER, TIMING GEAR	10-28
1A17	BLOCK, CYLINDER	10-2	1B21	COVER, TIMING GEAR (6404)	10-30
1A19	BLOCK, CYLINDER (6404)	10-4	1B20	COVER, TIMING GEAR (6404A, T)	10-29
1A22	BLOCK, CYLINDER (6531A)	10-7	1C1	COVER, TIMING GEAR (6531A)	10-32
1A21	BLOCK, CYLINDER (6531D)	10-6	1B22	COVER, TIMING GEAR (6531D)	10-31
2I2	BRACKETS, ALTERNATOR MOUNTING	85-6	1C17	CRANKCASE VENT	10-49
2I1	BRACKETS, ALTERNATOR MOUNTING (6404)	85-5	1C5	CRANKSHAFT	10-36
2I4	BRACKETS, ALTERNATOR MOUNTING (6531A)	85-8	1A17	CYLINDER BLOCK	10-2
1D2	BYPASS VALVE, OIL COOLER (6404)	10-56	1A19	CYLINDER BLOCK (6404)	10-4
			1A22	CYLINDER BLOCK (6531A)	10-7
			1A21	CYLINDER BLOCK (6531D)	10-6
			1C14	CYLINDER HEAD	10-46
			1A17	CYLINDER LINER	10-2
			1C9	CYLINDER LINER (4270, 6404D)	10-40
			1C11	CYLINDER LINER (6404A, T)	10-42

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE
1C10	CYLINDER LINER (6404D)	10-41
1C12	CYLINDER LINER (6531D)	10-43
D		
1A17	DIPSTICK	10-2
1A19	DIPSTICK (6404)	10-4
1B1	DIPSTICK, ENGINE OIL (6531)	10-8
2H20	DISTRIBUTOR	85-2
2H21	DISTRIBUTOR PARTS	85-3
2B9	DRIVE SHAFT, INJECTION PUMP (4270)	25-14
2B15	DRIVE SHAFT, INJECTION PUMP (4270)	25-20
2D11	DRIVE SHAFT, INJECTION PUMP (6404A, T)	25-66
2B24	DRIVE SHAFT, INJECTION PUMP (6404D)	25-30
2C9	DRIVE SHAFT, INJECTION PUMP (6404D)	25-40
2C17	DRIVE SHAFT, INJECTION PUMP (6404D)	25-48
2D1	DRIVE SHAFT, INJECTION PUMP (6404D)	25-54
2F13	DRIVE SHAFT, INJECTION PUMP (6531D)	25-113
2F17	DRIVE SHAFT, INJECTION PUMP (6531D)	25-117
1F7	DRY AIR CLEANER	15-32
1F11	DRY AIR CLEANER	15-36

E		
1E19	ELBOW, EXHAUST (6531A)	15-22
2G19	ELECTRIC FUEL SHUT-OFF	25-143
2D11	ELECTRIC SHUT-OFF, INJECTION PUMP	25-66
2B9	ELECTRIC SHUT-OFF, INJECTION PUMP (4270)	25-14
2B15	ELECTRIC SHUT-OFF, INJECTION PUMP (4270)	25-20
2B24	ELECTRIC SHUT-OFF, INJECTION PUMP (6404D)	25-30
1F8	ELEMENT, AIR CLEANER (6404A)	15-33
1F12	ELEMENT, AIR CLEANER (6531A)	15-37
1F7	ELEMENT, DRY AIR CLEANER	15-32
1F11	ELEMENT, DRY AIR CLEANER	15-36
1D5	ELEMENT, ENGINE OIL FILTER	10-59
2B4	ELEMENT, FUEL FILTER	25-11
2B2	ELEMENT, FUEL FILTER (4270)	25-9
2B3	ELEMENT, FUEL FILTER (6404, 6531D)	25-10
2B5	ELEMENT, FUEL FILTER (6404A, T)	25-11A
2B6	ELEMENT, FUEL FILTER (6531A)	25-11B
2B12	END PLATE, INJECTION PUMP (4270)	25-17
2B19	END PLATE, INJECTION PUMP (4270)	25-24
2D8	END PLATE, INJECTION PUMP (6404A, T)	25-63
2C2	END PLATE, INJECTION PUMP (6404D)	25-33
2F10	END PLATE, INJECTION PUMP (6531D)	25-110
2F14	END PLATE, INJECTION PUMP (6531D)	25-114
1C7	ENGINE BALANCER (4241, 4270)	10-38
1F19	ENGINE COOLANT HEATER	15-44
1F22	ENGINE MOUNTS	15-47
1A16	ENGINE OIL	10-1
1D13	ENGINE OIL COOLER	10-67
1D14	ENGINE OIL COOLER (6362)	10-68
1D16	ENGINE OIL COOLER (6404)	10-70
1D15	ENGINE OIL COOLER (6404A, T)	10-69
1D18	ENGINE OIL COOLER (6531A)	10-72
1D17	ENGINE OIL COOLER (6531D)	10-71
1B1	ENGINE OIL DIPSTICK (6531)	10-8
1D5	ENGINE OIL FILTER	10-59
1D6	ENGINE OIL FILTER (6362)	10-60
1D8	ENGINE OIL FILTER (6404)	10-62
1D7	ENGINE OIL FILTER (6404A, T)	10-61
1D9	ENGINE OIL FILTER (6531A)	10-63
1C22	ENGINE OIL PUMP	10-54
1D4	ENGINE OIL PUMP	10-58
1D1	ENGINE OIL PUMP (6362)	10-55

GRID		PAGE
1D2	ENGINE OIL PUMP (6404)	10-56
1D3	ENGINE OIL PUMP (6531D)	10-57
1E19	EXHAUST ELBOW (6531A)	15-22
1D21	EXHAUST MANIFOLD (4241)	15-2
1D22	EXHAUST MANIFOLD (4270)	15-3
1E1	EXHAUST MANIFOLD (6362)	15-4
1E2	EXHAUST MANIFOLD (6404D)	15-5
1E7	EXHAUST MANIFOLD (6531A)	15-10
1E6	EXHAUST MANIFOLD (6531D)	15-9
1E3	EXHAUST MANIFOLDS (6404A, T)	15-6
1E5	EXHAUST MANIFOLDS (6404A, T)	15-8
1C18	EXHAUST VALVE	10-50
1C13	EXHAUST VALVE (6531)	10-44
1C20	EXHAUST VALVE (6531)	10-52
1E9	EXTENSION, MUFFLER	15-12
1D21	EXTENSION, MUFFLER (4241)	15-2
1D22	EXTENSION, MUFFLER (4270)	15-3
1E3	EXTENSION, MUFFLER (6404A, T)	15-6
1E10	EXTENSION, MUFFLER (6531A)	15-13

F		
1G7	FAN	20-6
1G8	FAN (4241, 6362)	20-7
1G10	FAN (6404)	20-9
1G10	FAN (6404)	20-9
1G9	FAN (6404A, T)	20-8
1G12	FAN (6531A)	20-11
1G11	FAN (6531D)	20-10
1G7	FAN BELT	20-6
1G8	FAN BELT (4241, 6362)	20-7
1G10	FAN BELT (6404)	20-9
1G9	FAN BELT (6404A, T)	20-8
1G12	FAN BELT (6531A)	20-11
1G11	FAN BELT (6531D)	20-10
2I2	FAN BELTS	85-6
2I1	FAN BELTS (6404)	85-5
2I4	FAN BELTS (6531A)	85-8
1G3	FAN SHROUD	20-2
1G5	FAN SHROUD	20-4
1D5	FILTER, ENGINE OIL	10-59
1D6	FILTER, ENGINE OIL (6362)	10-60
1D8	FILTER, ENGINE OIL (6404)	10-62
1D7	FILTER, ENGINE OIL (6404A, T)	10-61
1D9	FILTER, ENGINE OIL (6531A)	10-63
2B4	FILTER, FUEL	25-11
2A16	FILTER, FUEL (GASOLINE)	25-1
2B2	FILTER, FUEL (4270)	25-9
2B3	FILTER, FUEL (6404, 6531D)	25-10
2B5	FILTER, FUEL (6404A, T)	25-11A
2B6	FILTER, FUEL (6531A)	25-11B
1C5	FLYWHEEL	10-36
1F20	FLYWHEEL HOUSING	15-45
2B7	FUEL CHECK VALVE	25-12
2G20	FUEL CONVERTER (LP-GAS)	25-144
2H2	FUEL CONVERTER PARTS	25-148
2B2	FUEL FILTER (4270)	25-9
2B3	FUEL FILTER (6404, 6531D)	25-10
2B5	FUEL FILTER (6404A, T)	25-11A
2B6	FUEL FILTER (6531A)	25-11B
2B4	FUEL FILTERS	25-11
2B8	FUEL INJECTION PUMP (4270)	25-13
2D7	FUEL INJECTION PUMP (6404A, T)	25-62
2D15	FUEL INJECTION PUMP (6404A, T)	25-70
2E2	FUEL INJECTION PUMP (6404A, T)	25-78
2E4	FUEL INJECTION PUMP (6404A, T)	25-80

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2B23	FUEL INJECTION PUMP (6404D)	25-29	1B21	HOUSING, CRANKSHAFT REAR OIL SEAL (6404)	10-30
2C5	FUEL INJECTION PUMP (6404D)	25-36	1F20	HOUSING, FLYWHEEL	15-45
2C13	FUEL INJECTION PUMP (6404D)	25-44	1D10	HOUSING, OIL PRESSURE REGULATING (6531A)	10-64
2F21	FUEL INJECTION PUMP (6531A)	25-122	1G16	HOUSING, THERMOSTAT	20-15
2G1	FUEL INJECTION PUMP (6531A)	25-124	1G13	HOUSING, THERMOSTAT (4241, 4270)	20-12
2F9	FUEL INJECTION PUMP (6531D)	25-109	1G15	HOUSING, THERMOSTAT (6404D)	20-14
2B1	FUEL PUMP (DIESEL)	25-8	1G19	HOUSING, THERMOSTAT (6531D)	20-18
2A16	FUEL PUMP (GASOLINE)	25-1			
2H3	FUEL STRAINER (LP-GAS)	25-149			
2H4	FUEL STRAINER (LP-GAS)	25-150			
2F5	FUEL TRANSFER PUMP (6404A)	25-104			
2E16	FUEL TRANSFER PUMP (6404T)	25-92			
G					
1B6	GASKET SET, ENGINE OVERHAUL (4270)	10-14	2B22	INJECTION NOZZLE (4270)	25-27
1B8	GASKET SET, ENGINE OVERHAUL (6362)	10-16	2G13	INJECTION NOZZLE (6404, 6531)	25-137
1B14	GASKET SET, ENGINE OVERHAUL (6404D)	10-22	2F8	INJECTION NOZZLE (6404A)	25-107
1B10	GASKET SET, ENGINE OVERHAUL (6531A)	10-18	2F6	INJECTION NOZZLE (6404A, T)	25-105
1B12	GASKET SET, ENGINE OVERHAUL (6531D)	10-20	2D5	INJECTION NOZZLE (6404D)	25-59
1B17	GASKET SET, ENGINE TUNE-UP (6404)	10-26	2D6	INJECTION NOZZLE (6404D)	25-60
1B16	GASKET SET, ENGINE TUNE-UP (6404A)	10-25	2F7	INJECTION NOZZLE (6404T)	25-106
1B7	GASKET SET, OIL PAN REPLACEMENT	10-15	2F20	INJECTION NOZZLE (6531D)	25-120
1C14	GASKET, CYLINDER HEAD	10-46	2E21	INJECTION PUMP ANEROID (6404A)	25-98
2H14	GAUGE, OIL SIGHT	75-6	2D21	INJECTION PUMP ANEROID (6404A, T)	25-76
1C21	GEAR, CAMSHAFT	10-53	2E10	INJECTION PUMP ANEROID (6404T)	25-86
1C5	GEAR, CRANKSHAFT	10-36	2G7	INJECTION PUMP ANEROID (6531A)	25-130
1C21	GEAR, INJECTION PUMP DRIVE	10-53	2B11	INJECTION PUMP AUTO. ADVANCE (4270)	25-16
1C5	GEAR, STARTER	10-36	2B17	INJECTION PUMP AUTO. ADVANCE (4270)	25-22
1F5	GOVERNOR	15-30	2D9	INJECTION PUMP AUTO. ADVANCE (6404A, T)	25-64
2B14	GOVERNOR, FUEL INJECTION PUMP (4270)	25-19	2C1	INJECTION PUMP AUTO. ADVANCE (6404D)	25-32
2B21	GOVERNOR, FUEL INJECTION PUMP (4270)	25-26	2C9	INJECTION PUMP AUTO. ADVANCE (6404D)	25-40
2E19	GOVERNOR, INJECTION PUMP (6404A)	25-96	2C17	INJECTION PUMP AUTO. ADVANCE (6404D)	25-48
2F3	GOVERNOR, INJECTION PUMP (6404A)	25-102	2D1	INJECTION PUMP AUTO. ADVANCE (6404D)	25-54
2D14	GOVERNOR, INJECTION PUMP (6404A, T)	25-69	2F12	INJECTION PUMP AUTO. ADVANCE (6531D)	25-112
2D19	GOVERNOR, INJECTION PUMP (6404A, T)	25-74	2F16	INJECTION PUMP AUTO. ADVANCE (6531D)	25-116
2C4	GOVERNOR, INJECTION PUMP (6404D)	25-35	2B9	INJECTION PUMP DRIVE SHAFT (4270)	25-14
2C11	GOVERNOR, INJECTION PUMP (6404D)	25-42	2B15	INJECTION PUMP DRIVE SHAFT (4270)	25-20
2C19	GOVERNOR, INJECTION PUMP (6404D)	25-50	2D11	INJECTION PUMP DRIVE SHAFT (6404A, T)	25-66
2D3	GOVERNOR, INJECTION PUMP (6404D)	25-56	2B24	INJECTION PUMP DRIVE SHAFT (6404D)	25-30
2E8	GOVERNOR, INJECTION PUMP (6404T)	25-84	2C9	INJECTION PUMP DRIVE SHAFT (6404D)	25-40
2E14	GOVERNOR, INJECTION PUMP (6404T)	25-90	2C17	INJECTION PUMP DRIVE SHAFT (6404D)	25-48
2G5	GOVERNOR, INJECTION PUMP (6531A)	25-128	2D1	INJECTION PUMP DRIVE SHAFT (6404D)	25-54
2G10	GOVERNOR, INJECTION PUMP (6531A)	25-134	2F13	INJECTION PUMP DRIVE SHAFT (6531D)	25-113
2F18	GOVERNOR, INJECTION PUMP (6531D)	25-118	2F17	INJECTION PUMP DRIVE SHAFT (6531D)	25-117
H					
2B13	HEAD AND ROTOR, INJECTION PUMP (4270)	25-18	2B14	INJECTION PUMP GOVERNOR (4270)	25-19
2B20	HEAD AND ROTOR, INJECTION PUMP (4270)	25-25	2B21	INJECTION PUMP GOVERNOR (4270)	25-26
2D13	HEAD AND ROTOR, INJECTION PUMP (6404A, T)	25-68	2E19	INJECTION PUMP GOVERNOR (6404A)	25-96
2C3	HEAD AND ROTOR, INJECTION PUMP (6404D)	25-34	2F8	INJECTION PUMP GOVERNOR (6404A)	25-102
2C11	HEAD AND ROTOR, INJECTION PUMP (6404D)	25-42	2D14	INJECTION PUMP GOVERNOR (6404A, T)	25-69
2C19	HEAD AND ROTOR, INJECTION PUMP (6404D)	25-50	2D19	INJECTION PUMP GOVERNOR (6404A, T)	25-74
2D3	HEAD AND ROTOR, INJECTION PUMP (6404D)	25-56	2C4	INJECTION PUMP GOVERNOR (6404D)	25-35
2F10	HEAD AND ROTOR, INJECTION PUMP (6531D)	25-110	2C11	INJECTION PUMP GOVERNOR (6404D)	25-42
2F14	HEAD AND ROTOR, INJECTION PUMP (6531D)	25-114	2C19	INJECTION PUMP GOVERNOR (6404D)	25-50
1C14	HEAD, CYLINDER	10-46	2D3	INJECTION PUMP GOVERNOR (6404D)	25-56
1F19	HEATER, ENGINE COOLANT	15-44	2E8	INJECTION PUMP GOVERNOR (6404T)	25-84
1G3	HOSES, RADIATOR	20-2	2E14	INJECTION PUMP GOVERNOR (6404T)	25-90
1G5	HOSES, RADIATOR	20-4	2G5	INJECTION PUMP GOVERNOR (6531A)	25-128
1C1	HOUSING, CRANKSHAFT OIL SEAL (6531A)	10-32	2G10	INJECTION PUMP GOVERNOR (6531A)	25-134
1B22	HOUSING, CRANKSHAFT OIL SEAL (6531D)	10-31	2F18	INJECTION PUMP GOVERNOR (6531D)	25-118
1B19	HOUSING, CRANKSHAFT REAR OIL SEAL	10-28	2B13	INJECTION PUMP HEAD AND ROTOR (4270)	25-18
1B20	HOUSING, CRANKSHAFT REAR OIL SEAL	10-29	2B20	INJECTION PUMP HEAD AND ROTOR (4270)	25-25
			2D13	INJECTION PUMP HEAD AND ROTOR (6404A, T)	25-68
			2C3	INJECTION PUMP HEAD AND ROTOR (6404D)	25-34
			2C11	INJECTION PUMP HEAD AND ROTOR (6404D)	25-42
			2C19	INJECTION PUMP HEAD AND ROTOR (6404D)	25-50
			2D3	INJECTION PUMP HEAD AND ROTOR (6404D)	25-56
			2F10	INJECTION PUMP HEAD AND ROTOR (6531D)	25-110
			2F14	INJECTION PUMP HEAD AND ROTOR (6531D)	25-114
			2D9	INJECTION PUMP LINKAGE (6404A, T)	25-64
			2C7	INJECTION PUMP LINKAGE (6404D)	25-38

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2C15	INJECTION PUMP LINKAGE (6404D)	25-46		L	
2C21	INJECTION PUMP LINKAGE (6404D)	25-52			
2E17	INJECTION PUMP PARTS (6404A)	25-94	2H6	LEVER, PTO SHIFT	40-2
2F1	INJECTION PUMP PARTS (6404A)	25-100	2H15	LEVER, SPEED CONTROL	75-8
2D17	INJECTION PUMP PARTS (6404A, T)	25-72	2H16	LEVER, SPEED CONTROL (6531)	75-9
2E6	INJECTION PUMP PARTS (6404T)	25-82	1F21	LIFT STRAPS	15-46
2E12	INJECTION PUMP PARTS (6404T)	25-88	1A17	LINER, CYLINDER	10-2
2G3	INJECTION PUMP PARTS (6531A)	25-126	1C9	LINER, CYLINDER (4270, 6404D)	10-40
2G8	INJECTION PUMP PARTS (6531A)	25-132	1C11	LINER, CYLINDER (6404A, T)	10-42
2B11	INJECTION PUMP THROTTLE LINKAGE (4270)	25-16	1C10	LINER, CYLINDER (6404D)	10-41
2B17	INJECTION PUMP THROTTLE LINKAGE (4270)	25-22	1C12	LINER, CYLINDER (6531D)	10-43
2C1	INJECTION PUMP THROTTLE LINKAGE (6404D)	25-32	2E2	LINES, FUEL INJECTION (6404A, T)	25-78
2F12	INJECTION PUMP THROTTLE LINKAGE (6531D)	25-112	2E4	LINES, FUEL INJECTION (6404A, T)	25-80
2F16	INJECTION PUMP THROTTLE LINKAGE (6531D)	25-116	2D9	LINKAGE, INJECTION PUMP (6404A, T)	25-64
2B12	INJECTION PUMP TRANSFER PUMP (4270)	25-17	2C7	LINKAGE, INJECTION PUMP (6404D)	25-38
2B19	INJECTION PUMP TRANSFER PUMP (4270)	25-24	2C15	LINKAGE, INJECTION PUMP (6404D)	25-46
2D8	INJECTION PUMP TRANSFER PUMP (6404A, T)	25-63	2C21	LINKAGE, INJECTION PUMP (6404D)	25-52
2E1	INJECTION PUMP TRANSFER PUMP (6404A, T)	25-77		M	
2C2	INJECTION PUMP TRANSFER PUMP (6404D)	25-33			
2C12	INJECTION PUMP TRANSFER PUMP (6404D)	25-43	1C3	MAIN BEARING	10-34
2C20	INJECTION PUMP TRANSFER PUMP (6404D)	25-51	1C2	MAIN BEARINGS (6531)	10-33
2D4	INJECTION PUMP TRANSFER PUMP (6404D)	25-57	1C3	MAIN THRUST BEARING	10-34
2G12	INJECTION PUMP TRANSFER PUMP (6531A)	25-136	1C2	MAIN THRUST BEARINGS (6531)	10-33
1C1	INLET, OIL FILLER (6531A)	10-32	1E3	MANIFOLD, EXHAUST (6404A, T)	15-6
2H9	INSTRUMENT PANEL	75-1	1E7	MANIFOLD, EXHAUST (6531A)	15-10
2H10	INSTRUMENT PANEL	75-2	1E13	MANIFOLD, INTAKE	15-16
2H9	INSTRUMENTS	75-1	1E14	MANIFOLD, INTAKE (6404A)	15-17
2H10	INSTRUMENTS	75-2	1E15	MANIFOLD, INTAKE (6404A)	15-18
1E13	INTAKE MANIFOLD	15-16	1E11	MANIFOLD, INTAKE (6404T)	15-14
1D21	INTAKE MANIFOLD (4241)	15-2	1E12	MANIFOLD, INTAKE (6404T)	15-15
1D22	INTAKE MANIFOLD (4270)	15-3	1E16	MANIFOLD, INTAKE (6531A)	15-19
1E1	INTAKE MANIFOLD (6362)	15-4	1D21	MANIFOLD, INTAKE AND EXHAUST (4241)	15-2
1E14	INTAKE MANIFOLD (6404A)	15-17	1D22	MANIFOLD, INTAKE AND EXHAUST (4270)	15-3
1E15	INTAKE MANIFOLD (6404A)	15-18	1E1	MANIFOLD, INTAKE AND EXHAUST (6362)	15-4
1E2	INTAKE MANIFOLD (6404D)	15-5	1E2	MANIFOLD, INTAKE AND EXHAUST (6404D)	15-5
1E11	INTAKE MANIFOLD (6404T)	15-14	1E6	MANIFOLD, INTAKE AND EXHAUST (6531D)	15-9
1E12	INTAKE MANIFOLD (6404T)	15-15	1G17	MANIFOLD, WATER (6404A, T)	20-16
1E16	INTAKE MANIFOLD (6531A)	15-19	1G18	MANIFOLD, WATER (6404A, T)	20-17
1E6	INTAKE MANIFOLD (6531D)	15-9	1G20	MANIFOLD, WATER (6531A)	20-19
1F16	INTAKE PIPE, AIR	15-41	1G19	MANIFOLD, WATER (6531D)	20-18
1F14	INTAKE PIPE, AIR (4270 OR 6404)	15-39	1G14	MANIFOLD, WATER OUTLET	20-13
1F17	INTAKE PIPE, AIR (6362)	15-42	1G15	MANIFOLD, WATER OUTLET (6404D)	20-14
1F9	INTAKE PIPE, AIR (6404A)	15-34	1E5	MANIFOLDS, EXHAUST (6404A, T)	15-8
1F15	INTAKE PIPE, AIR (6531)	15-40	1D11	METER, SPEED-HOUR	10-65
1F18	INTAKE PIPE, AIR (6531D)	15-43	1D12	METER, SPEED-HOUR	10-66
1C18	INTAKE VALVE	10-50	1F22	MOUNT, ENGINE	15-47
1C13	INTAKE VALVE (6531)	10-44	1E9	MUFFLER	15-12
1C20	INTAKE VALVE (6531)	10-52	1D21	MUFFLER (4241)	15-2
1E14	INTERCOOLER (6404A)	15-17	1D22	MUFFLER (4270)	15-3
1E15	INTERCOOLER (6404A)	15-18	1E3	MUFFLER (6404A, T)	15-6
1E16	INTERCOOLER (6531A)	15-19	1E10	MUFFLER (6531A)	15-13
			1E8	MUFFLER COVER	15-11
	K			N	
1A16	KIT, OFF-SEASON STORAGE	10-1			
2H22	KIT, SPARK PLUG CABLE AND LEAD WIRE	85-4	2B22	NOZZLE, INJECTION (4270)	25-27
1G7	KIT, WATER PUMP OVERHAUL	20-6	2G13	NOZZLE, INJECTION (6404, 6531)	25-137
1G8	KIT, WATER PUMP OVERHAUL (4241, 6362)	20-7	2F8	NOZZLE, INJECTION (6404A)	25-107
1G10	KIT, WATER PUMP OVERHAUL (6404)	20-9	2F6	NOZZLE, INJECTION (6404A, T)	25-105
1G9	KIT, WATER PUMP OVERHAUL (6404A, T)	20-8	2D5	NOZZLE, INJECTION (6404D)	25-59
1G12	KIT, WATER PUMP OVERHAUL (6531A)	20-11	2D6	NOZZLE, INJECTION (6404D)	25-60
1G11	KIT, WATER PUMP OVERHAUL (6531D)	20-10	2F7	NOZZLE, INJECTION (6404T)	25-106
			2F20	NOZZLE, INJECTION (6531D)	25-120
			2B8	NOZZLES, FUEL INJECTION (4270)	25-13

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2D7	NOZZLES, FUEL INJECTION (6404A, T)	25-62	2C13	PIPES, FUEL INJECTION PUMP (6404D)	25-44
2B23	NOZZLES, FUEL INJECTION (6404D)	25-29	2F21	PIPES, FUEL INJECTION PUMP (6531A)	25-122
2C5	NOZZLES, FUEL INJECTION (6404D)	25-36	2G1	PIPES, FUEL INJECTION PUMP (6531A)	25-124
2C13	NOZZLES, FUEL INJECTION (6404D)	25-44	2F9	PIPES, FUEL INJECTION PUMP (6531D)	25-109
2D15	NOZZLES, INJECTION PUMP (6404A, T)	25-70	2H3	PIPES, FUEL STRAINER (LP-GAS)	25-149
2E2	NOZZLES, INJECTION PUMP (6404A, T)	25-78	1E17	PIPES, TURBOCHARGER AIR AND OIL	15-20
2E4	NOZZLES, INJECTION PUMP (6404A, T)	25-80	1E18	PIPES, TURBOCHARGER AIR AND OIL	15-21
2F21	NOZZLES, INJECTION PUMP (6531A)	25-122	1E19	PIPES, TURBOCHARGER OIL (6531A)	15-22
2G1	NOZZLES, INJECTION PUMP (6531A)	25-124	1G14	PIPES, WATER BYPASS	20-13
2F9	NOZZLES, INJECTION PUMP (6531D)	25-109	1G13	PIPES, WATER BYPASS (4241, 4270)	20-12
O					
1D13	OIL COOLER, ENGINE	10-67	1C8	PISTON, ENGINE (4241, 6362)	10-39
1D14	OIL COOLER, ENGINE (6362)	10-68	1C9	PISTON, ENGINE (4270, 6404D)	10-40
1D16	OIL COOLER, ENGINE (6404)	10-70	1C11	PISTON, ENGINE (6404A, T)	10-42
1D15	OIL COOLER, ENGINE (6404A, T)	10-69	1C10	PISTON, ENGINE (6404D)	10-41
1D18	OIL COOLER, ENGINE (6531A)	10-72	1C12	PISTON, ENGINE (6531D)	10-43
1D17	OIL COOLER, ENGINE (6531D)	10-71	2H20	PULGS, SPARK	85-2
1B1	OIL DIPSTICK, ENGINE (6531)	10-8	2H6	PTO AND CLUTCH	40-2
1D5	OIL FILTER, ENGINE	10-59	2H13	PULLER, RACK	75-5
1D6	OIL FILTER, ENGINE (6362)	10-60	1C5	PULLEY, CRANKSHAFT	10-36
1D8	OIL FILTER, ENGINE (6404)	10-62	1G7	PULLEY, FAN	20-6
1D7	OIL FILTER, ENGINE (6404A, T)	10-61	1G8	PULLEY, FAN (4241, 6362)	20-7
1D9	OIL FILTER, ENGINE (6531A)	10-63	1G9	PULLEY, FAN (6404A, T)	20-8
1B2	OIL PAN	10-10	1G12	PULLEY, FAN (6531A)	20-11
1B3	OIL PAN (6404)	10-11	1G11	PULLEY, FAN (6531D)	20-10
1B5	OIL PAN (6531A)	10-13	1C22	PUMP, ENGINE OIL	10-54
1B4	OIL PAN (6531D)	10-12	1D4	PUMP, ENGINE OIL	10-58
1D10	OIL PRESSURE REGULATING HOUSING (6531A)	10-64	1D1	PUMP, ENGINE OIL (6362)	10-55
1C22	OIL PUMP, ENGINE	10-54	1D2	PUMP, ENGINE OIL (6404)	10-56
1D4	OIL PUMP, ENGINE	10-58	1D3	PUMP, ENGINE OIL (6531D)	10-57
1D1	OIL PUMP, ENGINE (6362)	10-55	2B1	PUMP, FUEL (DIESEL)	25-8
1D2	OIL PUMP, ENGINE (6404)	10-56	2A16	PUMP, FUEL (GASOLINE)	25-1
1D3	OIL PUMP, ENGINE (6531D)	10-57	2B8	PUMP, FUEL INJECTION (4270)	25-13
1B19	OIL SEAL, REAR	10-28	2D7	PUMP, FUEL INJECTION (6404A, T)	25-62
1B21	OIL SEAL, REAR (6404)	10-30	2D15	PUMP, FUEL INJECTION (6404A, T)	25-70
1B20	OIL SEAL, REAR (6404A, T)	10-29	2E2	PUMP, FUEL INJECTION (6404A, T)	25-78
1C1	OIL SEAL, REAR (6531A)	10-32	2E4	PUMP, FUEL INJECTION (6404A, T)	25-80
1B22	OIL SEAL, REAR (6531D)	10-31	2B23	PUMP, FUEL INJECTION (6404D)	25-29
2H14	OIL SIGHT GAUGE	75-6	2C5	PUMP, FUEL INJECTION (6404D)	25-36
1A16	OIL, ENGINE	10-1	2C13	PUMP, FUEL INJECTION (6404D)	25-44
P					
1B2	PAN, OIL	10-10	2F21	PUMP, FUEL INJECTION (6531A)	25-122
1B3	PAN, OIL (6404)	10-11	2G1	PUMP, FUEL INJECTION (6531A)	25-124
1B5	PAN, OIL (6531A)	10-13	2F5	PUMP, FUEL TRANSFER (6404A)	25-104
1B4	PAN, OIL (6531D)	10-12	2E16	PUMP, FUEL TRANSFER (6404T)	25-92
2H9	PANEL, INSTRUMENT	75-1	2E1	PUMP, INJECTION PUMP TRANSFER (6404A, T)	25-77
2H10	PANEL, INSTRUMENT	75-2	2G12	PUMP, INJECTION PUMP TRANSFER (6404D)	25-43
1F16	PIPE, AIR INTAKE	15-41	2C20	PUMP, INJECTION PUMP TRANSFER (6404D)	25-51
1F14	PIPE, AIR INTAKE (4270 OR 6404)	15-39	2D4	PUMP, INJECTION PUMP TRANSFER (6404D)	25-57
1F17	PIPE, AIR INTAKE (6362)	15-42	2G12	PUMP, INJECTION PUMP TRANSFER (6531A)	25-136
1F9	PIPE, AIR INTAKE (6404A)	15-34	1G7	PUMP, WATER	20-6
1F15	PIPE, AIR INTAKE (6531)	15-40	1G8	PUMP, WATER (4241, 6362)	20-7
1F18	PIPE, AIR INTAKE (6531D)	15-43	1G10	PUMP, WATER (6404)	20-9
2B1	PIPES, FUEL (DIESEL)	25-8	1G9	PUMP, WATER (6404A, T)	20-8
2A16	PIPES, FUEL (GASOLINE)	25-1	1G12	PUMP, WATER (6531A)	20-11
2G20	PIPES, FUEL CONVERTER (LP-GAS)	25-144	1G11	PUMP, WATER (6531D)	20-10
2D7	PIPES, FUEL INJECTION (6404A, T)	25-62	2H17	PUSH-PULL CABLE	75-10
2B8	PIPES, FUEL INJECTION PUMP (4270)	25-13	2H18	PUSH-PULL CABLE	75-11
2D15	PIPES, FUEL INJECTION PUMP (6404A, T)	25-70	R		
2B23	PIPES, FUEL INJECTION PUMP (6404D)	25-29	2H13	RACK PULLER PARTS	75-5
2C5	PIPES, FUEL INJECTION PUMP (6404D)	25-36	2H12	RACK PULLER, INJECTION PUMP SHUT-OFF	75-4
ENGINES - 400 AND 500 SERIES PC-1326 (24-NOV-76) LITHO IN U.S.A.					
1G3	RADIATOR	20-2	1G5	RADIATOR	20-4
1D10	REGULATING HOUSING, OIL PRESSURE (6531A)	10-64	2I25	RELAY, STARTING CIRCUIT	85-30
1C8	RINGS, PISTON (4241, 6362)	10-39			

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE
1C9 RINGS, PISTON (4270, 6404D)	10-40
1C11 RINGS, PISTON (6404A, T)	10-42
1C10 RINGS, PISTON (6404D)	10-41
1C12 RINGS, PISTON (6531D)	10-43
1C16 ROCKER ARM COVER	10-48
1C17 ROCKER ARM COVER	10-49
1C18 ROCKER ARMS	10-50
1C13 ROCKER ARMS (6531)	10-44
1C20 ROCKER ARMS (6531)	10-52
1C8 ROD, CONNECTING (4241, 6362)	10-39
1C9 ROD, CONNECTING (4270, 6404D)	10-40
1C11 ROD, CONNECTING (6404A, T)	10-42
1C10 ROD, CONNECTING (6404D)	10-41
1C12 ROD, CONNECTING (6531D)	10-43
S	
1B19 SEAL, REAR OIL	10-28
1B21 SEAL, REAR OIL (6404)	10-30
1B20 SEAL, REAR OIL (6404A, T)	10-29
1C1 SEAL, REAR OIL (6531A)	10-32
1B22 SEAL, REAR OIL (6531D)	10-31
1B6 SET, ENGINE OVERHAUL GASKET (4270)	10-14
1B8 SET, ENGINE OVERHAUL GASKET (6362)	10-16
1B14 SET, ENGINE OVERHAUL GASKET (6404D)	10-22
1B10 SET, ENGINE OVERHAUL GASKET (6531A)	10-18
1B12 SET, ENGINE OVERHAUL GASKET (6531D)	10-20
1B17 SET, ENGINE TUNE-UP GASKET (6404)	10-26
1B16 SET, ENGINE TUNE-UP GASKET (6404A)	10-25
1B7 SET, OIL PAN REPLACEMENT GASKET	10-15
2B9 SHAFT, INJECTION PUMP DRIVE (4270)	25-14
2B15 SHAFT, INJECTION PUMP DRIVE (4270)	25-20
2D11 SHAFT, INJECTION PUMP DRIVE (6404A, T)	25-66
2B24 SHAFT, INJECTION PUMP DRIVE (6404D)	25-30
2C9 SHAFT, INJECTION PUMP DRIVE (6404D)	25-40
2C17 SHAFT, INJECTION PUMP DRIVE (6404D)	25-48
2D1 SHAFT, INJECTION PUMP DRIVE (6404D)	25-54
2F13 SHAFT, INJECTION PUMP DRIVE (6531D)	25-113
2F17 SHAFT, INJECTION PUMP DRIVE (6531D)	25-117
1C18 SHAFT, ROCKER ARM	10-50
1C13 SHAFT, ROCKER ARM (6531)	10-44
1C20 SHAFT, ROCKER ARM (6531)	10-52
1G3 SHROUD, FAN	20-2
1G5 SHROUD, FAN	20-4
2G19 SHUT-OFF ELECTRIC FUEL	25-143
2H12 SHUT-OFF RACK PULLER, INJECTION PUMP	75-4
2G14 SHUT-OFF, FUEL (6404)	25-138
2G15 SHUT-OFF, FUEL (6404)	25-139
2H14 SIGHT GAUGE, OIL	75-6
2I11 SOLENOID SWITCH (DELCO-REMY)	85-15
2I16 SOLENOID SWITCH (DELCO-REMY)	85-20
2I24 SOLENOID SWITCH (DELCO-REMY)	85-29
2H22 SPARK PLUG CABLE AND LEAD WIRE KIT	85-4
2H20 SPARK PLUGS	85-2
2H15 SPEED CONTROL LEVER	75-8
2H16 SPEED CONTROL LEVER (6531)	75-9
1D11 SPEED-HOUR METER DRIVE	10-65
1D12 SPEED-HOUR METER DRIVE	10-66
1F13 STACK, AIR (6531A)	15-38
2I9 STARTER (DELCO-REMY)	85-13
2I10 STARTER (DELCO-REMY)	85-14
2I11 STARTER (DELCO-REMY)	85-15
2I12 STARTER (DELCO-REMY)	85-16
2I13 STARTER (DELCO-REMY)	85-17
2I14 STARTER (DELCO-REMY)	85-18
2I15 STARTER (DELCO-REMY)	85-19

GRID	PAGE
2I16 STARTER (DELCO-REMY)	85-20
2I22 STARTER (DELCO-REMY)	85-27
2I23 STARTER (DELCO-REMY)	85-28
2I17 STARTER (JOHN DEERE)	85-22
2I19 STARTER (JOHN DEERE)	85-24
2I20 STARTER (JOHN DEERE)	85-25
2I21 STARTER (JOHN DEERE)	85-26
1A16 STORAGE KIT, OFF-SEASON	10-1
2H3 STRAINER, FUEL (LP-GAS)	25-149
2H4 STRAINER, FUEL (LP-GAS)	25-150
1F21 STRAPS, LIFT	15-46
1F10 SUPPORT, AIR CLEANER	15-35
1F12 SUPPORT, AIR CLEANER (6531A)	15-37
2I11 SWITCH, SOLENOID (DELCO-REMY)	85-15
2I16 SWITCH, SOLENOID (DELCO-REMY)	85-20
2I24 SWITCH, SOLENOID (DELCO-REMY)	85-29
T	
1G20 THERMOSTAT (6531A)	20-19
1G16 THERMOSTAT HOUSING	20-15
1G13 THERMOSTAT HOUSING (4241, 4270)	20-12
1G15 THERMOSTAT HOUSING (6404D)	20-14
1G16 THERMOSTATS	20-15
1G13 THERMOSTATS (4241, 4270)	20-12
1G17 THERMOSTATS (6404A, T)	20-16
1G18 THERMOSTATS (6404A, T)	20-17
1G15 THERMOSTATS (6404D)	20-14
1G19 THERMOSTATS (6531D)	20-18
2H17 THROTTLE CONTROL CABLE	75-10
2H18 THROTTLE CONTROL CABLE	75-11
2B11 THROTTLE LINKAGE, INJECTION PUMP (4270)	25-16
2B17 THROTTLE LINKAGE, INJECTION PUMP (4270)	25-22
2C1 THROTTLE LINKAGE, INJECTION PUMP (6404D)	25-32
2F12 THROTTLE LINKAGE, INJECTION PUMP (6531D)	25-112
2F16 THROTTLE LINKAGE, INJECTION PUMP (6531D)	25-116
1B19 TIMING GEAR COVER	10-28
1B21 TIMING GEAR COVER (6404)	10-30
1B20 TIMING GEAR COVER (6404A, T)	10-29
1C1 TIMING GEAR COVER (6531A)	10-32
1B22 TIMING GEAR COVER (6531D)	10-31
2B12 TRANSFER PUMP, INJECTION PUMP (4270)	25-17
2B19 TRANSFER PUMP, INJECTION PUMP (4270)	25-24
2F5 TRANSFER PUMP, INJECTION PUMP (6404A)	25-104
2D8 TRANSFER PUMP, INJECTION PUMP (6404A, T)	25-63
2E1 TRANSFER PUMP, INJECTION PUMP (6404A, T)	25-77
2C2 TRANSFER PUMP, INJECTION PUMP (6404D)	25-33
2C12 TRANSFER PUMP, INJECTION PUMP (6404D)	25-43
2C20 TRANSFER PUMP, INJECTION PUMP (6404D)	25-51
2D4 TRANSFER PUMP, INJECTION PUMP (6404D)	25-57
2E16 TRANSFER PUMP, INJECTION PUMP (6404T)	25-92
2G12 TRANSFER PUMP, INJECTION PUMP (6531A)	25-136
1E20 TURBOCHARGER (AIRESEARCH)	15-23
1E22 TURBOCHARGER (AIRESEARCH)	15-25
1F3 TURBOCHARGER (AIRESEARCH) (6531A)	15-28
1F1 TURBOCHARGER (SCHWITZER)	15-26
1F4 TURBOCHARGER (SCHWITZER)	15-29
1E21 TURBOCHARGER (SCHWITZER) (6404A, T)	15-24
1F2 TURBOCHARGER (SCHWITZER) (6404A, T)	15-27
1E19 TURBOCHARGER (6531A)	15-22
1E17 TURBOCHARGER AIR AND OIL PIPES	15-20
1E18 TURBOCHARGER AIR AND OIL PIPES	15-21

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID	PAGE
	V			
2B7	VALVE, FUEL CHECK	25-12		
1C18	VALVE, INTAKE AND EXHAUST	10-50		
1C13	VALVE, INTAKE AND EXHAUST (6531)	10-44		
1C20	VALVE, INTAKE AND EXHAUST (6531)	10-52		
1D2	VALVE, OIL COOLER BYPASS (6404)	10-56		
1C18	VALVE, ROCKER ARM	10-50		
1C13	VALVE, ROCKER ARM (6531)	10-44		
1C20	VALVE, ROCKER ARM (6531)	10-52		

	W	
1G17	WATER MANIFOLD (6404A, T)	20-16
1G18	WATER MANIFOLD (6404A, T)	20-17
1G20	WATER MANIFOLD (6531A)	20-19
1G19	WATER MANIFOLD (6531D)	20-18
1G14	WATER OUTLET MANIFOLD	20-13
1G15	WATER OUTLET MANIFOLD (6404D)	20-14
1G7	WATER PUMP	20-6
1G8	WATER PUMP (4241, 6362)	20-7
1G10	WATER PUMP (6404)	20-9
1G9	WATER PUMP (6404A, T)	20-8
1G12	WATER PUMP (6531A)	20-11
1G11	WATER PUMP (6531D)	20-10
2I25	WIRING HARNESSES	85-30

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS