

John Deere

CLICK ANYWHERE FOR MORE DETAILS

MODEL:

8450 S/N 0-5500

8650 S/N 0-8000

Tractors

**OPERATOR'S
MANUAL**



JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-O-OMRW16845

DEALER
SERVICE SHOP
COPY

CLICK ANYWHERE FOR MORE DETAILS



MANUAL PREVIEW

OPERATOR'S
MANUAL

JENSALES[®]

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

 
Contents

Safety	2
Controls and Instruments	9
Lighting and Signals	15
Operator's Station	18
Engine Break-in	25
Prestarting Checks	27
Operating the Engine	30
Operating the Tractor	39
Rockshaft and Three-Point Hitch	43
Remote Hydraulic Cylinders	53
Drawbar and PTO	59
Ballast	65
Wheels, Tires, and Tread	70
Transporting	78
Fuels and Lubricants	82
Lubrication and Maintenance	87
Trouble Shooting	107
Service	118
Storage	145
Specifications	148
Daily Maintenance	151
Lubrication and Maintenance Record	152
Index	168

Controls and Instruments


CONTROLS AND INSTRUMENTS

- | | |
|----------------------------|--------------------------------|
| 1—Left Wiper Switch | 9—Console Lamp |
| 2—Air Conditioning Control | 10—Console Lamp Switch |
| 3—Blower Switch | 11—Dome Lamp |
| 4—Heater Control | 12—Radio Tuning Knob |
| 5—Right Wiper Switch | 13—Radio Tuning Push Buttons |
| 6—Clock | 14—Radio On-Off/Volume Control |
| 7—Hour Set Touch Pad | 15—Radio Tone Control |
| 8—Minute Set Touch Pad | 16—Air Louver |

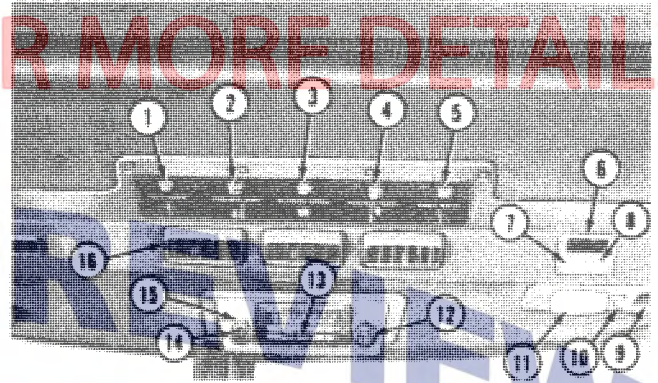

AJB/RW4072 U01;C101 X2 011081

- | | |
|------------------------------------|----------------------------------|
| 1—PTO Lever | 12—Rockshaft Depth Stop Knob |
| 2—Steering Wheel Telescope Release | 13—Rockshaft Control Lever |
| 3—Turn Signal Control | 14—Rockshaft Load Selector Lever |
| 4—Steering Wheel | 15—Throttle Pedal |
| 5—Lighter | 16—Brake Pedal |
| 6—Key Switch | 17—Differential Lock |
| 7—Engines Stop Knob | 18—Steering Wheel Tilt Release |
| 8—Horn Button | 19—Dimmer Switch |
| 9—Hand Throttle | 20—Clutch Pedal |
| 10—Shift Lever | 21—Light Switch |
| 11—Remote Cylinder Levers | 22—Starting Aid Switch |

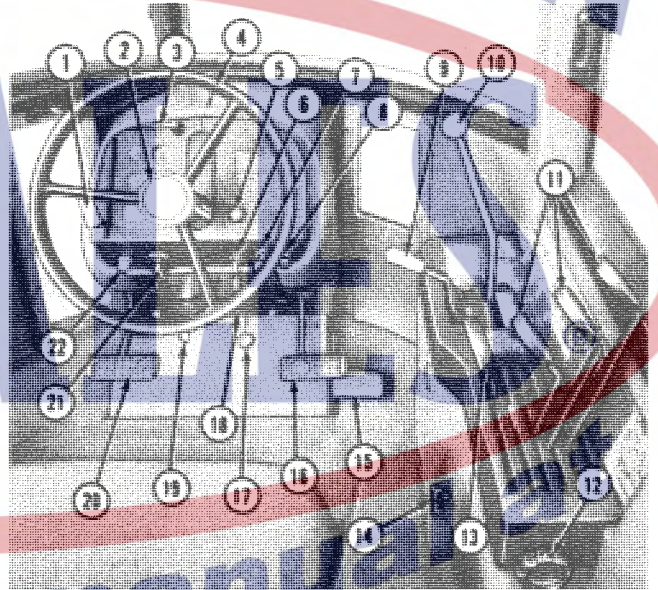 


JENSALES.COM

AJB/RW4073 U01;C102 X2 011081


or Call 800-443-0625

- | |
|-------------------------------|
| 1—Engine Oil Pressure Gauge |
| 2—Voltmeter |
| 3—Fuel Gauge |
| 4—Engine Temperature Gauge |
| 5—Tachometer Display |
| 6—Head Lamp Hi-Beam Indicator |
| 7—Tachometer Touch Pad |
| 8—Engine Stop Indicator |
| 9—Service Indicator |
| 10—Hourmeter |
| 11—INVESTIGATOR II™ System |

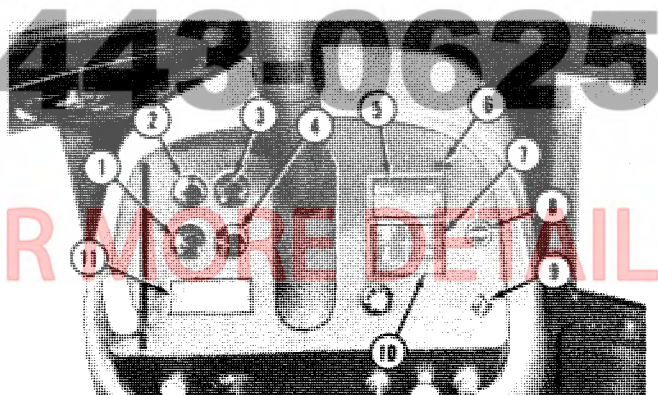 

AJB/RW4074 U01;C103 X2 011081

 - 1—Transmission Oil Pressure Indicator
- 2—Engine Oil Pressure Indicator
- 3—Transmission Lube Pressure Indicator
- 4—Clutch Temperature Indicator
- 5—Hydraulic Oil Temperature Indicator
- 6—Air Filter Restriction Indicator
- 7—Transmission Filter Restriction Indicator
- 8—INVESTIGATOR II Warning System

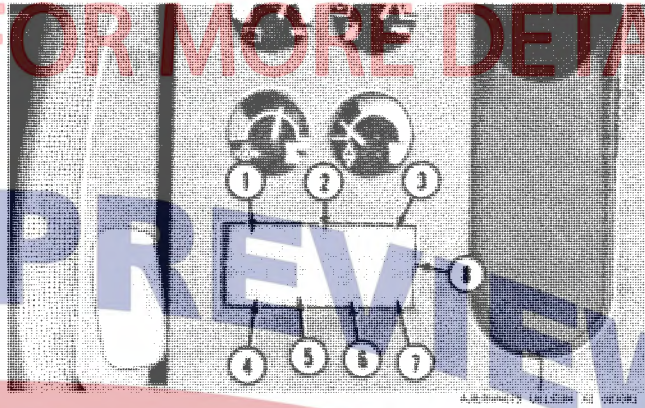


CHECK INSTRUMENTS OFTEN

Leave key switch on while operating tractor so instruments will function. Form a habit of checking them often.

Check indicator lamps and audible warning signal each time engine is started. All INVESTIGATOR II warning lamps (A), amber (B), and red (C) warning lamps should glow for 5 seconds with key switch is turned to first position. Audible warning tone should be heard while lamps glow.

IMPORTANT: See your John Deere dealer if any instrument malfunctions. Operate tractor only if all instruments work properly.

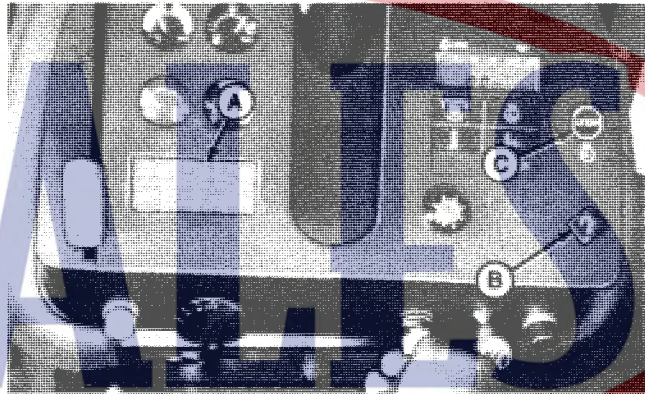

JENSALES.COM

 
AJB/RW4076 U01/C105 X2 021081

or Call 800-443-0625

WATCH FUEL LEVEL

Stop to refuel before fuel gauge (A) reaches empty mark (B).
Do not allow a diesel engine to run out of fuel.


Use diesel fuel specified in Fuels Section.

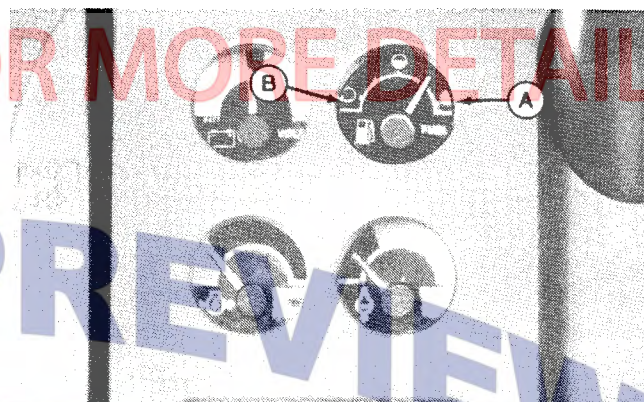

AJB/RW4077 U01/C106 CX2 021081

CHECK VOLTMETER

With key switch on and engine stopped, voltmeter (A) should reach left-hand green band. If it does not batteries are undercharged. With engine running, it should rise to right-hand green band. If needle moves into either amber band, amber "Service Alert" lamp glows. If needle stays in either amber band, see your John Deere dealer.

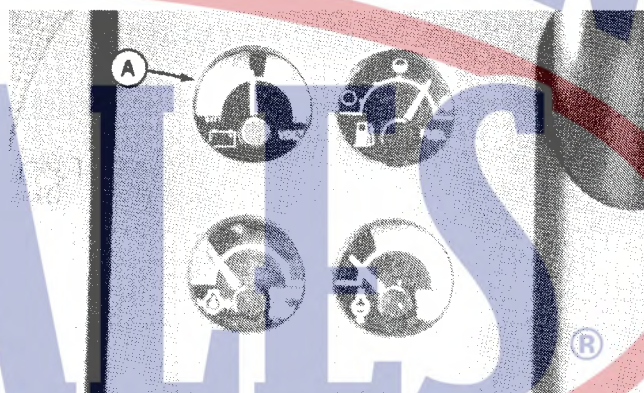

AJB/RW4076 U01/C107 X2 021061

OBEY 'STOP ENGINE' SIGNAL

A red "stop engine" indicator (A) flashes whenever a vital tractor system malfunctions (such as cooling or lubrication, etc.). A steady, audible tone also accompanies this indicator.

IMPORTANT: If the "stop engine" indicator comes on, shut down the engine immediately and determine and correct the cause.



OBSERVE 'SERVICE ALERT' SIGNAL

An amber "service alert" signal (A) glows when a problem develops which does not require immediate action, but should be corrected at the earliest convenience. An audible "beep" alerts the operator to actuation of this indicator.



AJB/RW4076 U01/C107 X2 021061