

John Deere

CLICK ANYWHERE FOR MORE DETAILS

MODEL:

4050 S/n(5511-6509)

4250 S/n(9673 & Up)

4450 S/n(19805 & Up)

**OPERATOR'S
MANUAL**



JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-O-OMRW21230



CLICK ANYWHERE FOR MORE DETAILS

SERVICE SHOP
DEALER COPY

MANUAL PREVIEW

JENSALES

OPERATOR'S
MANUAL

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Contents

SAFETY SIGNS 05-1

Safety 10-1

Controls and Instruments

Control Location	15-1
Instrument Identification	15-2
Gauges and Indicators Description	15-3
Tachometer	15-9

Lighting and Signals

Switch	20-1
Lamps and Signals	20-1
Electrical Outlets	20-3

Operator's Station

SOUND-GARD Body Temperature Controls	25-1
Window Wipers and Washers	25-3
Windows	25-4
Radio	25-6
Seat	25-7
Steering Wheel	25-11

Engine Break-in 30-1

Prestarting Checks 35-1

Operating the Engine

Start-up Procedure	40-3
Cold Weather Starting	40-4
Starting Aids	40-6
Warm-Up and Operation	40-8
Stopping the Engine	40-11

Operating the Tractor

Brakes	45-1
Differential Lock	45-1
Operating Power Shift Transmission	45-2
Operating QUAD-RANGE Transmission	45-3
Mechanical Front-Wheel Drive (MFWD)	45-7

Rockshaft and 3-Point Hitch 50-1

Component Identification	50-2
Rockshaft Control Lever	50-2
Rockshaft Selector Lever	50-4
Speed of Drop	50-6
Sway Blocks	50-6
Hitch	50-7
Connecting Implement	50-11
Hi-Crop 3-Point Hitch	50-15

Remote Hydraulic Cylinders

Hose Tips	55-1
Identifying SCV	55-1
Connecting Cylinder Hoses	55-2
Operating SCV	55-4
Setting Remote Cylinder Stroke	55-7
Disconnecting Cylinder Hoses	55-8
Adjusting SCV Linkage	55-8

Drawbar and PTO

Drawbar Adjustments	60-2
Power Take-Off (PTO)	60-5

Ballast

Importance of Ballast	65-1
Measuring Wheel Slip	65-2
Rear Ballast	65-3
Front Ballast	65-6

Wheels, Tires and Treads

Wheel Tightening	70-1
Front Wheel Spacing	70-2
Toe-in	70-5
Toe-in (MFWD)	70-6
Rear Wheel Spacing	70-8
MFWD Wheel Spacing	70-22
Front Fender Adjustment	70-27

Transporting

Driving	75-1
Carrier	75-3
Towing	75-4

Fuels and Lubricants

Fuel	80-1
Engine Oil	80-2
Transmission-Hydraulic Oil	80-3
Lubricants	80-4
Lubricant Storage	80-6

Lubrication and Maintenance

First 100 Hours	85-2
10 Hour Service	90-1
200 Hour Service	95-1
600 Hour Service	100-1
1200 Hour Service	105-1
Annual Service	110-1
2 Year Service	115-1
As Required	120-1

Continued on next page

Contents

Troubleshooting

Engine	125-1
Transmission	125-4
Hydraulic System	125-5
Brakes	125-6
Rockshaft 3-Point Hitch	125-6
Remote Hydraulic Cylinders	125-7
Electrical	125-8
SOUND-GARD® Body	125-10

Service

Access	130-1
Air Cleaner	130-4
Belts	130-7
Fuel System	130-10
Cooling System	130-13
Electrical	130-16
Lighting	130-18
Brakes	130-24
Tires	130-25
Heating and Air Conditioner	130-28

Storage

Placing Tractor in Storage	135-1
Removing Tractor From Storage	135-3

Crime Prevention Tips	140-1
-----------------------------	-------

Specifications

General	145-1
Ground Speeds	145-5

Identification Numbers

Identification Plates	150-1
-----------------------------	-------


Daily Maintenance	155-1
-------------------------	-------

Lubrication and Maintenance Records

200 Hour Service	160-1
600 Hour Service	160-6
1200 Hour Service	160-7
Annual Service	160-8
Two Year Service	160-8
As Required Service	160-9

Index	165-1
-------------	-------

Service Literature Form

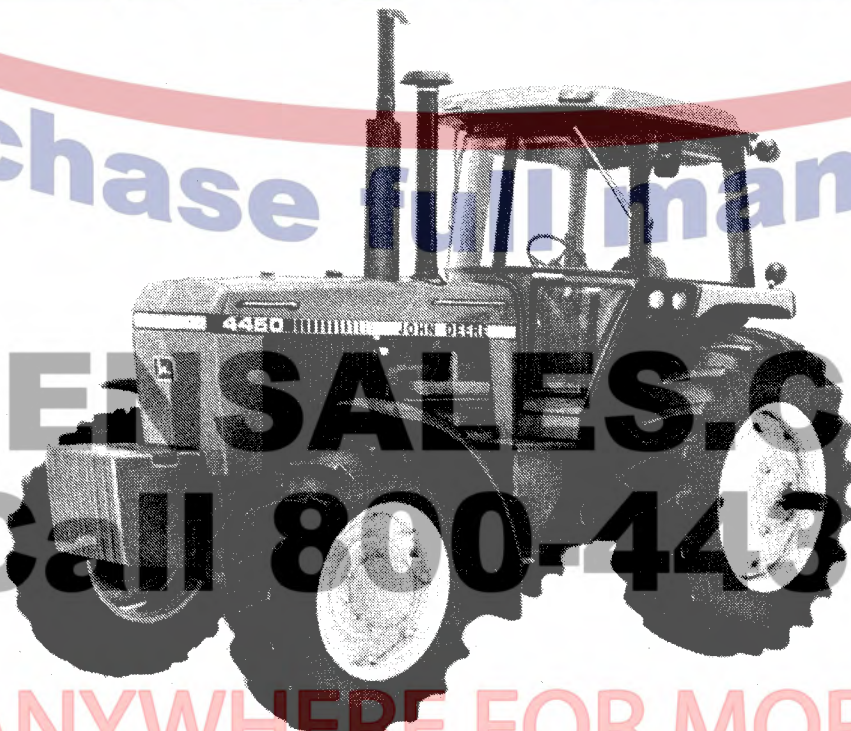

John Deere 4450 Tractor