

John Deere

 
CLICK ANYWHERE FOR MORE DETAILS

MODEL:

2040

(S/n 350,000 & Up)

**PARTS
MANUAL**

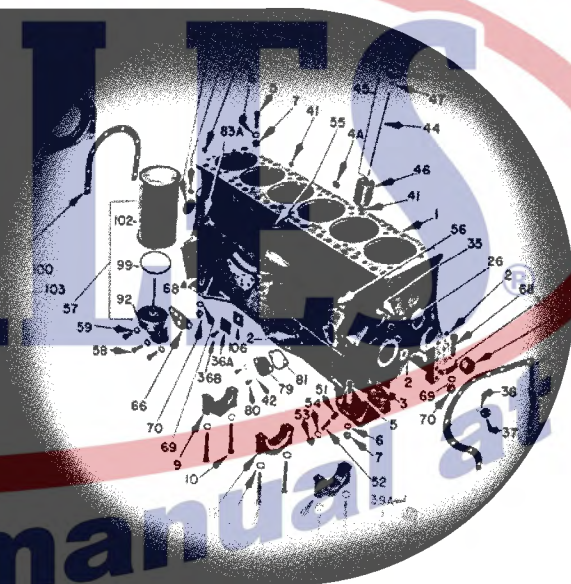

JENSALES.COM

or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-P-PC1763

2040
Tractor
Tractor Serial No.
(350,000-)

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

 
JENSALES®
PARTS
CATALOG

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Waterloo Tractor Works
PC-1763
LITHO IN U.S.A. (NEW)

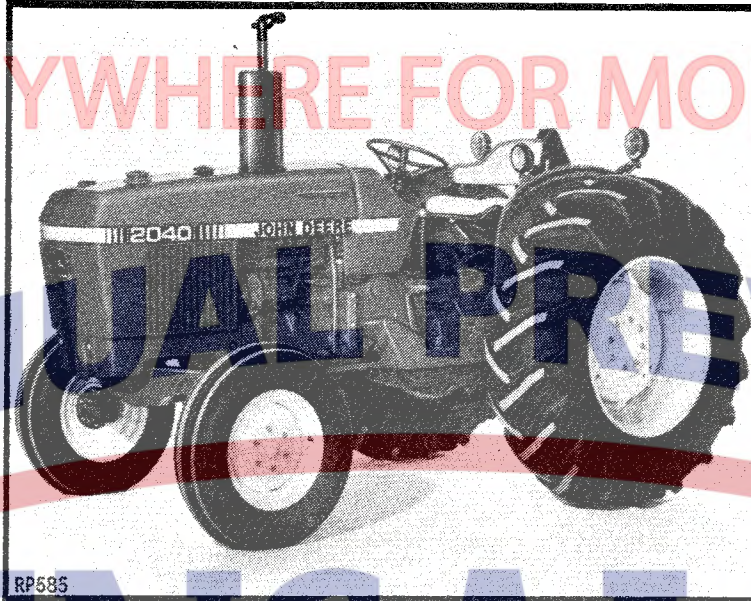

*John Deere 2040 Tractor
(Serial No. 350000-)*



*John Deere 2040 Tractor with Roll-Gard and Canopy
(Serial No. 350000-)*

Specifications and design subject to change without notice

JENSALLES.COM

or Call 800-443-0625

General	10
Engine	20
Fuel and Air	30
Electrical	40
Power Train	50
Steering and Brakes	60
Hydraulics	70
Wheels, Front Axles, Sheet Metal	80
Operator's Station	90
Numerical Index	95

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
A			A24 CONNECTING ROD		
K16	ADJUSTER, SEAT	80-36	F13	COUNTERSHAFT	20-12
C22	AID, STARTING	30-34	F14	COUNTERSHAFT BEARING SUPPORT	50-26
B16	AIR CLEANER	30-2	I23	COUPLER LINES	70-31
B18	AIR INTAKE MANIFOLD	30-4	I24	COUPLER, BREAKAWAY	70-32
D3	ALTERNATOR MOUNTING	40-2	I25	COUPLER, BREAKAWAY	70-33
D5	ALTERNATOR PARTS	40-4	A16	COVER, ROCKER ARM	20-4
D7	ALTERNATOR PARTS	40-6	I19	COVER, SCV	70-26
I8	ARM, LIFT	70-15	A20	COVER, TIMING GEAR	20-8
I17	ARM, SCV	70-24	K18	COWL	80-38
H8	ARM, STEERING	60-6	A22	CRANKSHAFT	20-10
J16	ARM, STEERING	80-10	K15	CUSHION, SEAT	80-35
C8	AUTOMATIC ADVANCE	30-20	B14	CYLINDER HEAD REPLACEMENT GASKETS	20-28
E3	AUXILIARY ELECTRICAL OUTLET, 7-TERMINAL	40-28	I9	CYLINDER HOUSING, ROCKSHAFT	70-16
J12	AXLE, FRONT	80-6	A14	CYLINDER LINER	20-2
J19	AXLE, FRONT, MFWD	80-14	A14	CYLINDER, BLOCK	20-2
G20	AXLE, REAR	50-60	D		
B			K18	DASH	80-38
D9	BATTERY	40-8	K10	DECALS	80-30
D9	BATTERY CABLE	40-8	K14	DELUXE SEAT	80-34
A14	BEARING CAP	20-2	I15	DETENT PISTON	70-22
A24	BEARING, CONNECTING ROD	20-12	G1	DIFFERENTIAL DRIVE SHAFT	50-40
A22	BEARING, MAIN	20-10	G16	DIFFERENTIAL DRIVE SHAFT	50-56
A22	BEARING, THRUST	20-10	G24	DIFFERENTIAL HOUSING, MFWD	50-64
B8	BELT, FAN	20-22	G15	DIFFERENTIAL LOCK LEVER	50-55
L2	BELT, SEAT	90-1	G22	DIFFERENTIAL RING GEAR AND PINION	50-62
A14	BLOCK, CYLINDER	20-2	A14	DIPSTICK	20-2
A13	BLOCK, SHORT	20-1	F9	DIPSTICK, TRANSMISSION	50-22
J5	BLOCK, SWAY	70-39	F20	DIPSTICK, TRANSMISSION	50-34
E5	BRACKET, ELECTRICAL REMOTE CONTROL	40-30	H10	DISK, BRAKE	60-8
H10	BRAKE DISK	60-8	E16	DISK, CLUTCH	50-4
G16	BRAKE DRUM	50-56	E17	DISK, CLUTCH	50-5
H14	BRAKE LEVER	60-12	F3	DISK, MFWD	50-16
H13	BRAKE LINES	60-11	K3	DISK, REAR WHEEL	80-22
H16	BRAKE LINING	60-14	K1	DISK, REAR WHEEL, MFWD	80-20
H11	BRAKE PEDAL	60-9	J4	DRAFT LINKS	70-38
H12	BRAKE VALVE	60-10	H8	DRAG LINK	60-6
I24	BREAKAWAY COUPLER	70-32	J8	DRAWBAR	80-2
I25	BREAKAWAY COUPLER	70-33	F24	DRIVE SHAFT	50-38
C			F12	DRIVE SHAFT, DIFFERENTIAL	50-25
D9	CABLE, BATTERY	40-8	G21	DRIVE SHAFT, MFWD	50-61
C21	CABLE, SHUT-OFF	30-33	H19	DRIVE, PUMP	70-1
A18	CAMSHAFT	20-6	G18	DRIVESHAFT	50-58
L3	CANOPY	90-2	G16	DRUM, BRAKE	50-56
I7	CAP, FILLER	70-14	I24	DUST PLUG	70-32
G18	CARRIER, REAR AXLE	50-58	E		
F7	CASE, TRANSMISSION	50-20	E7	ELECTRIC REMOTE CONTROL KIT	40-32
F18	CASE, TRANSMISSION	50-32	E3	ELECTRICAL OUTLET SOCKET, 7-TERMINAL	40-28
J1	CENTER LINK	70-34	E5	ELECTRICAL REMOTE CONTROL	40-30
D17	CIRCUIT BREAKER	40-16	E5	ELECTRICAL REMOTE CONTROL BRACKETS	40-30
B16	CLEANER, AIR	30-2	E6	ELECTRICAL REMOTE CONTROL KIT	40-31
E16	CLUTCH	50-4	E5	ELECTRICAL REMOTE CONTROL SWITCH	40-30
E17	CLUTCH	50-5	E8	ELECTRICAL REMOTE CONTROL WIRING KIT	40-34
E19	CLUTCH CONTROL VALVE	50-8	B16	ELEMENT, AIR CLEANER	30-2
E17	CLUTCH DISK	50-5	G8	ELEMENT, FILTER	50-48
E14	CLUTCH HOUSING	50-2	K9	EMBLEM, SMV	80-28
E23	CLUTCH OIL MANIFOLD	50-12	B12	ENGINE GASKET SET	20-26
E18	CLUTCH PEDAL	50-6	A14	ENGINE OIL FILTER	20-2
E17	CLUTCH PLATE	50-5	D22	ENGINE WIRING	40-22
K12	CONDITIONER, ENGINE COOLANT	80-32	B19	EXHAUST MANIFOLD	30-5
			A18	EXHAUST VALVE	20-6

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
K22	EXTENSION, PLATFORM	80-42	E14	HOUSING, CLUTCH	50-2
	F		G22	HOUSING, DIFFERENTIAL, MFWD	50-62
B8	FAN	20-22	G24	HOUSING, DIFFERENTIAL, MFWD	50-64
B8	FAN BELT	20-22	B1	HOUSING, FLYWHEEL	20-14
B5	FAN SHROUD	20-18	C8	HOUSING, FUEL INJECTION PUMP	30-20
K5	FENDER, REAR	80-24	J21	HOUSING, MFWD	80-16
I7	FILLER CAP	70-14	G18	HOUSING, REAR AXLE	50-58
G8	FILTER ELEMENT	50-48	I5	HOUSING, ROCKSHAFT	70-12
F20	FILTER SCREEN	50-34	I7	HOUSING, ROCKSHAFT	70-14
A14	FILTER, ENGINE OIL	20-2	I9	HOUSING, ROCKSHAFT CYLINDER	70-16
C1	FILTER, FUEL	30-12	I15	HOUSING, SELECTIVE CONTROL VALVE	70-22
C22	FLUID, STARTING	30-34	H6	HOUSING, STEERING	60-4
B1	FLYWHEEL	20-14	B7	HOUSING, THERMOSTAT	20-21
B1	FLYWHEEL HOUSING	20-14	B8	HOUSING, WATER PUMP	20-22
K16	FRAME, SEAT	80-36	C10	HUB, DRIVE, FUEL INJECTION PUMP	30-22
J12	FRONT AXLE	80-6	J23	HUB, WHEEL	80-18
J17	FRONT AXLE SUPPORT, MFWD	80-12	H24	HYDRAULIC OIL LINES	70-6
J19	FRONT AXLE, MFWD	80-14	I1	HYDRAULIC OIL LINES	70-8
D19	FRONT LAMP	40-18	I3	HYDRAULIC OIL RESERVOIR	70-10
K7	FRONT PLATE	80-26	H20	HYDRAULIC PUMP	70-2
J10	FRONT SUPPORT	80-4	H22	HYDRAULIC PUMP	70-4
J23	FRONT WHEEL	80-18	H19	HYDRAULIC PUMP DRIVE	70-1
C1	FUEL FILTER	30-12		I	
D15	FUEL GAUGE	40-14	D17	IGNITION SWITCH	40-16
C4	FUEL INJECTION NOZZLE	30-16	K12	INHIBITOR, CORROSION	80-32
C10	FUEL INJECTION PUMP HEAD AND ROTOR	30-22	C4	INJECTION NOZZLE	30-16
C8	FUEL INJECTION PUMP HOUSING	30-20	C6	INJECTION PUMP AND PIPES	30-18
C3	FUEL PUMP	30-14	C16	INJECTION PUMP GASKET SET	30-28
B23	FUEL TANK	30-10	K20	INSTRUMENT PANEL	80-40
	G		A18	INTAKE VALVE	20-6
				K	
K23	GARD, GRILLE	80-43	E3	KIT, AUXILIARY ELECTRICAL OUTLET SOCKET	40-28
K24	GARD, LIGHT	80-44	E7	KIT, ELECTRIC REMOTE CONTROL	40-32
C16	GASKET SET	30-28	E6	KIT, ELECTRICAL REMOTE CONTROL	40-31
E19	GASKET, CLUTCH CONTROL VALVE	50-8	E8	KIT, ELECTRICAL REMOTE CONTROL WIRING	40-34
E14	GASKET, CLUTCH HOUSING	50-2	E4	KIT, SUPPLEMENTARY WIRING	40-29
E23	GASKET, CLUTCH OIL MANIFOLD	50-12	E10	KIT, TERMINAL AND WIRING	40-36
A16	GASKET, HEAD	20-4	J14	KNEE, FRONT AXLE	80-8
B14	GASKETS, CYLINDER HEAD	20-28	J14	KNUCKLE, FRONT AXLE	80-8
D15	GAUGE, FUEL	40-14		L	
D15	GAUGE, TEMPERATURE	40-14	D19	LAMP, FRONT	40-18
G5	GEAR SHIFT LEVER	50-44	D20	LAMP, REAR WORK	40-19
F16	GEAR SHIFTER	50-30	D21	LAMP, WARNING	40-20
G3	GEAR SHIFTER	50-42	H14	LEVER, BRAKE	60-12
G22	GEAR, BEVEL PINION AND SHAFT	50-62	G15	LEVER, DIFFERENTIAL LOCK	50-55
F14	GEAR, TRANSMISSION DRIVE	50-27	G5	LEVER, GEAR SHIFT	50-44
K7	GRILLE	80-26	I12	LEVER, ROCKSHAFT CONTROL	70-19
K23	GRILLE GARD	80-43	I17	LEVER, SCV	70-24
D9	GROUND STRAP	40-8	I8	LIFT ARM	70-15
G9	GUARD, PTO	50-49	J2	LIFT LINKS	70-36
	H		K24	LIGHT GARD	80-44
K7	HANDLE, MOUNTING	80-26	D13	LIGHT SWITCH	40-12
D24	HARNESS, WIRING	40-24	D17	LIGHT SWITCH	40-16
E1	HARNESS, WIRING	40-26	D19	LIGHT, HEAD	40-18
A16	HEAD GASKET	20-4	D13	LIGHT, INDICATOR	40-12
J10	HITCH, FRONT	80-4	D21	LIGHT, WARNING	40-20
K7	HOOD	80-26	H13	LINE, BRAKE	60-11
B5	HOSE, RADIATOR	20-18	E23	LINE, OIL, CLUTCH OIL MANIFOLD	50-12
D15	HOUR METER	40-14			

ALPHABETICAL INDEX - CONTINUED




GRID		PAGE	GRID		PAGE
A14	LINER, CYLINDER	20-2	E17	PLATE, CLUTCH	50-5
I23	LINES, BREAKAWAY COUPLER	70-31	K7	PLATE, FRONT	80-26
H24	LINES, HYDRAULIC OIL	70-6	K10	PLATE, NAME	80-30
I1	LINES, HYDRAULIC OIL	70-8	K22	PLATFORM EXTENSION	80-42
G6	LINES, TRANSMISSION	50-46	I20	POPPET VALVE	70-28
F1	LINES, TRANSMISSION OIL PUMP	50-14	H9	PRESSURE CONTROL VALVE	60-7
H16	LINING, BRAKE	60-14	G14	PTO REAR SHIFTER	50-54
J1	LINK, CENTER	70-34	G9	PTO SHIELD	50-49
J4	LINK, DRAFT	70-38	G12	PTO, REAR 540	50-52
H8	LINK, DRAG	60-6	A22	PULLEY, CRANKSHAFT	20-10
J2	LINK, LIFT	70-36	C14	PUMP COVER	30-26
I11	LINKAGE, ROCKSHAFT CYLINDER	70-18	H19	PUMP DRIVE	70-1
I13	LOAD CONTROL SHAFT	70-20	C3	PUMP, FUEL	30-14
G15	LOCK, DIFFERENTIAL	50-55	C10	PUMP, FUEL INJECTION, DRIVE SHAFT	30-22
K12	LOCTITE	80-32	C10	PUMP, FUEL INJECTION, HEAD AND ROTOR	30-22
F15	LUBRICATING LINES, TRANSMISSION	50-28	C10	PUMP, FUEL INJECTION, METERING VALVE	30-22
M			H20	PUMP, HYDRAULIC	70-2
A22	MAIN BEARING	20-10	H22	PUMP, HYDRAULIC	70-4
B18	MANIFOLD, AIR INTAKE	30-4	C6	PUMP, INJECTION, AND PIPES	30-18
E23	MANIFOLD, CLUTCH OIL	50-12	B4	PUMP, OIL	20-17
B19	MANIFOLD, EXHAUST	30-5	C12	PUMP, TRANSFER	30-24
K7	MEDALLION	80-26	E21	PUMP, TRANSMISSION OIL	50-10
F3	MFWD	50-16	B10	PUMP, WATER	20-24
G24	MFWD	50-64	Q		
H1	MFWD	50-66	I12	QUADRANT, ROCKSHAFT	70-19
G22	MFWD HOUSING	50-62	R		
D11	MOTOR, STARTING	40-10	B5	RADIATOR	20-18
D12	MOTOR, STARTING	40-11	G20	REAR AXLE	50-60
K7	MOUNTING HANDLE	80-26	G18	REAR AXLE HOUSING	50-58
D3	MOUNTING, ALTERNATOR	40-2	K5	REAR FENDER	80-24
B20	MUFFLER COVER	30-6	G14	REAR PTO	50-54
B20	MUFFLER, VERTICAL	30-6	K1	REAR WHEELS, MFWD	80-20
N			D20	REAR WORK LAMP	40-19
K10	NAME PLATE	80-30	D13	RELAY	40-12
C4	NOZZLE, FUEL INJECTION	30-16	E6	REMOTE CONTROL KIT, ELECTRICAL	40-31
O			E8	REMOTE CONTROL WIRING KIT, ELECTRICAL	40-34
G8	OIL FILTER COVER	50-48	E5	REMOTE CONTROL, ELECTRICAL	40-30
A14	OIL FILTER, ENGINE	20-2	I3	RESERVOIR, HYDRAULIC OIL	70-10
A20	OIL INLET	20-8	J23	RIM	80-18
E23	OIL LINE, CLUTCH OIL MANIFOLD	50-12	K3	RIM, REAR WHEEL	80-22
B3	OIL PAN	20-16	K1	RIM, REAR, MFWD	80-20
B4	OIL PUMP	20-17	G22	RING AND PINION, MFWD	50-62
P			G16	RING GEAR AND DIFFERENTIAL DRIVE SHAFT	50-56
B3	PAN, OIL	20-16	A24	RINGS, PISTON	20-12
K20	PANEL, INSTRUMENT	80-40	A18	ROCKER ARM	20-6
H11	PEDAL, BRAKE	60-9	A16	ROCKER ARM COVER	20-4
E18	PEDAL, CLUTCH	50-6	I19	ROCKER, SCV	70-26
H1	PINION, MFWD	50-66	I8	ROCKSHAFT	70-15
C6	PIPES, FUEL INJECTION	30-18	I12	ROCKSHAFT CONTROL LEVER	70-19
A24	PISTON	20-12	I9	ROCKSHAFT CYLINDER HOUSING	70-16
A24	PISTON PIN	20-12	I5	ROCKSHAFT HOUSING	70-12
A24	PISTON RINGS	20-12	I7	ROCKSHAFT HOUSING	70-14
I8	PISTON, ROCKSHAFT	70-15	I11	ROCKSHAFT LINKAGE	70-18
H6	PISTON, STEERING	60-4	A24	ROD, CONNECTING	20-12
H1	PLANETARY, MFWD	50-66	J16	ROD, TIE	80-10
			L3	ROLL-GARD	90-2
			C10	ROTOR, FUEL INJECTION PUMP	30-22

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
S			T		
F9	SCREEN, TRANSMISSION	50-22	D15	TACHOMETER	40-14
K12	SEALANT	80-32	B23	TANK, FUEL	30-10
D20	SEALED BEAM	40-19	A18	TAPPET	20-6
L2	SEAT BELT	90-1	D15	TEMPERATURE GAUGE	40-14
K15	SEAT CUSHION	80-35	E10	TERMINAL AND WIRING KIT	40-36
K16	SEAT FRAME	80-36	B7	THERMOSTAT	20-21
K16	SEAT SUPPORT	80-36	B7	THERMOSTAT HOUSING	20-21
K14	SEAT, DELUXE	80-34	C18	THROTTLE LINKAGE	30-30
I15	SELECTIVE CONTROL VALVE HOUSING	70-22	A22	THRUST BEARING	20-10
A20	SENDER	20-8	J16	TIE ROD	80-10
A16	SENDER, ENGINE TEMPERATURE	20-4	D13	TIMER	40-12
B23	SENDER, FUEL	30-10	A20	TIMING GEAR COVER	20-8
B1	SENDER, OIL PRESSURE	20-14	K25	TOOLBOX	80-45
B12	SET, ENGINE GASKET	20-26	C12	TRANSFER PUMP	30-24
F12	SHAFT, DIFFERENTIAL DRIVE	50-25	F7	TRANSMISSION CASE	50-20
G1	SHAFT, DIFFERENTIAL DRIVE	50-40	F18	TRANSMISSION CASE	50-32
F24	SHAFT, DRIVE	50-38	K21	TRANSMISSION CASE SHIELD	80-41
G21	SHAFT, DRIVE, MFWD	50-61	F11	TRANSMISSION DRIVE SHAFT	50-24
C10	SHAFT, INJECTION PUMP DRIVE	30-22	F22	TRANSMISSION INPUT SHAFT	50-36
I13	SHAFT, LOAD CONTROL	70-20	G6	TRANSMISSION LINES	50-46
G10	SHAFT, PTO, 540 RPM	50-50	E21	TRANSMISSION OIL PUMP	50-10
F16	SHAFT, SHIFTER	50-30	F1	TRANSMISSION OIL PUMP LINES	50-14
F11	SHAFT, TRANSMISSION DRIVE	50-24	U		
F22	SHAFT, TRANSMISSION INPUT	50-36	G21	UNIVERSAL JOINT, MFWD	50-61
D3	SHIELD	40-2	V		
G9	SHIELD, PTO	50-49	H12	VALVE, BRAKE	60-10
K21	SHIELD, TRANSMISSION CASE	80-41	E19	VALVE, CLUTCH CONTROL	50-8
F16	SHIFTER SHAFT	50-30	A18	VALVE, EXHAUST	20-6
G3	SHIFTER SHAFT	50-42	C10	VALVE, INJECTION PUMP METERING	30-22
F16	SHIFTER, GEAR	50-30	A18	VALVE, INTAKE	20-6
G3	SHIFTER, GEAR	50-42	H9	VALVE, PRESSURE CONTROL	60-7
A13	SHORT BLOCK	20-1	I20	VALVE, SCV	70-28
B5	SHROUD, FAN	20-18	W		
C21	SHUT-OFF CABLE	30-33	D21	WARNING LAMP	40-20
K18	SIDE PANEL	80-38	B10	WATER PUMP	20-24
K9	SLOW MOVING VEHICLE EMBLEM	80-28	B8	WATER PUMP HOUSING	20-22
E3	SOCKET, ELECTRICAL OUTLET, 7-TERMINAL	40-28	J23	WHEEL, FRONT	80-18
F5	SOLENOID, MFWD	50-18	K3	WHEEL, REAR	80-22
F6	SOLENOID, MFWD	50-19	H4	WHEEL, STEERING	60-2
C18	SPEED CONTROL LEVER	30-30	E10	WIRING AND TERMINAL KIT	40-36
D15	SPEED HOUR METER	40-14	D24	WIRING HARNESS	40-24
J14	SPINDLE, FRONT AXLE	80-8	E1	WIRING HARNESS	40-26
C22	STARTING AID	30-34	E8	WIRING KIT, ELECTRICAL REMOTE CONTROL	40-34
D11	STARTING MOTOR	40-10	E3	WIRING, ELECTRICAL OUTLET, 7-TERMINAL	40-28
D12	STARTING MOTOR	40-11	D22	WIRING, ENGINE	40-22
H8	STEERING ARM	60-6	D20	WORK LIGHT, REAR	40-19
H6	STEERING HOUSING	60-4			
H6	STEERING PISTON	60-4			
H4	STEERING WHEEL	60-2			
E3	SUPPLEMENTARY OUTLET, 7-TERMINAL	40-28			
E4	SUPPLEMENTARY WIRING KIT	40-29			
F14	SUPPORT, COUNTERSHAFT BEARING	50-27			
J8	SUPPORT, DRAWBAR	80-2			
J10	SUPPORT, FRONT	80-4			
J17	SUPPORT, FRONT AXLE, MFWD	80-12			
K16	SUPPORT, SEAT	80-36			
J5	SWAY BLOCK	70-39			
E5	SWITCH, ELECTRICAL REMOTE CONTROL	40-30			
D17	SWITCH, IGNITION	40-16			
D13	SWITCH, LIGHT	40-12			
D17	SWITCH, LIGHT	40-16			

SHORT BLOCK

   R33973

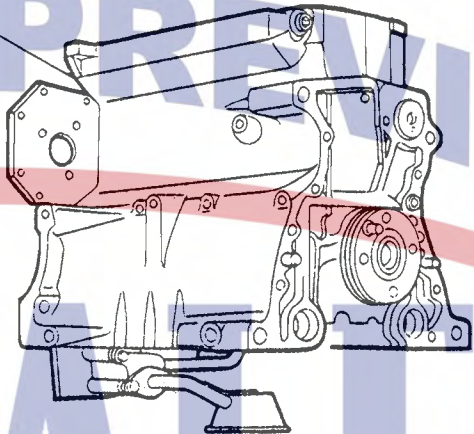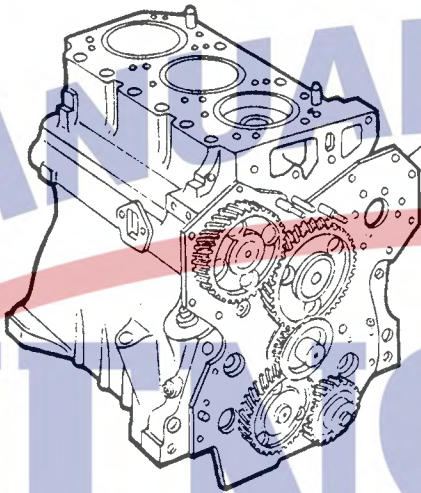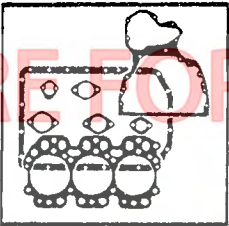

R33973

KEY	PART NO.	ENGINE SERIAL NO.	DESCRIPTION
1	AR77788	(-)	BLOCK, SHORT, COMPLETE (CONSISTS OF BLOCK, CRANKSHAFT, CAMSHAFT, PISTONS, CONNECTING RODS, CYLINDER LINERS, FRONT PLATE AND OVERHAUL GASKET SET NECESSARY FOR INSTALLATION)

purchase full manual at

JENSALES.COM
or Call 800-443-0625