

WORKSHOP MANUAL

11 LD series engines, code 1-5302-296

MANUAL PREVIEW

JENSALES®

purchase full manual at

11 LD 535-3

11 LD 625-3

11 LD 626-3

JENSALES.COM

or Call 800-443-0625

3rd Edition



SERVICE

INTRODUCTION

This manual contains the most important information for the repair of LOMBARDINI air cooled, direct injection Diesel engines type **11LD535-3**, **11LD625-3** e **11LD626-3**. This information is current upto April 17.04.2003 .

TABLE OF CONTENTS

I	TROUBLESHOOTING	Page	9
II	SAFETY DECALS - SAFETY INSTRUCTIONS	"	10-11
III	MODEL NUMBER AND IDENTIFICATION	"	12
IV	TECHNICAL DATA	"	13
V	CHARACTERISTIC CURVES	"	14
VI	OVERALL DIMENSIONS	"	15
VII	MAINTENANCE- RECOMMENDED OIL TYPE - REFILLING	"	16-17
VIII	DISASSEMBLY / REASSEMBLY	"	19-44
	Air cleaner		19
	Air cleaner components		19
	Belt tension adjustment		20
	Blower assembly		21
	Blower assembly components with 14 A alternator		21
	Blower assembly components with 21 A alternator		21
	Blower control pulley diameter		22
	CAMSHAFT		37
	Camshaft end play		38
	Camshaft gear		32
	Camshaft timing		38
	Checking main journals and crank pins		34
	Checking that piston is an original part		28
	Checks and cylinder roughness		28
	Clearance between main journals/crank pins and connecting rod bearings (mm)		35
	Compression release (optional)		23
	CONNECTING ROD		30
	Connecting rod alignment		31
	Connecting rod big end bearing		31
	Connecting rod small end bearing and pin		30
	Connecting rod weight		31
	CRANKSHAFT		33
	Crankshaft center main bearing supports		33
	Crankshaft end play		36
	Crankshaft journal radius		34
	Crankshaft lubrication ducts		34
	Crankshaft pulley		22
	Crankshaft removal		33
	CYLINDER		28
	CYLINDER HEAD		24
	Dimensions and clearance between guides and valves (mm)		26
	Dimensions of camshaft journals and housings (mm)		37
	Electronic speed governor		43
	ELECTRONIC SPEED GOVERNOR (optional)		43
	Electronic speed governor control box		44
	Electronic speed governor layout		43
	Engine running with electronic speed governor		44

Exhaust manifold	19
Fan control belt	20
Flywheel	23
Gear cover, timing side	22
How to measure camshaft bearing and journal inside diameter	37
Hydraulic pump 3rd p.t.o., group 2	40
Hydraulic pump 4th p.t.o., group 1	40
Hydraulic pump p.t.o.	40
Injector	24
Injector projection	24
Intake manifold	20
Intake/exhaust cam height	38
Main bearing and connecting rod big end bearing inside diameter	35
Main bearing housings	36
Main bearing support, flywheel side	33
Main bearing support, gear side	32
Main bearing supports	36
Main journal and crank pin diameter (mm)	34
MECHANICAL SPEED GOVERNOR	41
Mechanical speed governor components (standard)	41
Mechanical speed governor components for special generating sets	42
Mechanical speed governor operation (standard)	41
Mechanical speed governor setting	42
Oil pump gear	32
PISTON	28
Piston - Refitting	30
Piston clearance	30
Piston rings - End gaps (mm)	29
Piston rings - Fitting sequence	29
Piston weight	29
Pistons rings - Clearance between grooves (mm)	29
Pushrod tube spring fitting	27
Rocker arm assembly	24
Shroud and plates	20
Spring for extra fuel supply at starting	42
Starting with electronic speed governor	44
Tank	22
Timing gear	32
Use an inside micrometer to measure the inside diameter of main bearings	35
Use an outside micrometer gauge to measure camshaft lobe height	37
Use of 3rd and 4th p.t.o.	40
Valve / rocker arm clearance	23
Valve guide insertion	26
Valve guides and cylinder head housings	26
Valve material	25
Valve seat lapping	27
Valve seats and housings	27
Valve springs	25
Valve timing check	39
Valve timing without considering timing marks	38
Valves	25

IX LUBRICATION SYSTEM

45-47

LUBRICATION SYSTEM	45
Oil filter cartridge	46
Oil pressure check	46
Oil pressure curve at full speed	47
Oil pressure curve at idling speed	47
Oil pressure relief valve	46
Oil pump	46

INTRODUCTION

X FUEL SYSTEM 48-55

(STATIC) INJECTION TIMING	53
Bosch injection pump replacement - Reference mark on delivery side	51
Bosch Injection Pump replacement - Shim reference number	52
Fuel feeding pump	48
Fuel feeding pump drive rod protrusion	48
Fuel feeding/injection circuit	48
Fuel filter	48
How to check injection pump delivery valve sealing	50
How to check plunger and barrel for internal leakage	50
INJECTION PUMP	49
Injection pump type Bosch	49
Injection pump type LOMBARDINI - OMAP	49
Injection timing check	53
Injection timing checking device	53
Injection timing correction	54
Injection timing reference marks on crankcase and flywheel	54
Injection timing reference marks on the pulley and the gear cover	54
INJECTOR	55
Injector setting	55
LOMBARDINI-OMAP injection pump replacement	52
Nozzle	55
Plunger	50
Test data for injection pump delivery at the test bed - Pump type Bosch	51
Test data for injection pump delivery at the test bed - Pump type LOMBARDINI-OMAP	51

XI ELECTRIC SYSTEM 56-61

12 V, 21 A Alternator	57
12,5 V, 14 A Alternator	56
14 V, 33 A Bosch G1 alternator battery charger curve	60
Alternator battery charger curve (12 V, 21 A)	57
Alternator battery charger curve (12.5 V, 14A)	57
Alternator type Bosch Gil 14 V, 33 A layout	60
Alternator type Bosch GI 14 V, 33 A	60
Characteristic curves for starting motor type Bosch JF (R) 12 V	61
Checking for cable continuity	58
Connections for LOMBARDINI-DUCATI voltage regulator	59
Electric starting layout without battery charging light	56
Electrical starting layout with battery charging light	56
How to check voltage regulator for proper operation	59
Magnetization checking tool (Part No. 7000-9727-001)	58
STARTING MOTOR	61
Starting motor layout	61
VOLTAGE REGULATOR	58

XII SETTINGS 62-63

Full speed setting in no-load conditions (standard)	62
Injection pump delivery setting	62
Injection pump delivery setting with engine at the torque dynamometer	63
Idling speed setting in no-load conditions (standard)	62
Required settings (as most commonly applies)	63
Stop setting	63

XII STORAGE 64

Temporary protection (1÷6 months)	64
Permanent protection (over 6 months)	64
How to prepare the engine for operation	64

XIV MAIN TORQUE SPECIFICATIONS AND USE OF SEALANTS 66

USE OF SEALANTS 67

MODEL NUMBER AND IDENTIFICATION

11LD535-3

11 LD 625-3

11LD626-3


Engine group number

LOMBARDINI

Diesel

N° Cilynders

R.P.M.

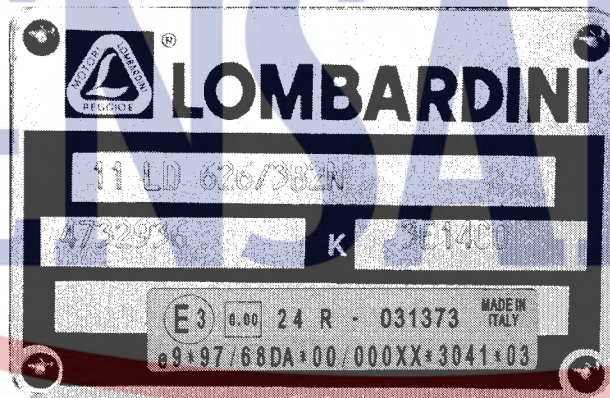

CLICK ANYWHERE FOR MORE DETAILS

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS