



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Long
Operator's Manual

350 Diesel

purchase full manual at

Operator's Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
LONG OR IT'S SUCCESSORS. **LONG** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

LO-O-350

**OPERATOR
INSTRUCTION
BOOK**

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW



350 TRACTOR

JENSALES®

purchase full manual at



JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS



LONG MFG. N.C. INC.

HOME OFFICE: TARBORO, N.C.

PLANTS: TARBORO, N.C. & DAVENPORT, IOWA

BRANCHES: CARROLLTON, TEXAS/MEMPHIS, TENN./TIFTON, GA.

LO-O-350

CONTENTS

CLICK ANYWHERE FOR MORE DETAILS

Page

Introduction 4

How to identify the tractor 6

Technical features 7

TRACTOR OPERATING

— Controls and operation 25

— Starting and stopping the tractor 27

— Putting the new tractor into operation 33

— Tractor operating 34

TRACTOR MAINTENANCE

— Periodical maintenance 52

— Maintenance operations in detail 57

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

How to identify the tractor

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Any communication regarding tractor behavior must include engine and chassis serial number.

Such information speeds service and parts orders.

JENSALES®

purchase full manual at



JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

4. Check for tightness of cooling system, lubricating system and fuel system connections. Remove leakages.

To start the engine the following operations should be carried out :

1. Check, whether speed-change lever is in neutral position. Power take-off unit must be disengaged.

2. Bring injection pump control lever to midstroke (stroke – 230 mm).

3. When the tractor has been kept out of operation for a long while or when it is started for the 1st time at low temperature, press twenty times upon lever 6, fig. 7 of fuel feed pump.

4. Place key in ignition switch and turn it to position 1 (fig. 8).

5. Fully depress starting aid button 8 (fig. 6) and turn by hand thermoinjector control and ignition switch to position 3 (fig. 9). Immediately after starting the engine bring switch to position 0 (fig. 9).



Fig. 7. — De-aeration of Fuel System.

1. Vent plug of the fuel filter ; — 2. Fuel injection pump vent plug ; — 3. Injection pump return line bleeder screw ; — 4. Connection ; — 5. Vent plug of the second fuel filter ; — 6. Fuel pump handle.

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

After Every 60 Hours' Operation:

3

GREASING BALL BEARING OF CLUTCH DISENGAGING SLEEVE. Clean the greaser press lubricant grease in. (see page 56).


GREASING CLUTCH PEDALS SHAFT. Clean both greasers located at shaft end and press lubricant grease in.



4

GREASING FRONT WHEELS STEERING KNUCKLE PIVOTS. Clean both greasers (one on each side) and press lubricant grease in.

GREASING FRONT AXLE SHAFT. Clean greaser B and press lubricant grease in.

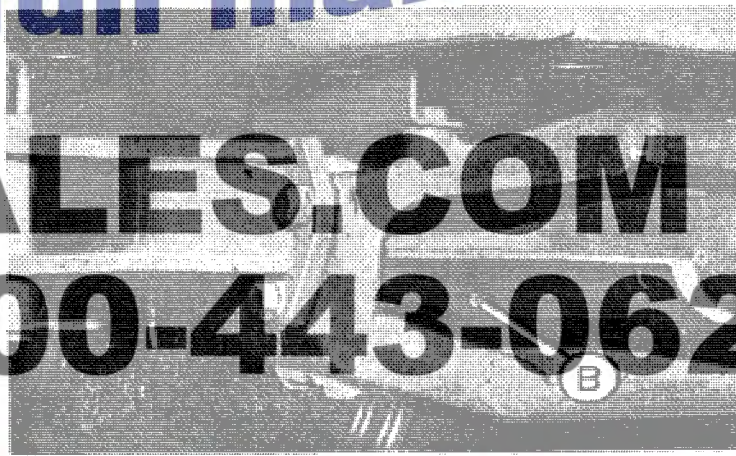

CLICK ANYWHERE FOR MORE DETAILS