



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Massey Harris  
Massey Ferguson

Operator's Manual

MF184-4

purchase full manual at

Operator's Manual

**JENSALES.COM**

**or Call 800-443-0625**



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF  
MASSEY HARRIS MASSEY FERGUSON OR IT'S SUCCESSORS. MASSEY HARRIS MASSEY FERGUSON AND IT'S SUCCESSORS  
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,  
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

**MH-O-MF184-4**

# Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

MF 184-4



TRACTOR

purchase full manual at

**JENSALES.COM**

or Call 800-443-0625

Massey Ferguson

CLICK ANYWHERE FOR MORE DETAILS

## TRACTOR IDENTIFICATION

Each of these Tractors is identified by means of a Tractor Serial Number. It is located both on the lower section of the instrument panel and on the upper left rear of the center housing. In addition, the engine has its own serial number located on the right-hand side of the engine block.

TO ENSURE PROMPT, EFFICIENT SERVICE WHEN ORDERING PARTS OR REQUESTING REPAIRS FROM AUTHORIZED MF DEALER, RECORD THE SERIAL NUMBERS IN SPACES PROVIDED.

TRACTOR SERIAL NUMBER

Located on lower instrument panel.

TRACTOR SERIAL NUMBER

Located on upper left rear of center housing.

**JENSALES.COM**

ENGINE SERIAL NUMBER

**or Call 800-443-0625**

Located on left-hand side of engine block.

*NOTE: Reference to left-hand and right-hand used throughout this Manual refers to the position when seated in operator's seat, facing forward.*



## INDEX

PAGE

|                                                                   |    |
|-------------------------------------------------------------------|----|
| INSTRUMENTS AND CONTROLS .....                                    | 10 |
| OPERATION .....                                                   | 16 |
| Break-in Period .....                                             | 16 |
| Starting .....                                                    | 16 |
| Warm Weather Starting .....                                       | 17 |
| Cold Weather Starting .....                                       | 17 |
| Operating the Tractor .....                                       | 19 |
| Shifting Gears .....                                              | 19 |
| Speed Chart .....                                                 | 19 |
| Front Wheel Drive .....                                           | 20 |
| Brakes .....                                                      | 20 |
| Differential Lock .....                                           | 20 |
| Drawbars .....                                                    | 21 |
| Power Take-Off .....                                              | 22 |
| Hydraulic System .....                                            | 24 |
| Position Control .....                                            | 24 |
| Draft and Sensitivity Control .....                               | 24 |
| Hydraulic Lift Linkage .....                                      | 25 |
| Auxiliary Hydraulics .....                                        | 27 |
| Wheel Tread Settings .....                                        | 28 |
| Seat Adjustment .....                                             | 29 |
| Stopping the Tractor (Parking) .....                              | 29 |
| Towing Tractor .....                                              | 30 |
| LUBRICATION AND MAINTENANCE .....                                 | 31 |
| Interval Chart .....                                              | 31 |
| Specifications and Capacities (Fuels, Lubricants & Coolant) ..... | 32 |
| PROCEDURES FOR LUBRICATION AND MAINTENANCE .....                  | 34 |
| Grease Fittings .....                                             | 34 |
| Engine Oil and Filter .....                                       | 36 |
| Fuel System .....                                                 | 37 |
| Agglomerator .....                                                | 37 |
| Replacing Fuel Filter Element .....                               | 37 |
| Air Bleeding Fuel System .....                                    | 38 |
| Low Idle Adjustment .....                                         | 40 |
| Engine Air Cleaner .....                                          | 40 |
| Pre-filter .....                                                  | 41 |
| Reservoir and Lower Filter .....                                  | 41 |
| Secondary Filter .....                                            | 42 |

**or Call 800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS

|                                                                        |    |
|------------------------------------------------------------------------|----|
| Cooling System .....                                                   | 42 |
| Transmission, Center Housing and Hydraulic System Oil and Filter ..... | 43 |
| Clutch Pedal .....                                                     | 44 |
| Engine Speed PTO Clutch Lever .....                                    | 45 |
| Brake Pedals .....                                                     | 46 |
| Parking Brake .....                                                    | 46 |
| Front Drive Axle .....                                                 | 47 |
| Rear Axle Final Drives .....                                           | 49 |
| Power Steering .....                                                   | 49 |
| Front Wheel Toe-In .....                                               | 49 |
| Tires .....                                                            | 50 |
| Electrical System .....                                                | 51 |
| Alternator .....                                                       | 51 |
| Battery .....                                                          | 52 |
| Fuses .....                                                            | 53 |
| Signal Flasher .....                                                   | 53 |
| Wiring Diagram .....                                                   | 54 |

|               |    |
|---------------|----|
| STORAGE ..... | 56 |
|---------------|----|

|                               |    |
|-------------------------------|----|
| TROUBLE-SHOOTING ENGINE ..... | 57 |
|-------------------------------|----|

|                      |    |
|----------------------|----|
| SPECIFICATIONS ..... | 59 |
|----------------------|----|

**purchase full manual at**

**JENSALES.COM**  
**or Call 800-443-0625**

**CLICK ANYWHERE FOR MORE DETAILS**

## INSTRUMENTS AND CONTROLS

### TACHOMETER — 1, FIG. 1

The outer scale on the tachometer gives engine RPM and it is pegged so that it will not go below 200 RPM. The inner most scale on the tachometer indicates engine PTO speed. An engine speed of 1944 RPM should show a PTO speed of 540 RPM.

The tachometer also incorporates an hourmeter. Reading the hourmeter from left to right, the first 4 digits indicate hours while the 5th digit indicates 10ths of hours.

### FUEL GAUGE — 2, FIG. 1

"0" indicates empty, "1/2" indicates half full and "4/4" indicates full.

### ENGINE COOLANT TEMPERATURE GAUGE — 3, FIG. 1

"White" indicates cold, "green" indicates normal operating temperature and "red" indicates overheating.

### OIL PRESSURE WARNING LIGHT — 4, FIG. 1

The oil pressure light will come on when the key is turned to the "ON" position and should go out when the engine starts. Should the light come on while the engine is running, stop the engine immediately and have the problem corrected.

### ALTERNATOR WARNING LIGHT — 5, FIG. 1

The alternator warning light comes on when the key is turned to the "ON" position and should go out when the engine starts. Should the light come on while the engine is running, stop the engine immediately and have the problem corrected.

### HEADLAMP BEAM INDICATOR LIGHT — 6, FIG. 1

Light will be on when headlamps are on high beam only.

### TURN SIGNAL LIGHT — 7, FIG. 1

Turn signal light will flash when turn signals are on but it does not indicate direction of turn.

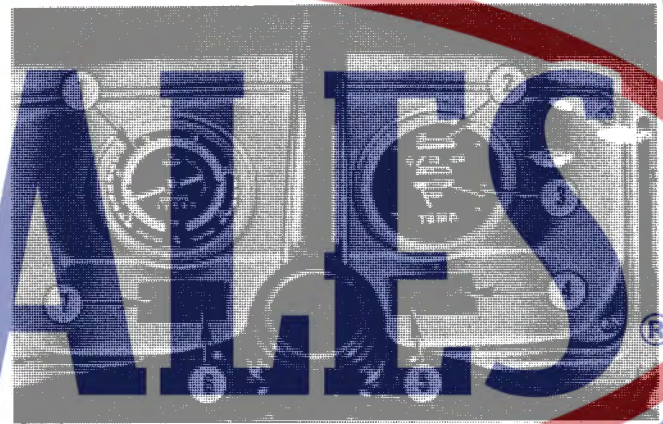


FIG. 1