



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Massey Harris
Massey Ferguson

Operator's Manual

MF200

Crawler

purchase full manual at

Operator's Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
MASSEY HARRIS MASSEY FERGUSON OR IT'S SUCCESSORS. MASSEY HARRIS MASSEY FERGUSON AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

MH-O-MF200CRLR

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®



purchase full manual at

MF 200 CRAWLER

JENSALES.COM

or Call 800-443-0625

MF

Massey Ferguson

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

LOADER (STANDARD BUCKET AND BACKHOE)

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

INDEX

PAGE

SERIAL NUMBERS	1
INSTRUMENTS AND CONTROLS	5
OPERATION	18
Loader Safety Bar	18
Before Operation Inspection	19
Starting Engine	19
4-Speed Transmission	20
Hydraulic Reverser Transmission	20
Manual Shuttle Transmission	23
Travel Speeds	24
PTO	24
Operating Tips — Dozer	26
Operating Tips — Loader	27
Operating Tips — Backhoe	35
Operating Tips — Winch	42
Drawbar	45
Towing Crawler	45
SPECIAL MAINTENANCE — NEW EQUIPMENT	46
LUBRICANT SPECIFICATIONS	47
PERIODIC SERVICE	51
10-Hours or Daily	51
50-Hours or Weekly	53
100-Hours	54
200-Hours	55
500-Hours	56
1000-Hours or Annually	57
Engine Air Cleaner	59
Engine Crankcase Breather Pipe	59
Fuel Sediment Bowl	60
Fuel Filter Elements	60
Air-Bleeding Fuel System	61
Engine Oil Filter	66
Alternator and Fan Belt Adjustment	66
Battery	66

INDEX (Continued)

	PAGE
Hydraulic Reservoir Oil Filter	69
Hydraulic Coupling	70
Hydraulic Reverser Oil Filter	72
Hydraulic Sump Filtering Screen	72
Clutch Pedal Free Travel Adjustment	73
Clutch Release Bearing Limiting Travel Stop	73
Transmission Brake Adjustment	74
Brake Pedal Free Travel Adjustment	75
Steering Clutches and Brakes	75
Brake Band Adjustment	76
Steering Lever Free Travel Adjustment (1st Stage) ...	77
Steering Lever Free Travel Adjustment (2nd Stage) ...	78
Steering Control Linkage Adjustment (Operational Check)	79
Track Adjustment	79
Track Rollers and Idlers (Lubrication)	81
Drag Adjustment (Winch)	84
Winch Air-Bleeding Procedures	85
Draining Cooling System	101
Bucket Position Indicator	102
Clam Position Indicator	102
ELECTRICAL WIRING DIAGRAM	105
TORQUE SPECIFICATIONS	106
SPECIFICATIONS	107


JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

SERIAL NUMBERS

Record serial numbers in spaces provided. Make reference to Serial Numbers when ordering parts, or requesting service, from your MF Dealer.

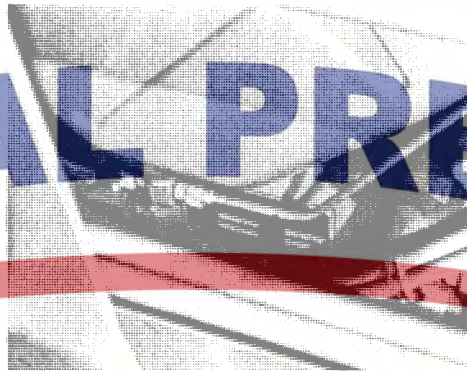

CRAWLER

Located on right-hand side of center housing.

Model

Serial No.



ENGINE

Located on engine block right side.

Model

Serial No.

HYDRAULIC RESERVOIR OIL FILTER, Fig. 46

1. Drain reservoir, preferably when oil is hot.
2. Remove reservoir cover. Remove filter by turning handle counterclockwise.
3. Lift filter assembly from reservoir and disassemble by removing retaining nut, No. 4, Fig. 46A.
4. Clean filter housing, both inside and outside.
5. Install new filter element. Inspect gasket, No. 3, for serviceability. Secure element with retaining nut.
6. Clean bottom of reservoir. Reinstall filter assembly in reservoir, by turning handle clockwise. Tighten securely. Hand tighten only.



Fig. 46 — HYDRAULIC OIL FILTER

CLICK ANYWHERE FOR MORE DETAILS

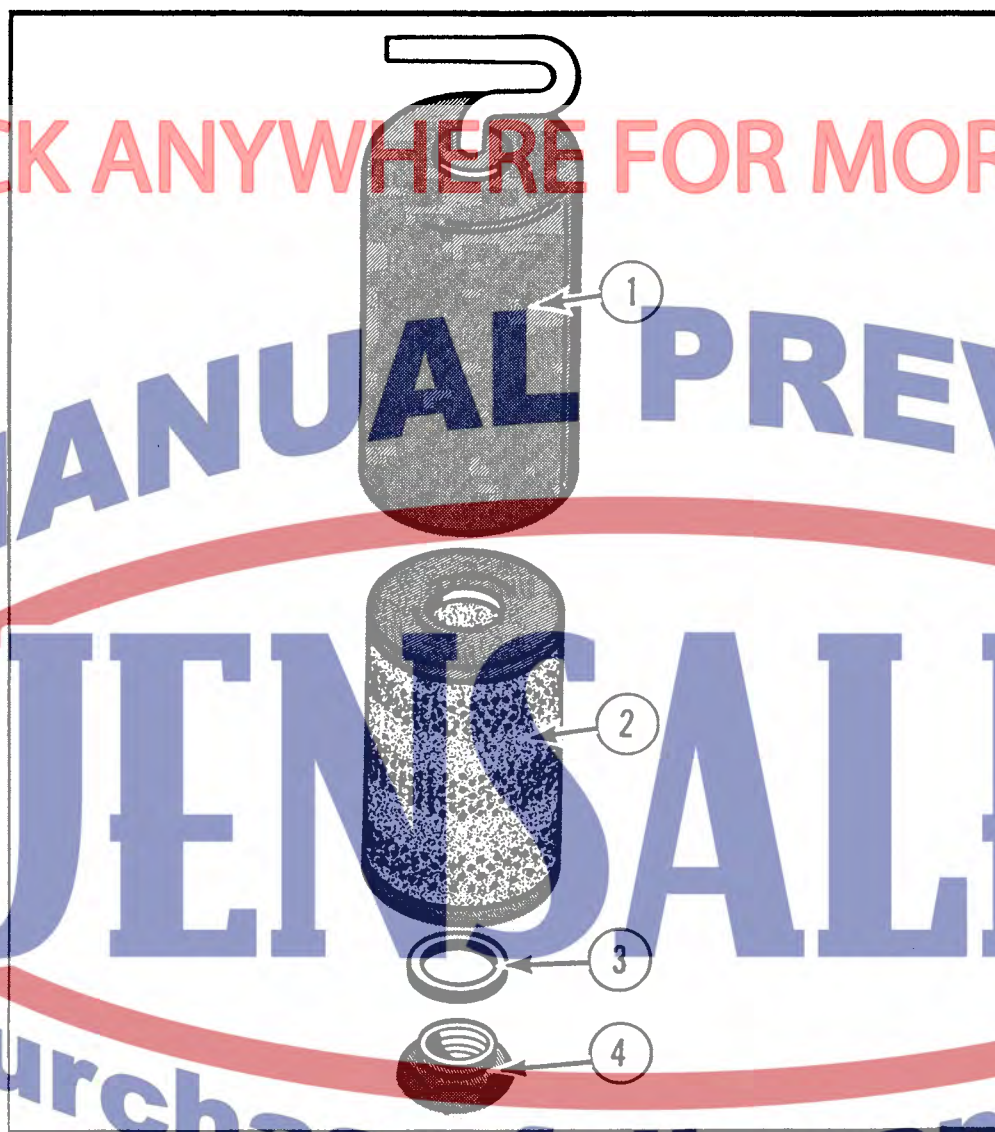


Fig. 46A — OIL FILTER (Illustrated)

7. Replace drain plug and refill reservoir with MF Spec. M-1110 Transmission Oil.

8. Clean breather before replacing.

HYDRAULIC COUPLING, Fig. 47

To refill the hydraulic coupler:

1. Remove louvered cover located on right-hand side of

CLICK ANYWHERE FOR MORE DETAILS