



Massey Harris Massey Ferguson

Operator's Manual

MF50A

Tractor, Loader & Backhoe

Operator's Manual

JENSALES.COM

or Call 800-443-0625



THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
MASSEY HARRIS MASSEY FERGUSON OR IT'S SUCCESSORS. MASSEY HARRIS MASSEY FERGUSON AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

MH-O-MF50A TLB

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW



**MF 50A TRACTOR
BACKHOE-LOADER**

MF

Massey Ferguson

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CONTENTS

	PAGE
SECTION 1 — SERIAL NUMBERS	1-1
SECTION 2 — INSTRUMENTS AND CONTROLS	2-1
SECTION 3 — NEW MACHINE INSTRUCTIONS	3-1
SECTION 4 — OPERATION	4-1
Operating the Engine	4-1
Operating the Tractor	4-2
Operating the Loader	4-4
Operating the Backhoe	4-5
Operating Techniques	4-8
SECTION 5 — STORAGE	5-1
SECTION 6 — LUBRICATION AND PERIODIC MAINTENANCE	6-1
Lubrication Specifications and Capacities	6-1
Fuel Specification Chart	6-3
Tractor Lubrication and Maintenance Chart	6-4
Loader and Backhoe Lubrication and Maintenance Schedule	6-5
SECTION 7 — SERVICING	7-1
Diesel Fuel System	7-1
Engine Air Cleaner	7-6
Cooling System	7-9
Electrical System	7-11
Steering System	7-14
Wheels and Tires	7-15
Clutch Pedal Free Travel	7-18
Brake Adjustment	7-19
Forward and Reverse Pedals Linkage Adjustment	7-20
Backhoe and Loader Hydraulic System	7-22
Transmission and Differential	7-25
SECTION 8 — TROUBLE-SHOOTING	8-1
SECTION 9 — SPECIFICATIONS	9-1



Fig. 4-5 — BUCKET ADJUSTMENT LOCATIONS

SMV EMBLEM — SAFETY FLASHING LAMPS

Many states and provinces require the use of an SMV emblem on vehicles operating on roadways under 25 mph. The SMV attaching bracket is standard equipment, while the SMV emblem, Part No. 19 514 A91, and attaching hardware is available from your MF Dealer.

While the unit is in operation, the SMV emblem should be placed in the storage bracket. Check local regulations in regard to the use of Safety Flashing Lights and the SMV Emblem.

OPERATING TECHNIQUES

POSITION MANUAL SHUTTLE LEVER IN REVERSE;
TRANSMISSION GEARSHIFT AND DUAL RANGE LEVERS
IN NEUTRAL.

7. Move throttle control to "wide-open" position. Then with fuel shut-off control pushed fully "in", operate starter motor until fuel without foam flows past the loosened high pressure connections.

8. Retighten high pressure fuel connections and proceed to start engine. Shortly after engine has been started, the other injectors will become "air-bleed" and engine will operate smoothly.

IDLE SPEED ADJUSTMENT

The only adjustment that can be made on the injection pump is the idle speed adjustment. This can be done by turning the idle speed adjusting screw, Fig. 7-3, in or out until an idle speed of 575-625 rpm is obtained.

SERVICING THE INJECTION NOZZLES

Periodically the fuel injection nozzles may require removal for inspection or service. How often this is required depends

OUTER
FILTER
ELEMENT

KNURLED
KNOB

Fig. 7-4 — ENGINE AIR CLEANER

