



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Massey Harris
Massey Ferguson

Service Manual

MF8560 Combine

Chassis Only

Volume 1 of 2

JENSALES.COM

or Call **800-443-0625**

JENSALES

Service Manual

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
MASSEY HARRIS MASSEY FERGUSON OR IT'S SUCCESSORS. MASSEY HARRIS MASSEY FERGUSON AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

MH-S-MF8560

Massey

Massey 8500 Rotary Combine

CLICK ANYWHERE FOR MORE DETAILS

SERVICE MANUAL

1449 208 M1

TABLE OF CONTENTS

SECTION 1 GENERAL INFORMATION

SECTION 2 ENGINE

- 2-01 Engine Removal and Installation
- 2-02 Engine Output Shaft
- 2-03 Cummins "B Series" Engine Information

SECTION 3 POWER TRAIN

- 3-01 Brakes
- 3-02 Transmission
- 3-03 Rotor Planetary Drive

SECTION 4 HYDRAULICS

- 4-01 General Information
- 4-02 Hydraulic Reservoir and Oil Cooler
- 4-03 Hydraulic Pump
- 4-04 Power Steering Hand Pump
- 4-05 Electro-Hydraulic Control Valve
- 4-06 Hydrostatic Drive Systems
 - 4-06-01 Operation of Drive Components
 - 4-06-02 Hydrostatic Pump — Propulsion Drive
 - 4-06-03 Hydrostatic Motor — Propulsion Drive
 - 4-06-04 High Pressure Release Valve
 - 4-06-05 Hydrostatic Pump - Rotor Drive
 - 4-06-06 Standard Torque Motor - Rotor Drive
 - 4-06-07 High Torque Motor — Rotor Drive
 - 4-06-08 Power Rear Wheel Drive
- 4-08 Hydraulic Cylinders
 - 4-08-01 Header Lift Cylinder
 - 4-08-02 Reel Lift Cylinder
 - 4-08-03 Unloader Swing Cylinder
 - 4-08-04 Steering Cylinders
- 4-10 Testing and Trouble-shooting
 - 4-10-01 Hydraulic System Testing
 - 4-10-02 Hydraulic System Trouble-shooting

JENSALES.COM

or Call 1-800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

TABLE OF CONTENTS (Continued)

CLICK ANYWHERE FOR MORE DETAILS

SECTION 5

ELECTRICAL SYSTEM

- 5-01 General Information
- 5-02 Specifications and Wiring Diagrams
- 5-03 Charging System
- 5-04 Starting System
- 5-05 Automatic Header Height Control
- 5-06 Combine Performance Monitor

SECTION 6

AIR CONDITIONING

- 6-01 Air Conditioning and Heater — Harrison Compressor System
- 6-02 Harrison Compressor
- 6-03 Air Conditioning and Heater — Tecumseh Compressor System
- 6-04 Tecumseh Compressor
- 6-10 Testing and Trouble-shooting

SECTION 7

WHEEL AND AXLE COMPONENTS

- 7-01 Final Drive
- 7-02 Rear Wheels and Axles
- 7-03 Power Rear Wheel Drive — Planetary

SECTION 8

HEADER UNITS

- 8-01 Reel Hydraulic Drive
 - 8-01-01 Reel Control Valve
 - 8-01-02 Reel Drive Hydraulic Pump
 - 8-01-03 —Reserved—
 - 8-01-04 Reel Drive Motor (MAF Type)
 - 8-01-05 Reel Drive Gearbox
- 8-02 Wobble Knife Drive

SECTION 9

THRESHING & SEPARATING COMPONENTS

- 9-01 Front Beater
- 9-02 Stone Trap
- 9-03 Rotor
- 9-04 Concaves
- 9-05 Separator Grates
- 9-06 Separator Grain Pan
- 9-07 Chaffer and Sieve
- 9-08 Shoe Pitman Drive Shaft
- 9-09 Auger Housing
- 9-10 Fanning Mill and Drive
- 9-11 Main Countershaft
- 9-12 Guide Vanes

SECTION 10

MATERIAL DELIVERY COMPONENTS

- 10-01 Header Elevator
- 10-02 Clean Grain System
- 10-03 Returns System
- 10-04 Unloading System

CLICK ANYWHERE FOR MORE DETAILS

massey

Section 1

CLICK ANYWHERE FOR MORE DETAILS

GENERAL INFORMATION

1449 208 M1

MANUAL PREVIEW

CONTENTS

	PAGE
SAFETY PRECAUTIONS	2
COMBINE IDENTIFICATION	8
RECOMMENDATIONS REGARDING SERVICE OF COMBINE	9
TIRE HEADER COMBINATIONS	10
IMPORTANT DIESEL FUEL PRECAUTIONS	10
TORQUE CHARTS	12
Special Torques.....	14
SPECIFICATIONS	15

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

HEADER ELEVATOR HYDRAULIC CYLINDER STOP

A cylinder stop is provided at the left-hand hydraulic cylinder on the header elevator.

FIG. 2: Cylinder stop in the disengaged position.

FIG. 3: Cylinder stop in the engaged position.

The cylinder stop must be properly engaged as shown in Fig. 3 **BEFORE** going under the header or header elevator for any reason whatsoever.

To engage the cylinder stop:

1. Raise the header elevator until the cylinder rod is extended clear of the cylinder stop.
2. Release the chain and lower the stop onto the cylinder rod.
3. Lower header elevator until end of stop abuts against the end of of the cylinder.



FIG. 2



FIG. 3

COMBINE DECALS
& LOCATIONS

TIRE USAGE

MASSEY 8560 COMBINE

MAXIMUM GRAIN TANK CAPACITY 180 BU. (6350 L)

SEE OPERATOR'S MANUAL FOR APPROVED HEADER-TIRE COMBINATIONS.

MAINTAIN CORRECT TIRE INFLATION PRESSURE SHOWN IN OPERATOR'S MANUAL.

EMPTY GRAIN TANK FOR ROAD TRAVEL.

On left side of Combine,
near operator's platform ladder.

COMBINE IDENTIFICATION

The Massey 8560 Combine is identified by serial numbers which are important if/when service and/or parts are required.

COMBINE SERIAL NUMBER

FIG. 4: Stamped on Serial No. Plate, 1, located on frame at rear left-hand corner of Combine.



FIG. 4

ENGINE SERIAL NUMBER

FIG. 5: Stamped on Serial No. Plate (Fig. 4) and also on engine serial number plate, 1, located near fuel injection pump.



FIG. 5

TRANSMISSION SERIAL NO.

FIG. 6: Stamped on transmission housing, 1.

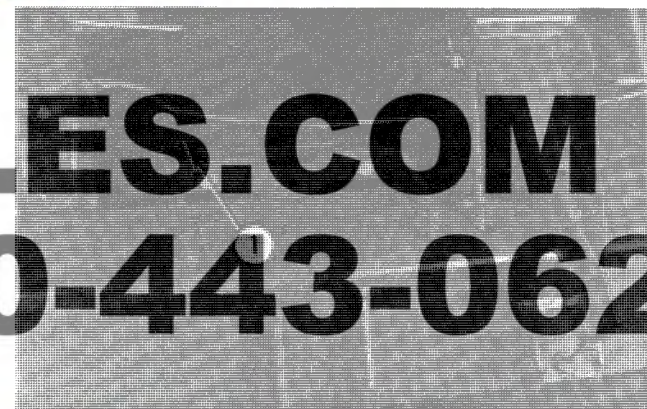


FIG. 6

NOTE: References to left-hand and right-hand, used throughout this manual, refer to position when seated in operator's seat and facing forward.

JENSALES.COM
or Call 800-443-0625