



CLICK ANYWHERE FOR MORE DETAILS

Murphy
Service Manual
6 Cylinder
Diesel Engines

Service Manual

JENSALES.COM
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
MURPHY OR IT'S SUCCESSORS. MURPHY AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

MU-S-ENG ALL

CONTENTS

SECTION 1—GENERAL ENGINE INFORMATION

SECTION 2—2A—GENERAL OPERATING INSTRUCTIONS

Preliminary Precautions.
Starting instructions.
Caution.
To Start.
Warming Up.
Cold Weather Start.
To Stop.
If the Engine Fails to Start.

SECTION 3—LUBRICATING OIL SYSTEM

Oil Circulation.
Adding Oil to Engine.
Caution.
Lube Oil Strainer and Relief Valve Assembly.
Lube Oil Pump.
Lube Oil Cooler.
Lube Oil Filter.
When to Change Oil and Filter Elements
Lubricating Oil Specifications.

SECTION 4—FUEL SYSTEM

General.
Fuel Supply Pump.
Priming Fuel System.
Air Bubbles in Fuel Sight Glass.
Fuel Oil Filter.
Replacing the Fuel Filtering Elements.
Fuel Pressure Relief Valve.
Path of Fuel.
Lack of Fuel.
Fuel Specifications.

SECTION 5—FUEL INJECTORS

General.
Important Instructions.
If Cylinder does not Fire.
How to Determine which Cylinder is not Firing.
Cleaning Injector Valve Seats.
Lapping Injector Valves and Seats.
Cleaning Injector Tips.
Injector Valve Springs.
Repairing Injectors.
Removing Injectors from Engine.
Inspection of Injectors before Reassembling in Engine
Replacing Injectors in Engine.
Adjusting Injectors so each Cylinder Fires Evenly.
Timing Injectors.

SECTION 6—AIR CLEANERS

Care Required.
Washing Cleaner.

SECTION 7 — GENERAL SERVICING INSTRUCTIONS

Special Tools
Cleanliness.
Gaskets.
Tightening Nuts.
Torque Wrench Data.
Adjustment for Clearance of Various Parts.
Original Dimension Data.
Allowable Wear Data.

SECTION 8—COOLING SYSTEM

Radiator and Thermostats.
Care of Radiator.
Warning.
Detaching Radiator from Engine.
Cleaning Inside of Cooling System.
Water Pump and Fan.
Removing and Dismantling Water Pump and Fan
Water Pump Seal Thrust Collar.
Fan Belts.
Exchanging Fans.
Parts of Water Pump and Fan Assembly

SECTION 9 — COLD WEATHER OPERATION

Cooling System.
Places to Drain Cooling System.
Operation Above Freezing Temperature.
Operation at or Below Freezing Temperature.
Warming Up.
Cold Weather Care of Water Pump.
Use of Antifreeze Solutions.
Alcohol Antifreeze.
Ethylene Glycol Antifreeze Solutions.
Winter Lubricating Oil.
Fuel for Cold Weather.
Cold Weather Care of Storage Battery.

SECTION 10—STARTING SYSTEM

Starting Motor.
Generator.
Generator Control Box.
Batteries.
Gasoline Engine Starting System.

SECTION 11—FUEL PRIMING ONE WAY CLUTCH

General.
Removing Generator Bracket.

SECTION 12—GOVERNOR

Description.

How the Governor Works.

Engine Speed Control.

Hydraulic Micro Governor.

Governor—Injector Linkage.

Governor Troubles.

Removing Governor from Engine.

Disassembly and Inspection.

Reassembling Governor.

Replacing Governor on Engine.

Caution.

SECTION 13—FLYWHEEL, FLYWHEEL HOUSING AND BEVEL GEARS

Flywheel and Rear Oil Seal.

Removing Flywheel.

Replacing Flywheel.

Flywheel Housing.

Bevel Gear Adjustment.

Bevel Pinion Assembly.

SECTION 14—CAMSHAFT HOUSING ASSEMBLY AND WORM GEAR

Removing Camshaft Housing.

Replacing Camshaft Housing.

Installing Rocker Arms.

Installing Camshaft Bearings.

Installing Camshaft Worm Gears.

Worm Assembly.

SECTION 15—CYLINDER HEAD, AND INJECTOR TUBING ON CYLINDER HEAD

Removing Cylinder Head.

Replacing Cylinder Head.

Testing for Fuel Leaks of Injector Connections and Tubing on Cylinder Head.

SECTION 16—VALVE MAINTENANCE

Valve Clearance Adjustment.

Lapping Valves.

Replacing Valve Guides.

Replacing Valve Seats.

Refacing Valves and Seats.

SECTION 17—CONNECTING RODS, PISTONS, AND CYLINDER LINERS

Removing Rod Bearings.

Replacing Rod Bearings.

Markings on Pistons and Rods.

Removing Pistons and Rods.

Replacing Pistons and Rods.

Pistons and Rings.
Cylinder Liners.

SECTION 17-A—CONNECTING RODS, PISTONS AND CYLINDER LINERS

Connecting Rods.
Preparing Engine for Connecting Rod Bearing Removal.
Removing Connecting Rod, Cap and Shell.
Replacing Connecting Rod Bearing Shells.
Removing Connecting Rods from Engine.
Pistons and Rings.
Replacing Pistons.
Cylinder Liners.

SECTION 18—MAIN BEARINGS AND CRANKSHAFT

Crankshaft Main Bearings.
Removing and Replacing Main Bearing Shells.
Crankshaft Front Oil Seal.
Crankshaft Replacement.

SECTION 19—OPERATING TROUBLE CHART

Engine Fails to Start.
Engine Starts but will not Run with Control Lever in Operating Position.
Engine Suddenly Loses Power or Stops.
Engine Gradually Loses Power Over Period of Time.
Engine Misfires.
Fuel Oil in Crankcase, Dilution.
Excessive Fumes at Crankcase Breather.

SECTION 20—ENGINES FOR ALTITUDE OPERATION

Care of Blower.
Belt Adjustment.
Lubrication of Blower.
Air Piping Connections.

SECTION 21—COMBINATION GENERATOR AND POWER TAKE OFF UNIT.

Lubrication.
Instructions for Tightening Generator Drive Belts.
Caution.
Caution.

SECTION 22—UNIT VIBRATION DAMPING SUPPORT FOR FOUR CYLINDER ENGINES

Inspection.
Adjustment.

SECTION 23—UNIVERSAL JOINT ALIGNMENT

SECTION 24—LUBRICATING INSTRUCTIONS FOR TWIN DISC MARINE REVERSE GEAR

SECTION 25—LUBRICATING INSTRUCTIONS FOR SHERWOOD SEA WATER PUMPS

SECTION 26—CARE AND OPERATION OF TWIN DISC POWER TAKE-OFF UNITS

CLICK ANYWHERE FOR MORE DETAILS



CROSS SECTION OF ENGINE