



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

New Holland

Operator's Manual

852

Round Baler

Operator's Manual

JENSALES.COM
or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
NEW HOLLAND OR IT'S SUCCESSORS. **NEW HOLLAND** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

NH-O-852RB

OPERATOR'S MANUAL

ROUND BALER
852

NEW HOLLAND



MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS



WARNING

BALES MADE WITH THE MODEL 852 ARE HEAVY, LARGE AND ROUND. PROPERTY DAMAGE OR INJURY COULD RESULT IF THEY ARE NOT HANDLED PROPERLY.

NEVER EJECT OR STORE BALES WHERE THEY COULD ROLL DOWNHILL!

MAKE SURE THE HANDLING EQUIPMENT WILL NOT UPSET AND WILL HOLD THE BALES IN ALL OPERATING POSITIONS!

Record the serial number of your machine here

Always specify the model of your round baler and its serial number when writing for information or ordering service parts.

CONTENTS

OPERATION

Tractor Draw Bar	5
Tractor Wheel Setting	6
Attaching to the Tractor	6
Full Bale Alarm Control	9
Starting the Baler	13
Field Operation	14
How the 852 Round Baler Functions	14
Preparing the Material for Baling	17
Moisture Content	17
Windrow Size	18
Feeding the Material	18
Bale Size	18
Wrapping the Bale with Twine	19
Ejecting the Bale	19
Shear Bolt Protection	20

IMPORTANT OPERATING TIPS

Moisture Content	21
Bale Feeding Rate	21
Material Preparation	21
Bale Shape	21
Driving Procedures	22
Difficult Conditions	23
Storing Bales Outside	23

LUBRICATION

Special Lubrication Information	26
Lubrication Schedule	28
Lubrication Points	29

ADJUSTMENTS AND MAINTENANCE

Maintenance Schedule	34
Storage	35
Pick-Up Gauge Wheels	36
Pick-Up Limit Chains	36
Wind Guard	36

Pick-Up Flotation Springs	36
Pick-Up Drive Belt	38
Pick-Up Drive Chain	38
Floor Chain Drive Chain	38
Floor Chains	38
Floor Chain Strippers	40
Retractable Core Forming Cam Idlers	41
Apron Chain Idler Sprocket and Chain Runners	41
Apron Drive Belt Idler	42
Apron Chain Tension	46
Bale Density Adjustment	46
Primary Twine Tension	47
Twine Knife(s)	48
Twine Knife Tension	48
Twine Spacing	48
Twine Tube Spacing	49
Safety Breakaway	49
Clutch and Cam Timing	50
Disc Clutch Tension	50
Lock-out Valve	51

REPAIR AND REPLACEMENT

Pick-Up Fingers	52
Pick-Up Cam Followers	52
Apron Chain Tension Springs, Cable and Cable Idlers	53
Straightening or Replacing Damaged Apron Chain Tubes	54
Replacing a Worn or Damaged Apron Chain Assembly	54
Replacing Floor Chain Guide Channels	60

OPTIONAL EQUIPMENT

Floor Wear Panels	61
Pick-Up Limit Chains	61

SPECIFICATIONS	63
-----------------------------	----

FIELD OPERATION

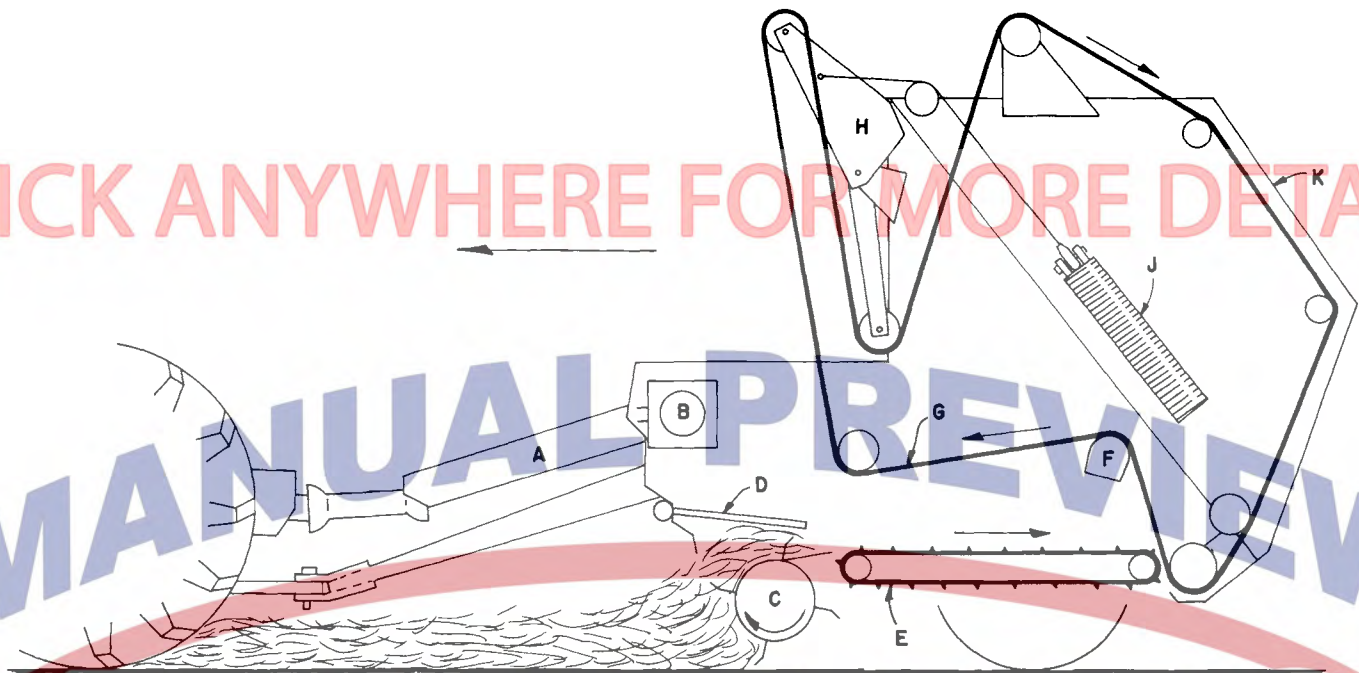


FIGURE 17

- A. POWER SHAFT
- B. GEAR BOX
- C. PICK-UP
- D. WIND GUARD
- E. FLOOR CHAIN ASSEMBLY
- F. CORE-FORMING CAM IDLER

- G. APRON CHAIN
- H. APRON CHAIN TENSION PIVOT ARMS
- J. BALE TENSION SPRINGS
- K. TAIL GATE

HOW THE 852 ROUND BALER FUNCTIONS

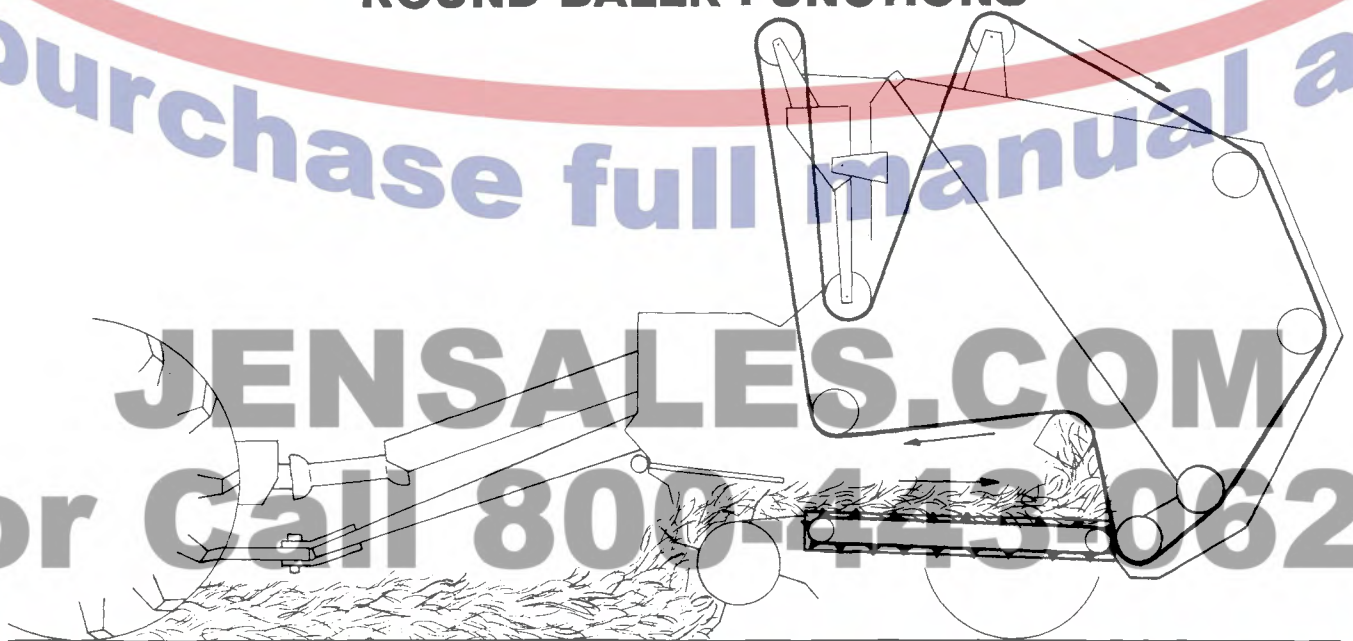


FIGURE 18

The pick-up feeds the material under the adjustable wind guard to the floor chain assemblies. The wind guard holds the material down for positive feeding. The floor chain assemblies convey the material back to apron chain, which

because of its forward rotation, curls the material upward which starts to form the bale core. The core-forming cam idlers provide the cavity in which the core is formed.

CLICK ANYWHERE FOR MORE DETAILS



CAUTION: BE SURE THAT PTO IS DISENGAGED AND TRACTOR IS SHUT OFF BEFORE WORKING ON THE UNIT.



FIGURE B

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

*SAFETY SHIELDS REMOVED
FOR CLARITY.*

FIGURE C

