



Northwest Operator's Manual

41 Crane

JENSALES.COM

or Call 800-443-0625



THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
NORTHWEST OR IT'S SUCCESSORS. **NORTHWEST** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.


TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

Operator's Manual

FORM: OM-112

Use the above FORM number when ordering extra manuals.

CLICK ANYWHERE FOR MORE DETAILS

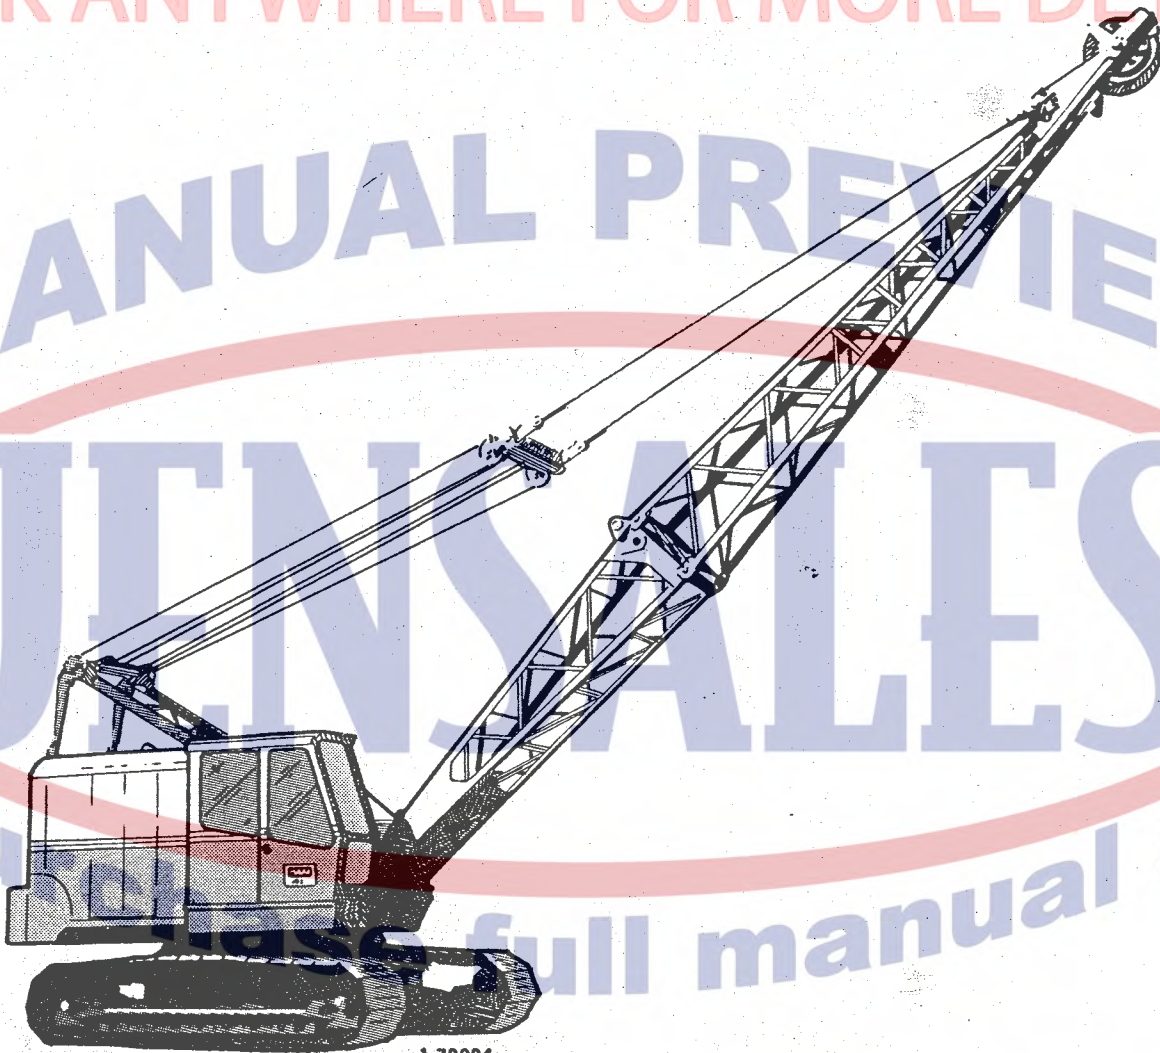

1-79094

MODEL	SERIAL NUMBER	DATE PURCHASED
41		

OPERATOR'S MANUAL

CLICK ANYWHERE FOR MORE DETAILS

**Northwest
Engineering** **nw**

TABLE OF CONTENTS

CLICK ANYWHERE FOR MORE DETAILS

SECTION I - SAFETY RULES	1-1
1-1. SAFETY PROGRAM	1-1
1-2. SAFETY NOTATIONS	1-1
1-3. SAFETY PRECAUTIONS	1-1
SECTION II - OPERATION	2-1
2-1. ENGINE CLUTCH CONTROL	2-2
2-2. ENGINE CLUTCH LOCKOUT CONTROL	2-2
2-3. TRAVEL/SWING/BOOM HOIST LEVER	2-2
2-4. TRAVEL/SWING SELECTOR	2-2
2-5. SWING PRESSURE REGULATOR	2-3
2-6. SWING BRAKE CONTROL	2-3
2-7. STEERING CONTROL	2-3
2-8. BOOM HOIST CONTROL	2-3
2-9. TRAVEL BRAKE CONTROL	2-3
2-10. BOOM HOIST PAWL CONTROL	2-3
2-11. RIGHT DRUM LEVER	2-3
2-12. RIGHT DRUM BRAKE PEDAL	2-4
2-13. LEFT DRUM LEVER	2-4
2-14. LEFT DRUM BRAKE PEDAL	2-4
2-15. OPERATING PRESSURE REGULATOR & GAUGE	2-4
2-16. DRUM DRAG SWITCH (Models Equipped for Clamshell Operation)	2-4
2-17. DRUM DRAG REGULATOR (Models Equipped for Clamshell Operation)	2-4
2-18. DIGGING LOCK CONTROLS	2-4
2-19. ENGINE RESTART BUTTON	2-5
2-20. THROTTLE CONTROL	2-5
2-21. HORN BUTTON	2-5
2-22. ENGINE STOP BUTTON	2-5
2-23. EMERGENCY STOP BUTTON	2-5
2-24. DEFROSTER CONTROL	2-5
2-25. HEATER CONTROLS	2-5
A. HEATER VALVES	2-5
B. AIR-BLEED VALVE	2-5
C. DRAIN COCK	2-6
D. HEATER KNOB	2-6
2-26. WINDSHIELD WIPER CONTROL	2-6
2-27. VOLTMETER	2-6
2-28. ENGINE WATER TEMPERATURE GAUGE	2-6
2-29. ENGINE OIL PRESSURE GAUGE	2-6
2-30. FUEL GAUGE	2-7

2-31. CENTRAL OILING SYSTEM.....	2-7
A. OIL CONTROL VALVE.....	2-7
B. AIR PRESSURE VALVE.....	2-7
C. PURGE BUTTON.....	2-7
D. FEED VALVES.....	2-8
E. AIR REGULATOR AND GAUGE.....	2-8
2-32. OPERATOR'S SEAT.....	2-8
A. HEIGHT.....	2-8
B. SWIVEL.....	2-8
C. TILT.....	2-8
D. SLIDE.....	2-8
2-33. WINDOW MOVEMENT.....	2-9
A. WINDSHIELD.....	2-9
B. SLIDING WINDOW.....	2-9
2-34. ENGINE CONTROL PANEL.....	2-9
A. ENGINE OIL PRESSURE GAUGE.....	2-9
B. ENGINE COOLANT TEMPERATURE GAUGE.....	2-9
C. ENGINE OIL TEMPERATURE GAUGE.....	2-9
D. HOURMETER.....	2-9
E. ENGINE AMMETER.....	2-10
F. START BUTTON.....	2-10
G. STOP BUTTON.....	2-10
H. EMERGENCY STOP CONTROL.....	2-10
I. COLD WEATHER STARTING SYSTEM.....	2-10
J. ENGINE START UP.....	2-10
K. COLD WEATHER STARTING.....	2-11

SECTION III - MAINTENANCE..... 3-1

3-1. GENERAL MAINTENANCE.....	3-1
3-2. WINDOWS.....	3-1
3-3. ENGINE.....	3-1
A. ENGINE FUEL SYSTEM.....	3-1
B. ENGINE CLUTCH.....	3-2
3-4. HORIZONTAL REVERSE SHAFT CLUTCHES.....	3-2
3-5. DRUM CLUTCHES.....	3-3
3-6. DRUM BRAKES.....	3-4
3-7. SWING BRAKE.....	3-4
3-8. TRAVEL BRAKES.....	3-5
3-9. AIR SUPPLY SYSTEM.....	3-5
A. AIR COMPRESSOR.....	3-5
B. AIR RECEIVER TANKS.....	3-6
C. ALCOHOL INJECTOR.....	3-6
C1. FILLING.....	3-6
C2. CLEANING.....	3-6
D. AIR FILTER.....	3-7
E. AIR LUBRICATOR.....	3-7
E1. FILLING.....	3-7
E2. ADJUSTMENT.....	3-8
E3. CLEANING.....	3-8