



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Trojan

Parts Manual

2500

Wheel Loader

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF TROJAN OR IT'S SUCCESSORS. TROJAN AND IT'S SUCCESSORS ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS, AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

TR-P-2500W/L

INDEX

<u>A</u>	<u>PAGE</u>
Accelerator Pedal and Linkage (GM)	55
Accessory Hydraulic Piping (3 Spool)	65A-65B
Air Cleaner (GM)	56
Air Compressor	108-109D
Air Compressor Piping	108-109D
Air Governor	114
Air Reservoir (GM)	108-109D
Air Shift (Reverse to Forward)	100-103
Alternator	60-61D
Air Shift Lever	101
Automatic Bucket Leveler & Indicator	40B-41D
Automatic Bucket Leveler & Hoist Cut-Out Detent Wiring	61E-61F
Automatic Hoist Cut-Out	40-40A
Axle Assembly, Front	120-120B
Axle Assembly, Rear	120D-121A

<u>B</u>	
Back-Up Horn	134-135
Ball Slip Assembly	116-116A
Battery & Wiring	60-61D
Brake Controls and Lines	106-107E
Brake Groups	124-125D
Brake Head Assembly	124-125D
Brake Assembly, Parking	94-94E
Brake Valve	110-111
Bucket Assembly	38-38A
Bucket Cylinder Assembly	66-66C
Bucket Cylinder Hydraulic System	64-65
Bucket Indicator	40B-41D
Bucket Leveler, Automatic	40B-41D

JENSALES.COM

<u>C</u>	
Cab, Canopy	127E
Cab, Enclosed	127A-127D, 127M-127P
Clutch Group - Forward, 2nd & Reverse, 3rd.	90
Clutch Group - Low	91
Clutch Cut-Out Switch	115
Clutch Cut-Out System	106-107E
Compressor Piping, Air (GM)	108-109D
Controls, Main Hydraulic Valve (2 Spool)	69 & 69B
Controls, Main Hydraulic Valve (3 Spool)	69A & 69C
Controls, Transmission	84-85

Control Valve Assembly, Main Hydraulic (2 Spool)
Control Valve Assembly, Main Hydraulic (3 Spool)
Control Valve Assembly, Transmission
Control Valve Console
Converter Assembly, Torque
Counterweight
Cradle, Axle
Cylinder Assembly, Bucket
Cylinder Assembly, Lift
Cylinder Assembly, Steering

70, 71, 71K-71N
71A, 71B, 71P-71T
92-93
28-29EW
104-105F
32-33H
32-33H
66-66C
66D-67F
78-78E

Decals
Detent Assembly, Bucket
Detent Assembly, Lift
Detent Wiring
Differential Group
Directional Levers
Drive Shaft Assembly
Dual Brake Valve

49A-49B
71C-71I
71C-71I
61E-61F
126-126T
84-85
116B-117B
110-111

Electrical System
Electrical System, Automatic Bucket Leveler
& HoistCut-Out
Engine and Related Parts (GM)
Engine Cooling System (GM)
Engine Controls (GM)
Engine Mounting (GM)
Ether Start Kit
Ether Start Switch
Exhaust System (GM)

60-61D
61E-61F
42-43C
46-47A
55
42-43C
48-48C
48-48C
57A-57B

Filter Element Assembly, Hydraulic Oil
Filter Assembly, Steering Hydraulic Oil
Filter Assembly, Transmission Oil
Fire Extinguisher
Floorplates and Seat Support Assembly
Frame and Counterweight
Fuel Filter
Fuel Tank and Lines (GM)

50-51C
50-51C
98-99
48D
30-30A
32-33H
42-43C, 53
54

G

Gauges, Instrument Panel	59-59D
Governor, Air	114
Grille	28-29E

CLICK ANYWHERE FOR MORE DETAILS

H

Headlights	58
Hood	28-29E
Hoist Cut-Out, Automatic	40,40A
Hydraulic Control Valve Levers, Main	69-69C
Hydraulic Control Valve, Main (2 Spool)	70, 71, 71K-71N
Hydraulic Control Valve, Main (3 Spool)	71A, 71B, 71P-71T
Hydraulic Pump, Emergency Steering	130-131
Hydraulic Pump Assembly, Main	68-68C
Hydraulic Pump Assembly, Steering	76-77D
Hydraulic Reservoir	50-51C
Hydraulic System, Accessory (3 Spool)	65A-65B
Hydraulic System, Bucket Cylinder	64-65
Hydraulic System, Emergency Steering	132-133
Hydraulic System, Main	62-63A
Hydraulic System, Steering	72-73G
Hydraulic System, Transmission	82-83L
Hydraulic Tank Pressurized System	52

I

Instrument Panel	59-59D
------------------	--------

L

Leveling Arm	36-37A
Lift Arm	36-37A
Lift Arm Linkage	36-37A
Lift Cylinder Assembly	66D-67F
Lights	58
Lights, Dash	59-59D
Lights, Indicator	59-59D

M

Main Frame Components	32-33H
Main Hydraulic Pump	68-68C
Main Hydraulic System	62-63A
Muffler (GM)	57A-57B

CLICK ANYWHERE FOR MORE DETAILS

purchase full manual at JENSALES.COM or Call 800-443-0625

O

Oil Cooler System
 Oil Filter Assembly, Steering
 Oil Filter Assembly, Transmission
 Oil Filter Element Assembly, Hydraulic
 Orbitrol Assembly, Steering

74-74E
 50-51C
 98-99
 50-51C
 80-81E

P

Paint
 Parking Brake Assembly
 Parking Brake Lever Assembly
 Parking Brake and Linkage
 Pillow Block
 Pivot Group, Upper
 Pivot Group, Lower
 Planetary Hub, Front & Rear Axle
 Power Cluster
 Propeller Shaft Assemblies
 Pressurized System, Hydraulic Tank
 Pump, Emergency Steering
 Pump, Main Hydraulic
 Pump, Steer Hydraulic

49A-49B
 94-94E
 96F-97B
 96-96E
 117A-117B
 34
 35
 122-123D
 112-113
 118-118B
 52
 130-131
 68-68C
 76-77D

R

Radiator Assembly
 Range Selector Lever
 Rear Axle
 Relief Valve Assembly
 Reservoir, Air
 Reservoirs, Fuel and Hydraulic

44-45
 84-85
 120D-121A
 75E-75G
 108-109D
 50-51C

S

Seat Assembly
 Sheetmetal and Shrouding
 Starter, Engine
 Steering Cylinder
 Steering Gear Installation
 Steering Gear Assembly
 Steering Hydraulic Filter
 Steering Hydraulic System
 Steering Pump
 Steering Valve Assembly (Cushion)
 Steering Valve Assembly (Orbitrol)
 Switch, Battery

30B-31B
 28-29E
 60-61D
 78-78E
 78F-79
 80-81E
 50-51C
 72-73L
 76-77D
 74F-75D
 80-81E
 59-59D

CLICK ANYWHERE FOR MORE DETAILS

Switch, Clutch Cut-Out	115
Switch, Engine Pressure	60-61D
Switch, Ether Start	48-48C
Switch, Neutral Start	92-93
Switch, Proximity (Limit)	60-61D
Switch, Starter	59-59D
Switch, Transmission Pressure	60-61D
Switch, Transmission Temperature	60-61D
Switch, Toggle	59-59D

MANUAL PREVIEW

Throttle Linkage (GM)	55
Tires and Wheels	39
Tools	49A-49B
Torque Converter Assembly	104-105F
Transmission Assembly	86-87B
Transmission Case Assembly	88-89C
Transmission Control Valve Assembly	92-93
Transmission Controls	84-85
Transmission Hydraulic System	82-83L
Transmission Hydraulic Filter	98-99
Transmission Mounting Parts	95

JENSALES®

Valve Assembly, Relief	75E-75G
Valve, Clutch Cut-Out	115
Valve Controls, Main	69-69C
Valve, Dual Brake	110-111
Valve, Main Hydraulic Control (2 Spool)	70, 71, 71K-71N
Valve, Main Hydraulic Control (3 Spool)	71A, 71B, 71P-71T
Valve, Cushion	74F-75D
Valve, Orbitrol	80-81E

JENSALES.COM

Wheels	39
Windshield Wiper Kit	127F-127J
Wiring, Main	60-61D
Wiring, Emergency Steer System	128-129
Wiring, Automatic Bucket Leveler and Hoist Cut-Out	61E-61F
Winterization Kit	127K-127L

CLICK ANYWHERE FOR MORE DETAILS