



Versatile

Operator's Manual

400

Swather

1981

JENSALES.COM

or Call 800-443-0625

JENSALES

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
VERSATILE OR IT'S SUCCESSORS. **VERSATILE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

VE-O-400 81

CLICK ANYWHERE FOR MORE DETAILS

Table of Contents

MANUAL PREVIEW



400 Swather

1	Safety	1
2	Operation	4
3	Table Lubrication and Maintenance	12
4	Tractor Lubrication and Maintenance	33
5	Crimper Lubrication and Maintenance	48
6	Troubleshooting	52
7	Storage	56
8	Specifications and Schematics	58
	Lubrication and Maintenance Chart	63
9	Index	71

purchase full manual at

JENSALES.COM

or Call 800-443-0625




CLICK ANYWHERE FOR MORE DETAILS

Serial Number Location

CLICK ANYWHERE FOR MORE DETAILS



1. SPEED CONTROL
2. THROTTLE
3. CHOKE
4. KEYSWITCH
5. TEMPERATURE GAUGE
6. AMPERES GAUGE
7. DASH LIGHT
8. LIGHTSWITCH
9. OIL PRESSURE LIGHT
10. TABLE DRIVE (CRIMPER DRIVE, OPTIONAL)
11. PARKBRAKE
12. SLIDING UNIT CONTROL LEVER, LEFT HAND
13. SLIDING UNIT CONTROL LEVER, RIGHT HAND
14. TABLE CONTROL PEDAL
15. REEL CONTROL PEDAL

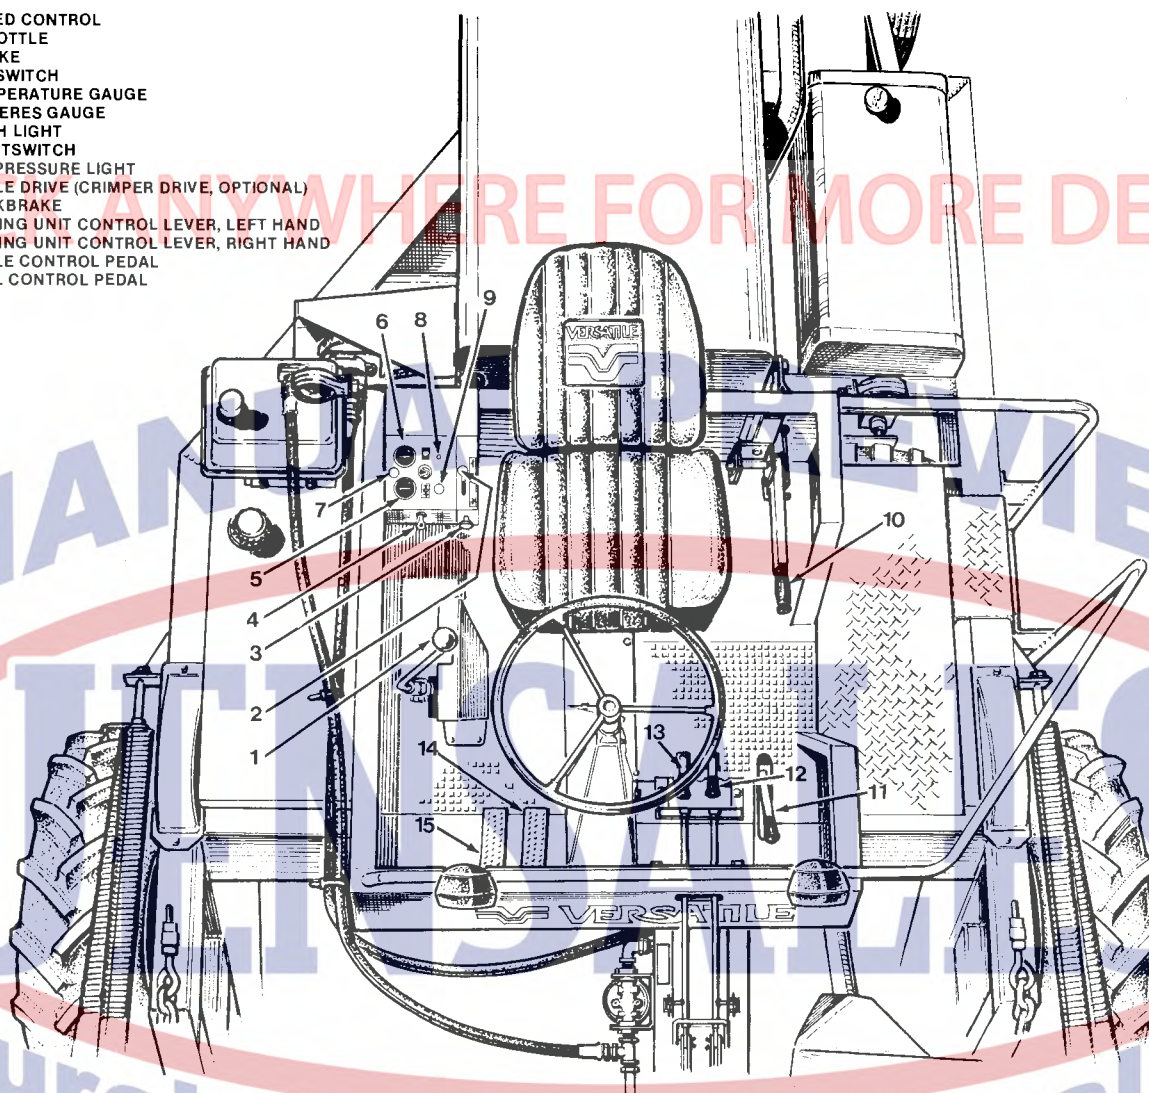

Controls and Instruments

Oil Pressure Light: Indicates when oil level is low. If indicator light glows when engine is running, stop engine immediately. The light glows when the ignition switch is on even though engine isn't running.

Temperature Gauge: Monitors engine operating temperature. If needle moves to high point, stop engine immediately and determine cause.

Ammeter Gauge: Indicates a discharge or charge condition in the electrical system during swather operation.

Hydraulic Control Pedals: The left pedal operates the table (and optional crimper), the right pedal operates reel. Moving toe end of pedals lowers table or reels and moving heel end of pedal raises table or reel.

Table Drive Lever: Push lever DOWN to engage table drive; pull UP to stop table drive.

Crimper Drive (Option): Is controlled by, and operates simultaneously with, the table drive. Disengage table drive to stop crimper.