


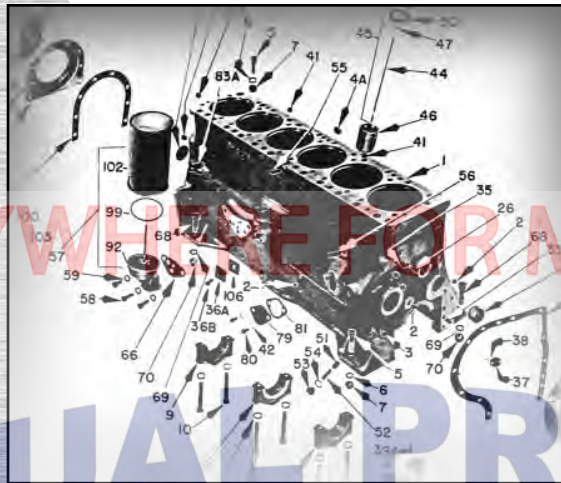

White

Parts Manual

2-45

Field Boss

Parts Manual

JENSALES.COM

or Call 800-443-0625



THIS IS A MANUAL PRODUCED BY **JENSALES INC.** WITHOUT THE AUTHORIZATION OF
WHITE OR IT'S SUCCESSORS. **WHITE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

WH-P-2-45

CLICK ANYWHERE FOR MORE DETAILS

WHITE

2-45 Field Boss

JENSALES®

PARTS CATALOG

Form No. 433 338

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS



12634

JENSALES.COM

2-45 Field Boss

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

Accelerator Pedal And Linkage	44	Controls, Creeper	66
Actuator, Brake	84	Controls, Parking Brake	90
Breakdown	86	Controls, PTO	54
Air Cleaner	38	Controls, PTO Shift	66
Breakdown	40	Controls, Throttle	54
Alternator	24	Cooler, Engine Oil	8
Auxiliary Control Valve	144	Crankcase	8
Breakdown	146	Crankshaft	16
Auxiliary Control Valve And Lines	144	Cover, Valve	6
Auxiliary Creeper And PTO Shift Linkage	66	Cylinder, Depth Stop - 2-1/2 x 8	132
Axle, Front - 2WD	96	Breakdown	134
Axle, Rear	80	Cylinder Head	6
Axle, Support - 4WD	108	Cylinder, Hoses And Connections	132
Battery	43, 168	Cylinder, Internal Lift	128
Battery Box	168	Cylinder, Power Steering	94
Battery Cables	172	Breakdown	106
Block, Cylinder	8	Decals	5, 178
Box, Fuse	172	Decals And Nameplates	5
Brake Actuator	84	Depth Stop Cylinder, 2-1/2 x 8	132
Breakdown	86	Breakdown	134
Brake, Disc	84	Differential	76
Brake Housing	84	Differential, Front - 4WD	102
Brake Pedal And Linkage	88	Differential Lock	78
Breather	8	Dipstick, Engine Oil Level	8
Cables, Battery	172	Dipstick, Transmission Oil Level	64
Camshaft	18	Disc Brake	84
Clutch Cover, Engine	46	Draft Controls, External	136
Breakdown	50	Draft Controls, Internal	138
Clutch Pedal And Linkage	48	Drawbar	180
Clutch, PTO	46	Drive Hub, Case And Tie Rod - 4WD	100
Breakdown	52	Drive Shaft - 4WD	122
Column, Steering	110	Element, Air Cleaner	40
Breakdown	112	Engine And PTO Clutch	46
Connecting Rod	16	Engine Heat Shield	158
Control Valve, Auxiliary	144	Exhaust Manifold	20
Breakdown	146	Exhaust Pipe	36
Control Valve, Hydraulic	128	External Draft Sensitivity	136
Breakdown	130	Fan, Engine	12
Controls, Accelerator	44	Fan Belt	14
Controls, Auxiliary	66	Fender Mounting	160, 162
Controls, Brake	88		
Controls, Clutch	46		

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX (Continued)

Filter, Air Cleaner	40	Input Shaft	60
Filter, Engine Oil	29	Instrument Panel	156
Filter, Fuel - Engine	28	Instrument And Switches	172
Filter, Fuel - Fuel Tank	42	Intake And Exhaust Manifolds	20
Filter, Hydraulic Oil	72	Internal Draft Sensitivity	138
Breakdown	74		
Filter, Power Steering Fluid	94	Lever, Shift	70
Final Drive - 4WD	116	Lift Arm, Hydraulic	128
Flasher, Turn Signal	172	Lift Cylinder, Internal	128
Flow Divider Valve	140	Lights	170
Breakdown	142	Light, Stop Switch	174
Flywheel	16	Lines, Fuel - Engine	24
Frame, Front	154	Lines, Fuel - Fuel Tank	42
Front Axle - 2WD	96	Lines, Power Steering	94
Front Axle Housing - 4WD	98		
Front Differential - 4WD	102	Manifold, Exhaust	20
Front Frame	154	Manifold, Intake	20
Front Transmission Case	56	Motor, Starting	24
Front Wheel And Hub - 2WD	114	Muffler And Exhaust Pipes	36
Fuel Injection Lines	24		
Fuel Pump, Injection Nozzle And Lines	24	Nameplates	5, 176
Fuel Tank, Filter And Lines	42	Nozzle, Fuel Injection	24
Fuse Box	172	Numerical Index	184
Gear Shift	64	Oil Filter, Engine	29
Glow Plug	24	Oil Filter, Hydraulic	72
Grille	152	Breakdown	74
		Oil Lines, Engine	22
Harness, Wiring	174	Oil Pressure Switch	8
Headlamp	170	Oil Pump, Engine	26
Head, Cylinder	6		
Heat Shield, Engine	158	Pan, Engine Oil	8
Hood, Side Panels And Grille	152	Panel, Instrument	156
Horn	172	Parking Brake	90
Hoses, Hydraulic	132	Breakdown	92
Housing, Brake	84	Parking Brake And Linkage	90
Housing, Front Axle - 4WD	98	Pedal, Accelerator	44
Housing, Hydraulic	124	Pedal, Brake	88
Hydraulic Housing And Valves	124	Pedal, Clutch	48
Hydraulic Lift Arm And Cylinder	128	Piston	16
Hydraulic Oil Filter	72	Piston Rings	16
Breakdown	74	Planetary Final Drive - 4WD	118
Hydraulic Pump, Valve And Lines	140	Planetary And Sun Gear	82
		Platform And Fender Mounting	160
Ignition Switch	172		
Injection Pump	32		

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX (Continued)


Plug, Glow	24	Steering Wheel And Column	110
Power Steering	104	Step, Mounting	162
Power Steering Cylinder	104	Stop Light, Safety Start Switch And Wiring Harness.	174
Breakdown	106	Sun Gear	82
Power Steering Pump, Filter And Lines	94	Support, Axle - 4WD	108
Power Take-Off	68	Switch, Ignition	172
PTO And Throttle Controls	54	Switch, Oil Pressure	8
PTO Clutch	48	Switch, Safety Start	174
Breakdown	52		
PTO Drive	62	Tachourmeter Drive	8
PTO Shield And Hydraulic Oil Filter	72	Tail Lamp	170
Pump, Fuel	24	Thermostat	12
Pump, Injection	32	Three-Point Hitch	148
Pump, Water	12	Tie Rod - 2WD	96
Push Rods	18	Tie Rod - 4WD	100
		Timing Gear Case, Water Pump And Fan Drive	12
Radiator	34	Tools	182
Rear Axle Housing And Rear Wheel	80	Transfer Drive - 4WD	120
Rear Transmission Case	58	Transmission	60
Rear Wheel	80	Transmission Case, Front	56
Restrictor Valve	124	Transmission Case, Rear	58
Breakdown	126		
Rings, Piston	16	Valve, Control	128
Rocker Arm	18	Breakdown	130
Rocker Arm Shaft	18	Valve Cover	6
Rod, Connecting	16	Valve, Engine Relief	8
Rod, Push	18	Valve, Exhaust	18
		Valve, Flow Divider	140
Seat And Suspension	164	Breakdown	142
Breakdown	166	Valve, Intake	18
Seat, Seat Suspension And Console	164	Valve, Restrictor	124
Sending Unit, Fuel Tank	172	Breakdown	126
Shaft, Drive - 4WD	122		
Shaft, Rocker Arm	18	Water Pump	12
Shift Lever And Linkage	70	Weight, Front Frame	80
Side Panel	152	Weight, Rear Wheel	80
Sleeve, Cylinder	8	Wheel, Rear	80
Starter	24	Wheel, Steering	110
Steering Column And Control Shaft	110	Wiring Harness	174
Breakdown	112		

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CYLINDER HEAD

CLICK ANYWHERE FOR MORE DETAILS

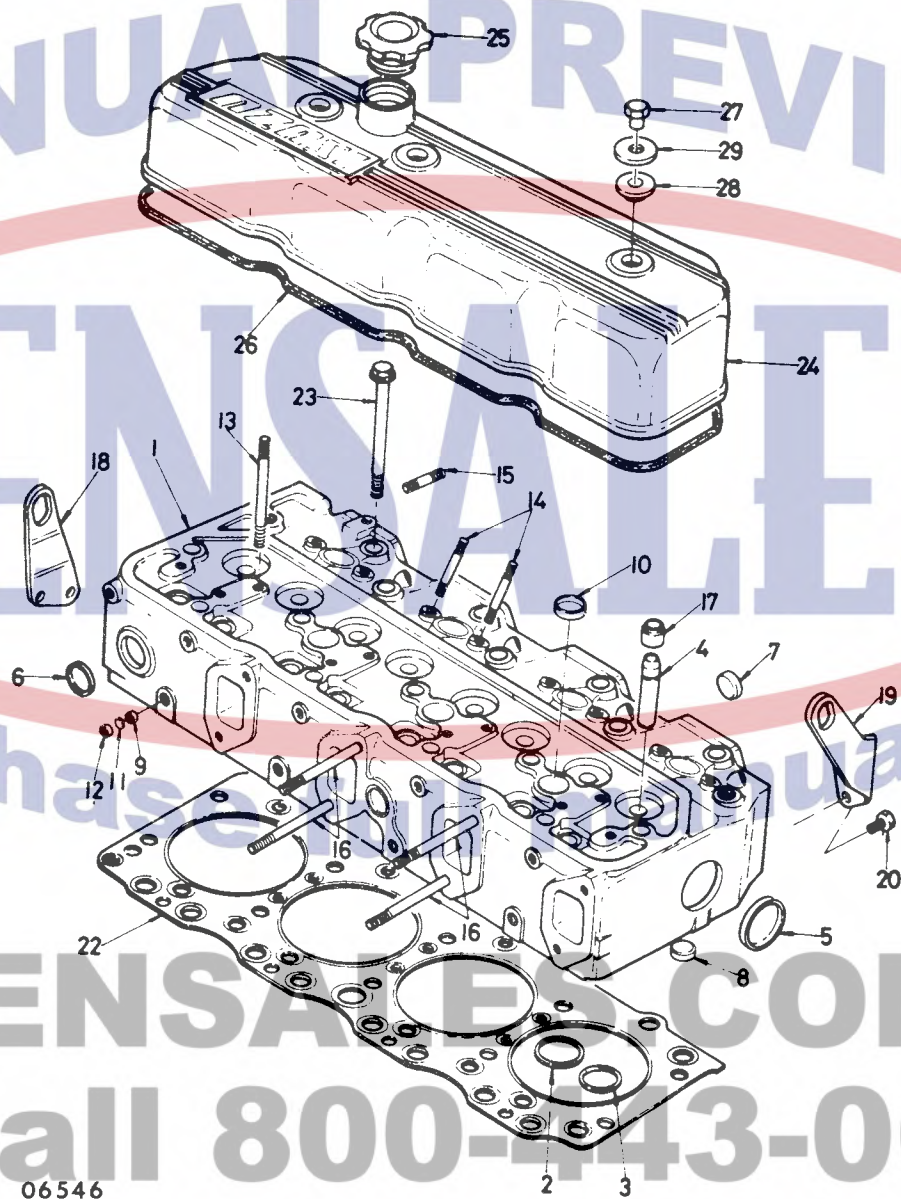

CLICK ANYWHERE FOR MORE DETAILS

CYLINDER HEAD

REF. NO.	PART NUMBER	DESCRIPTION	NO. REQ.	SERIAL NUMBER
1	33-0034401	HEAD, CYLINDER	1	
2	33-0037257	INSERT, VALVE SEAT INTAKE	4	
3	33-0037236	INSERT, VALVE SEAT-EXHAUST	4	
4	33-0034770	GUIDE, VALVE	8	
5	33-0018756	PLUG, CUP	1	
6	33-0018880	PLUG, CUP	2	
7	33-0034134	PLUG, CUP	4	
8	33-0037109	PLUG, CUP	2	
9	33-0018783	PLUG, CUP	4	
10	33-0034134	PLUG, CUP	3	
11	33-0036692	PLUG, EXPANSION	4	
12	33-0037060	PLUG, CUP	4	
13	33-0036773	STUD	3	
14	33-0036425	STUD, INJ NOZZLE	4	
14	33-0036447	STUD, INJ NOZZLE	4	
15	33-0036420	STUD, INTAKE	2	
16	33-0036447	STUD, EXHAUST	4	
17	33-0035145	SEAL, VALVE GUIDE	8	
18	33-0037281	HANGER, FRONT	1	
19	33-0037303	HANGER, REAR	1	
20	33-0017639	BOLT, SEMS	4	
22	33-0037079	GASKET, CYL HEAD	1	
23	33-0034207	BOLT	18	
24	33-0034452	COVER, VALVE	1	
25	33-0037273	CAP	1	
26	33-0037087	GASKET, VALVE COVER	1	
27	33-0037095	NUT	3	
28	33-0018848	GASKET	3	
29	33-0018856	WASHER	3	

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS