



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

White

Parts Manual

2-32

Field Boss

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY **JENSALES INC.** WITHOUT THE AUTHORIZATION OF **WHITE** OR IT'S SUCCESSORS. **WHITE** AND IT'S SUCCESSORS ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS, AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

WH-P-2-32 FB

CLICK ANYWHERE FOR MORE DETAILS



13930

JENSALES.COM
or Call **800-443-0625**

2-32 Field Boss

Serial No. TE-4320 -- 00001 -

CLICK ANYWHERE FOR MORE DETAILS

Alphabetical Index

Accelerator Pedal and Linkage	54	Crankcase	12
Actuator, Brake	86	Crankshaft	16
Air Cleaner	46	Creeper Lever and Linkage	74
Alternator	36	Cylinder, Remote Hydraulic - 2-1/2 x 8	168
Breakdown	42	Breakdown	170
Auxiliary Control Valve	160	Cylinder Head	6
Breakdown	162	Cylinder, Internal Lift	118
Auxiliary Control Valve and Lines	160	Cylinder, Power Steering	102
Axle Bracket	94	Breakdown	156
Axle, Front - 2WD	96,98		
Axle, Rear	84	Decals and Emblems	5,154
Axle, Support - PFA	106	Differential	82
		Differential, Front - PFA	104
Battery	147	Differential Lock	82
Battery Box	146	Dipstick, Engine Oil Level	12
Battery Cables	146	Dipstick, Transmission Oil Level	60
Belt, Fan and Alternator	26	Disc Brake	86
Belt, Seat	143	Draft Controls, External	124
Block Cylinder	8	Draft Controls, Internal	122
Box, Fuse	148	Drawbar	70
Brake Actuator	86	Drive Hub and Case - PFA	108
Brake, Disc	86	Drive Shaft - PFA	76,104
Brake, Parking	90		
Brake Pedal and Linkage	88	Element, Air Cleaner	46
Breather, Engine Oil	12	Engine Clutch	56
		Engine Frame	132
Cables, Battery	146	Engine Hanger and Attaching Parts	32
Camshaft	20	Engine Oil Filter	22
Clutch Cover, Engine	56	Engine Oil Tubes	24
Clutch Pedal and Linkage	58	Exhaust Manifold	28
Clutch, PTO	62	Exhaust Pipe	48
Breakdown	158	External Draft Sensitivity	124
Column, Steering	100		
Connecting Rod	16	Fan, Engine	26
Console	140	Fan Belt	26
Control Valve, Auxiliary Hydraulic	164	Feed Pump - Injection	34
Breakdown	166	Breakdown	38
Controls, Accelerator	54	Fender	138
Controls, Brake	88	Filter, Air Cleaner	46
Controls, Clutch	58	Filter, Engine Oil	22
Controls, Creeper	74	Filter, Fuel	52
Controls, Parking Brake	90	Filter, Hydraulic and Transmission Oil	126
Control, Position	120	Filter, Power Steering Fluid	102
Controls, PTO Engagement	128	Final Drive - PFA	108
Controls, PTO Shift	80	Flasher, Turn Signal	148
Controls, Speed Range	74	Floor	140
Controls, Throttle	54	Flow Control Valve - 3 Pt. Hitch	118
Coolant Heater	44	Flow Control Valve - PTO	126
Coupling, Remote Hydraulic	168		
Cover, Valve	6		

Alphabetical Index (Continued)

Flywheel	16	Key Switch and Keys	148
Forks, Shifter	66	Lamps	150
Frame, Engine	132	Lever, Gear Shift	66
Front Axle - 2WD	96,98	Lift Arm, Hydraulic	116
Front Axle Housing - PFA	106	Lift Cylinder, Internal	118
Front Differential - PFA	104	Lights and Horn	150
Front Transmission Case	60	Lines, Fuel - Engine	30
Front Wheel, 2WD and PFA	112	Lines, Fuel - Fuel Tank	52
Fuel Filter and Lines	52	Lines, Hydraulic	126
Fuel Injection Lines	30	Lines, Power Steering	102
Fuel Injection Pump	34	Manifold, Exhaust	28
Fuel System	30	Manifold, Intake	28
Fuel Tank, Filter and Lines	52	Motor, Starting	36
Fuse Box	148	Breakdown	40
Gauge, Fuel	148	Muffler and Exhaust Pipes	48
Gauge - Water Temperature	148	Nozzle, Fuel Injection	30
Gear Shift, Transmission	66	Numerical Index	174
Glow Plug	36	Oil Filter, Engine	22
Grille	134	Oil Filter, Hydraulic and Transmission	126
Harness, Wiring	152	Oil Lines, Engine	124
Headlamp	150	Oil Pan	12
Head, Cylinder	6	Oil Pressure Switch	36
Hood and Frame	132	Oil Pump, Engine	14
Hood Supports	50	Pan, Engine Oil	12
Horn	150	Panel, Instrument	148
Hoses, Remote Hydraulic	168	Panels, Side	136
Hourmeter	148	Parking Brake and Linkage	90
Housing, Brake and Rear Axle	84	Pedal, Accelerator	54
Housing, Front Axle - PFA	106	Pedal, Brake	88
Housing, Hydraulic	114	Pedal, Clutch	58
Hydraulic Coupling, Cylinder and Hoses	168	Piston	16
Hydraulic Lift Arm	116	Piston Rings	16
Hydraulic Oil Filter	126	Plug, Glow	36
Hydraulic Pump, Filter and Lines	126	Position Control	120
Idler Gear - Reverse	62	Power Steering	102
Ignition Switch	148	Power Steering Cylinder	102
Injection Pump	34	Breakdown	156
Input Shaft	62	Power Steering Pump, Filter and Lines	102
Instrument Panel	148		
Instrument and Switches	148		
Intake and Exhaust Manifolds	28		
Internal Draft Sensitivity	122		

Alphabetical Index (Continued)

Power Take-Off	78	Switch, Back Up	152
PTO Clutch	62	Switch, Flasher and Turn Signal	148
Breakdown	158	Switch, Horn	148
PTO Drive and Shield	78	Switch, Key Start	148
PTO Engagement Lever and Linkage	128	Switch, Light	148
PTO Shift Lever and Linkage	80	Switch, Limit - PTO Control	150
Pulley, Crankshaft	18	Switch, Oil Pressure	36
Pump, Engine Oil	14	Switch, Park Brake	150
Pump, Hydraulic	126	Switch, Safety Start	150
Breakdown	162		
Pump, Fuel Injection	34	Tachourmeter Drive	152
Pump, Power Steering	102	Tail Lamp	150
Breakdown	163	Thermostat	26
Pump, Water	26	Three-Point Hitch	130
		Throttle Controls	54
Radiator	44	Tie Rod - 2WD	98
Rear Axle Housing	84	Tie Rod - PFA	110
Rear Transmission Case	68	Timing Gear Case	10
Rear Wheel	92	Timing Gears	18
Regulator, Voltage	42	Transmission Case, Front	60
Remote Coupling, Cylinder and Hoses	168	Transmission Case, Rear	68
Remote Valve, Coupling and Cylinder	164, 168	Transmission Gears - Front Case	62, 64
Reverse Idler Gear	62	Transmission Gears - Rear Case	72
Rings, Piston	16	Transmission Oil Filter	126
Rocker Arm	20	Turn Signal	148
Rocker Arm Shaft	20	Turn Signal and Flasher	148
Rod, Connecting	16		
Rod, Tie, 2WD	98	Valve, Auxiliary Control	164
Rod, Tie, PFA	110	Breakdown	166
Roll Bar and Seat Belt	142	Valve Cover	6
		Valve Exhaust	20
Safety Start Switch	150	Valve, Flow Control, 3 Pt. Hitch	118
Seat	142	Valve, Flow Control, PTO	126, 128
Seat Belt	143	Breakdown	160
Sending Unit, Fuel Tank	150	Valve, Intake	20
Sending Unit, Water Temperature	36	Valve, Remote	164
Shaft, Drive - 4WD	76, 104	Breakdown	166
Shaft, Rocker Arm	20	Voltage Regulator	42
Shift Fork	66		
Shift Lever and Linkage, Speed Range and Creeper	74	Warning Lamp	150
Side Panels	137	Water Pump	26
Speed Range Lever and Linkage	74	Wheel, Front - 2WD	112
Starter	36	Wheel, Front - PFA	112
Breakdown	40	Wheel, Rear	92
Steering Wheel and Column	100	Wheel, Steering	100
Step, Mounting and Supports	144	Wiring Harness	152
Support, Axle, PFA	106	Work Lamp	151

TIMING GEAR CASE

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW



JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

TIMING GEAR CASE

REF. NO	PART NUMBER	DESCRIPTION	NO. REQ.	SERIAL NUMBER
1	33-0079626	CASE, TIMING GEAR	1	
3	33-0079227	STUD	1	
3-1	33-0082236	STUD	1	
5	33-0079596	DOWEL	2	
6	33-0079634	GASKET, GEAR CASE COVER	1	
7	33-0079693	SEAL	1	
10	33-0080373	PIPE, OIL JET	1	
11	33-0079154	JOINT	1	
11-1	33-0079405	BOLT, JOINT	2	
12	33-0018201	GASKET, OIL PIPE	1	
13	33-0082066	BOLT, SEMS, OIL PIPE	1	
17	33-0017604	BOLT, SEMS, GEAR CASE TO BLOCK	1	
17	33-0036234	BOLT, SEMS, GEAR CASE TO BLOCK	5	
18	33-0079103	WASHER	6	
19	33-0082090	BOLT, SEMS, GEAR CASE TO BLOCK	1	
20	33-0018066	WASHER	1	
25	33-0079685	COVER, GEAR CASE	1	
27	33-0079715	GASKET, COVER GEAR CASE	1	
28-2	33-0016179	BOLT, SEMS	16	
28	33-0079189	BOLT, SEMS	2	
29	33-0063169	NUT,	1	
30	33-0036587	LOCK WASHER	1	
32	33-0079677	COVER, CAM GEAR	1	
33	33-0079707	GASKET COVER, CAM GEAR	1	
35	33-0081566	GASKET	1	
37	33-0063169	NUT,	2	
38	33-0036587	LOCK WASHER	2	
40	33-0079642	SPACER, GEAR CASE, P.T.O.	1	
41	33-0079650	GASKET, SPACER	1	
42-1	33-0034606	COVER, TIMING CHECK	1	
43-1	33-0037176	GASKET	1	
44	33-0036161	BOLT, SEMS	2	
45-3	33-0036420	STUD, TENSIONER	1	
46-4	33-0082201	STUD, HYDRAULIC PUMP	3	
47	33-0079332	SEAL, OIL, CRANK SHAFT FRT	1	
48	33-0036439	STUD, WATER INLET PIPE	2	

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS