



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

White

Parts Manual

2-75

Field Boss

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
WHITE OR IT'S SUCCESSORS. **WHITE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

WH-P-2-75

CLICK ANYWHERE FOR MORE DETAILS



JENSALES.COM
or Call **800-443-0625**

2-75 Field Boss

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

Accelerator Pedal And Linkage	54	Crankcase	8
Actuator, Brake	90	Crankshaft	18
Air Cleaner	50	Cover, Valve	6
Alternator	38	Cylinder Block	8
Breakdown	44	Cylinder, Depth Stop	128
Auxiliary Control Valve And Lines	126	Breakdown, 2-1/2 x 8	130
Auxiliary Creeper And PTO Shift Linkage	70	Breakdown, 3-1/2 x 8	132
Axle, Front - 2WD	96	Cylinder Head	6
Axle, Front - 4WD	110	Cylinder, Hoses And Connections	128
Axle, Rear	86	Cylinder, Internal Lift	118
Axle, Support - 4WD	100	Cylinder, Power Steering	98
Battery	52, 158	Breakdown	176
Battery Box	158	Damper, Steering 4WD	106
Battery Cables	162	Decals And Emblems	166
Belt, Fan And Alternator Drive	26	Depth Stop Cylinder	128
Belt, Seat	185	Breakdown, 2-1/2 x 8	130
Block, Cylinder	8	Breakdown	132
Box, Fuse	162	Differential	82
Brake Actuator	90	Differential, Front - 4WD	110
Brake, Disc	90	Differential Lock	84
Brake Housing	90	Dipstick, Engine Oil Level	14
Brake Pedal And Linkage	92	Dipstick, Transmission Oil Level	68
Breather	8	Disc Brake	90
Cables, Batter	162	Draft Controls, External	120
Camshaft	20	Draft Controls, Internal	122
Clutch Cover, Engine	56	Drawbar	168
Breakdown	174	Drive Hub, Case And Tie Rod - 4WD	108
Clutch Pedal And Linkage	58	Drive Shaft - 4WD	80
Clutch, PTO	56	Drive, Transfer, 4WD	78
Column, Steering	102	Engine And PTO Clutch	56
Connecting Rod	18	Engine Hanger And Attaching Parts	34
Control Valve, Auxiliary	126	Engine Heat Shield	150
Control Valve, Hydraulic	118	Engine Oil Cooler	28
Breakdown	180	Exhaust Manifold	30
Controls, Accelerator	54	Exhaust Pipe	48
Controls, Auxiliary	70	External Draft Sensitivity	122
Controls, Brake	92	Fan, Engine	26
Controls, Clutch	58	Fan And Alternator Drive Belt	26
Controls, Creeper	70	Feed Pump	36
Controls, Parking Brake	92	Breakdown	40
Controls, PTO	70	Fender Mounting	152, 154
Controls, PTO Shift	60	Filter, Air Cleaner	50
Controls, Throttle	60		
Cooler, Engine Oil	26		

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX (Continued)

Filter, Engine Oil	22	Input Shaft	64
Filter, Fuel - Engine	22	Instrument Panel	148
Filter, Fuel - Fuel Tank	52	Instrument And Switches	162
Filter, Hydraulic And Transmission Oil	124	Intake And Exhaust Manifolds	30
Filter, Power Steering Fluid	94	Internal Draft Sensitivity	122
Final Drive - 4WD	112	Key Switch And Keys	162
Flasher, Turn Signal	162	Lamps	160
Flow Divider Valve	124	Lever, Shift	68
Breakdown	182	Lift Arm, Hydraulic	118
Flywheel	18	Lift Cylinder, Internal	118
Flywheel Housing	12	Lights	160
Frame, Front	144	Lines, Fuel - Engine	32
Front Axle - 2WD	96	Lines, Fuel - Fuel Tank	52
Front Axle Housing - 4WD	106	Lines, Power Steering	94
Front Differential - 4WD	110	Manifold, Exhaust	30
Front Frame	144	Manifold, Intake	30
Front Transmission Case	62	Motor, Starting	38
Front Wheel And Hub - 2WD	104	Breakdown	42
Fuel Injection Lines	32	Muffler And Exhaust Pipes	48
Fuel Pump, Injection Nozzle And Lines	32	Nameplates	166
Fuel Tank, Filter And Lines	52	Nozzle, Fuel Injection	32
Fuse Box	162	Numerical Index	188
Gauge, Coolant Temperature	46	Oil Cooler, Engine	26
Gauge, Fuel	162	Oil Filter, Engine	22
Gear Shift	68	Oil Filter, Hydraulic And Transmission	124
Glow Plug	38	Oil Lines, Engine	24
Grille	142	Oil Pressure Switch	38
Harness, Wiring	164	Oil Pump, Engine	16
Headlamp	160	Pan, Engine Oil	14
Head, Cylinder	6	Panel, Instrument	148
Heat Shield, Engine	150	Parking Brake	92
Hood, Side Panels And Grille	142	Parking Brake And Linkage	92
Horn	162	Pedal, Accelerator	54
Hoses, Hydraulic	128	Pedal, Brake	92
Housing, Brake	90	Pedal, Clutch	58
Housing, Front Axle - 4WD	106	Piston	18
Hydraulic Housing And Valves	116	Piston Rings	18
Hydraulic Lift Arm And Cylinder	118	Planetary Final Drive - 4WD	114
Hydraulic Oil Filter	116	Planetary And Sun Gear	88
Hydraulic Pump, Valve And Lines	124	Platform And Fender Mounting	152
Ignition Switch	162		
Injection Nozzles And Lines	32		
Injection Pump	36		

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX (Continued)

Plug, Glow	38	Rocker Arm Shaft	20
Power Steering	98	Rod, Connecting	18
Power Steering Cylinder	98	Rod, Push	20
Breakdown	176	Roll Bar And Canopy	184
Power Steering Pump, Filter And Lines	94	Safety Start Switch	164
Power Take-Off	72	Seat And Suspension	156
PTO And Throttle Controls	60	Breakdown	186
PTO Clutch	56	Seat Belt	185
PTO Drive	66	Seat, Seat Suspension And Console	156
PTO Inter-Lock And 1000 RPM Shaft	74	Sending Unit, Fuel Tank	162
PTO Shaft, 540 RPM	72	Shaft, Drive - 4WD	80
PTO Shield	72	Shaft, Rocker Arm	20
Pump, Engine Oil	16	Shift Lever And Linkage	68
Pump, Fuel	36	Side Panel	142
Pump, Hydraulic Oil	124	Sleeve, Cylinder	8
Pump, Injection	36	Starter	38
Pump, Water	26	Breakdown	42
Push Rods	20	Steering Column And Control Shaft	102
Radiator	46	Steering Wheel And Column	102
Rear Axle Housing And Rear Wheel	86	Step, Mounting	154
Rear Transmission Case	62	Sun Gear	88
Rear Wheel	86	Support, Axle - 4WD	98
Regulator, Voltage	44	Switch, Ignition	162
Remote Coupling, Cylinder And Hoses	128	Switch, Oil Pressure	38
Remote Valve Hydraulic System	134	Switch, Safety Start	164
Restrictor Valve	116	Tachometer Drive	8
Breakdown	178	Tail Lamp	160
Rings, Piston	18		
Rocker Arm	20		

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX (Continued)

Thermostat	26	Valve, Exhaust	20
Three-Point Hitch	138	Valve, Flow Divider	124
Throttle Controls	66	Breakdown	182
Tie Rod - 2WD	96	Valve, Intake	20
Tie Rod - 4WD	108	Valve, Restrictor	116
Timing Gear Case	10	Breakdown	178
Tools	172	Voltage Regulator	44
Transfer Drive - 4WD	78	Water Pump	26
Transmission	64	Weight, Front Frame	98
Transmission Case, Front And Rear	62	Weight, Rear Wheel	88
Transmission And Hydraulic Oil Filter	124	Wheel, Rear	86
Valve, Control	118	Wheel - Front - 2WD	104
Breakdown	180	Wheel - Front - 4WD	114
Valve Cover	6	Wheel, Steering	102
Valve, Engine Relief	8	Wiring Harness	164

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS