



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

*White*  
Operator's Manual

6045

2 & 4 Wheel Drive

JENSALES.COM  
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF  
**WHITE** OR IT'S SUCCESSORS. **WHITE** AND IT'S SUCCESSORS  
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,  
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

Operator's Manual

WH-O-6045

# TRACTOR


CLICK ANYWHERE FOR MORE DETAILS



## OPERATOR'S MANUAL

WHITE

Model 6045

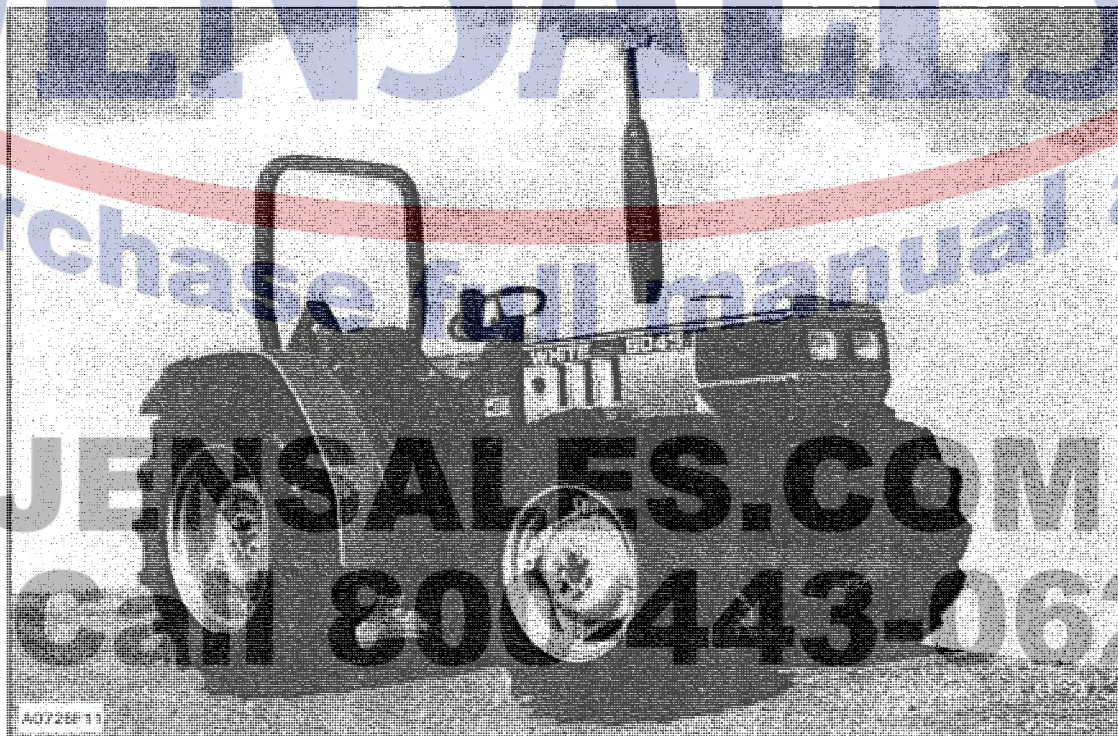

CLICK ANYWHERE FOR MORE DETAILS

## CONTENTS

|                                                           |          |
|-----------------------------------------------------------|----------|
| <b>INTRODUCTION AND IDENTIFICATION .....</b>              | <b>2</b> |
| <b>WARRANTY INFORMATION .....</b>                         | <b>2</b> |
| <b>IDENTIFICATION .....</b>                               | <b>3</b> |
| Serial Numbers .....                                      | 3        |
| Right and Left .....                                      | 3        |
| Tractor Serial Number .....                               | 3        |
| Engine Serial Number .....                                | 3        |
| Roll-Over Protective Structure (ROPS) Serial Number ..... | 3        |

MANUAL PREVIEW

**JENSALES®**

purchase full manual at

**JENSALES.COM**  
**or Call 800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS

## IDENTIFICATION

### Serial Numbers

When ordering repair parts, it is important to advise your dealer of the serial numbers of your tractor. The tractor engine also has its own serial number. Serial number locations are shown in Figures 1 through 4.

### Right and Left

When reference is made concerning the right and left of the tractor this is determined when sitting in the Operator's seat and facing the front of the tractor.

### Tractor Serial Number

**FIGS. 1 & 2:** Tractor model and serial number is located in two different areas. The first location is the Tractor Identification Plate, 1, located on the right dash panel, the second location is on the rear housing, 2, just below the upper link support. Record tractor model and serial number on lines provided below.

**MODEL:** \_\_\_\_\_

**SERIAL NUMBER:** \_\_\_\_\_

### Engine Serial Number

**FIG. 3:** Engine serial number, 1, is stamped on engine block below engine oil filter on right lower rear of block.

Example: 1000.3W\*1671

**ENGINE SERIAL NUMBER:** \_\_\_\_\_

*NOTE: A metal plate is mounted on left side of engine block. Plate contains miscellaneous engine information but does not include engine serial number.*


### Roll-Over Protective Structure (ROPS) Serial Number

**FIG. 4:** ROPS model number, serial number and tractor model are stamped on a metal plate, 1, attached to R.H. rear of ROPS. Record ROPS serial number on line provided below.

**ROPS SERIAL NUMBER:** \_\_\_\_\_



**FIG. 1**

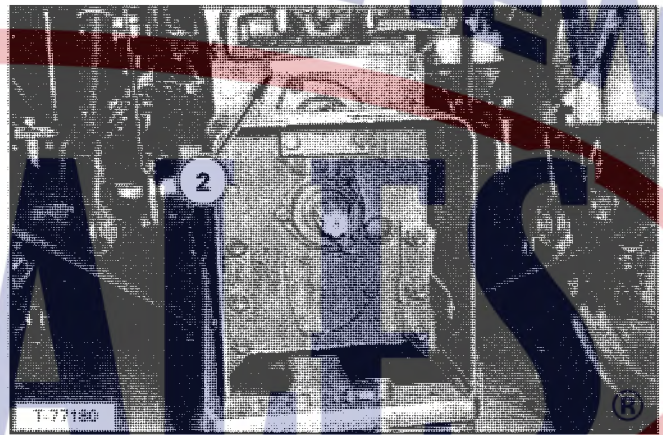

**FIG. 2**



**FIG. 3**



**FIG. 4**

## **CONTENTS**

|                                              |           |
|----------------------------------------------|-----------|
| <b>SAFETY .....</b>                          | <b>5</b>  |
| <b>SAFETY ALERT SYMBOL AND TERMS .....</b>   | <b>5</b>  |
| <b>TRACTOR AND IMPLEMENT .....</b>           | <b>5</b>  |
| <b>INTRODUCTION .....</b>                    | <b>5</b>  |
| <b>A WORD TO THE OPERATOR .....</b>          | <b>5</b>  |
| <b>DANGER, WARNING AND CAUTION .....</b>     | <b>6</b>  |
| <b>DECALS .....</b>                          | <b>6</b>  |
| <b>FOLLOW A SAFETY PROGRAM .....</b>         | <b>6</b>  |
| For Safe Operation .....                     | 6         |
| Observe The Following .....                  | 6         |
| <b>PROTECTION .....</b>                      | <b>7</b>  |
| <b>OPERATION .....</b>                       | <b>7</b>  |
| <b>DAMAGE TO THE ROPS .....</b>              | <b>7</b>  |
| <b>PROTECT YOURSELF .....</b>                | <b>8</b>  |
| <b>PREPARE FOR SAFE OPERATION .....</b>      | <b>9</b>  |
| Know Your Equipment .....                    | 9         |
| Check The Equipment .....                    | 9         |
| Clean The Tractor .....                      | 10        |
| Protect The Environment .....                | 10        |
| Servicing The Tractor .....                  | 11        |
| Starting .....                               | 12        |
| Mount And Dismount Safely .....              | 12        |
| Start Safely .....                           | 12        |
| Follow Recommended Starting Procedures ..... | 12        |
| Test The Controls .....                      | 12        |
| Starting Fluid .....                         | 13        |
| Work Safely .....                            | 13        |
| Make The Right Moves .....                   | 13        |
| Follow Safe Operating Practices .....        | 13        |
| Watch Out For Others .....                   | 13        |
| Risk Of Overturning .....                    | 14        |
| To Avoid Side Overturns .....                | 14        |
| Avoid Rear Overturns .....                   | 15        |
| General Operating Hazards .....              | 16        |
| Implements And Attachments .....             | 17        |
| Safety - Towing .....                        | 17        |
| Road Transport .....                         | 17        |
| Rules Of The Road .....                      | 18        |
| After Operation .....                        | 18        |
| <b>SAFETY DECALS .....</b>                   | <b>19</b> |