


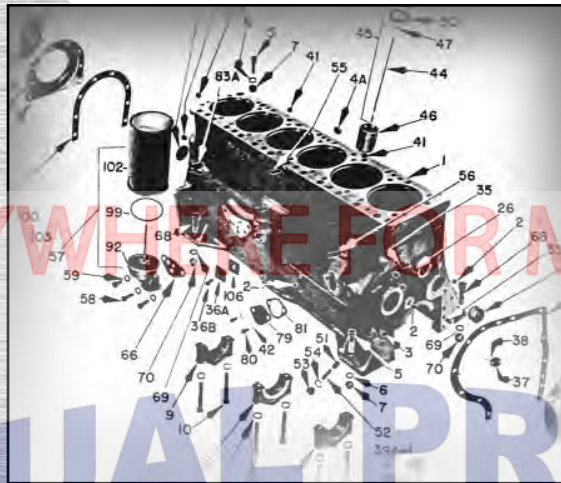

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

White Parts Manual

700
Utility Special

JENSALES.COM
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
WHITE OR IT'S SUCCESSORS. **WHITE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

Parts Manual

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW



10766

JENSALES.COM
or Call 800-443-0625

WHITE 700 UTILITY SPECIAL

BEGINNING TRACTOR SERIAL NUMBER 854 000

REPLACES FORM NO. 433 273

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

Accelerator Linkage	40	Cylinder, Power Steering - 2WD	132
Aid, Cold Starting - Thermostart	43A	Breakdown 31-290 4234	136
Air Cleaner	26	Breakdown 31-290 5370	137
Breakdown 31-290 4767	27	Breakdown 31-290 5883 Weber	137A
Alternator	46	Breakdown 31-290 5883 Sima	137B
Breakdown 31-290 4525	48	Cylinder, Power Steering - 4WD	132
Arm, Rocker	18	Breakdown 31-290 4235	134
Axle And Axle Shafts, Front 4WD	116	Breakdown 31-290 5811	135
Axle Carrier, Front - 4WD	123	Breakdown 31-290 5884 Weber	135A
Axle Carrier, Rear	100	Breakdown 31-290 5884 Sima	135B
Axle, Front, 2WD	140	Cylinder, Sleeve	8
Axle Shaft, Front, 4WD	122	Control Unit, Power Steering	126, 127A
Axle Support, Front, 4WD	117A	Breakdown	128
Axles, Rear	102		
Battery Holder	46	Damper, Vibration	16
Bearing, Connecting Rod	14	Decals	5
Bearing, Main	7	Depth Stop Cylinder	154
Belt, Fan	58	Breakdown 159 874AS	156
Brake, Hand, Double Disc	95A	Breakdown 30-310 6594	156A
Brake, Hand, Single Disc	94	Differential, Rear	96, 97A
Brakes And Linkage	88	Differential, Front - 4WD	118
Brake Valve And Lines	90, 91	Differential Lock	98
Breakdown	92	Dipstick, Engine Oil	20
Box, Tool	191	Disconnect, PTO	108
		Distributor Valve	148
Camshaft	18	Distributor Valve	154, 155
Camshaft Drive	15	Breakdown 31-290 4740	158
Carrier, Front Axle	123	Breakdown 31-290 4809	159
Carrier, Rear Axle	100	Breakdown 31-290 5489	160
Case, Front Planetary	123	Drawbar	161
Case, Rear Planetary	100	Drive Gears And Case, Front Planetary - 4WD	123
Cleaner, Air	26	Drive Gears And Case, Rear Planetary	100
Breakdown 31-290 4767	27	Drive, Injection Pump	39A
Clutch And Release Control, Engine	68	Drive Shaft - 4WD	114
Clutch Release Control, Engine	69A		
Breakdown	70	Engine	6
Clutch And Transmission Housing	66	Engine Clutch And Release Controls	68, 69A
Clutch Release Controls, PTO	104	Engine Starting Equipment	42
Connecting Rod And Bearings	14	Engine Valves	18
Controls, Hand Brake, Double Disc	95A	Exhaust Pipe	24
Controls, Hand Brake, Single Disc	94		
Control Lever - 4WD	110	Fan	58
Control PTO	104	Filter, Fuel	30
Control, Reduction Gear, And 12 Speed	82	Breakdown	32
Control, Reduction Gear, Creeper		Filter, Engine Oil	20
Drive 12 And 16 Speed	86	Falsher	55A
Control Unit, Power Steering	126, 127A	Flood Lamp	50
Breakdown 31-290 4208	128	Breakdown 164 100AS	55
Coolant Heater	60	Flywheel	7
Coupling, Power Lift	154	Frame, Rear	64
Cover, Crankcase, Front	12	Front Axle And Axle Shafts - 4WD	116
Cover, Crankcase, Rear	10	Front Axle - 2WD	140
Cover, Rocker Arm	8	Front Axle Support - 4WD - 861 625	117A
Crankcase	8	Front Frame Weights	182
Crankshaft	18	Front Lamp	50
Crankshaft Gear	15	Breakdown 31-290 4534	53
Current Generating System	46	Breakdown 31-290 4535	53
Cylinder, Head	8	Breakdown 31-290 5067	53
		Breakdown 31-290 5068	53

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX (Continued)

Front Planetary Drive Gears And Case - 4WD	123
Front Wheels - 2WD	125A
Front Wheels - 4WD	124
Front Wheels - Variable Track - 4WD	125
Fuel Injection Pump And Lines	34
Breakdown 31-290 3717	36
Fuel Injection Pump Drive	39A
Fuel Injection System	30
Fuel Tank And Lines	28
Gear Assembly, Leveling	163
Breakdown 31-290 4495	168
Breakdown 31-290 5730	170
Gear, Camshaft	18
Gear, Crankshaft	15
Gear, Flywheel	7
Gear, Reduction, 8 Speed	80
Gear, Reduction, 12 Speed	81
Gear, Reduction - Creeper Drive - 12 Speed	84
Gear, Reduction - Creeper Drive - 16 Speed	85A
Gear Shift Lever, Transmission	76
Gear, Steering	127A
Breakdown 31-290 4208	128
Gear, Timing	15
Gears, Transmission, 8 Speed	72, 74
Gears, Transmission, 12 Speed	75A
Grille And Side Panels	186
Guards, Wheel	174
Hand Brake And Controls, Double Disc	95A
Hand Brake And Controls, Single Disc	94
Head, Cylinder	8
Head Lamp	50
Breakdown 31-290 4538	52
Breakdown 31-290 4544	52
Heater, Coolant	60
Hitch, Lower Support And Sway-Bar, Three-Point	166
Hitch, Lower Support And Links, Three-Point	164
Hitch, Pull And Lift Links, Three-Point	162
Horn	55A
Hood With Air Cleaner Stack And Instrument Panel	184
Hood Without Air Cleaner Stack And Instrument Panel	188
Housing, Clutch And Transmission	66
Hydraulic And Power Steering Pump Drive	152
Hydraulic Lift, Additional Power Outlet Unit	154
Hydraulic Lift Inner Controls	146, 147A
Hydraulic Lift Outer Controls	144
Hydraulic Lift System	142
Hydraulic Pump	152
Breakdown 675 636AS	153
Idler Gears And Case - 4WD	112
Injection Nozzle Holder	34
Breakdown 676 934AS	38
Breakdown 31-290 3226	39

Injection Pump And Lines	34
Breakdown 31-290 3717	36
Injection Pump Drive	39A
Injector, Fuel	35
Instruments	190
Instrument Panel	184
Intake And Exhaust Manifold	22
Lamp, Flood, Rear	50
Breakdown 164 110AS	55
Lamp, Front	50
Breakdown 31-290 4534	53
Breakdown 31-290 4535	53
Lamp, Head	50
Breakdown 31-290 4538	52
Breakdown 31-290 4544	52
Lamp, Tail	50
Breakdown 31-290 4536	54
Breakdown 31-290 4537	54
Level Gauge, Engine Oil	20
Leveling Gear Assembly	162
Breakdown 31-290 4495	168
Breakdown 31-290 5730	170
Lever, Control - 4WD	110
Lift Coupling	154
Lift System, Hydraulic	142
Lifter, Body, Rams And Links	150
Light System	50
Linkage, Accelerator	40
Linkage, Brakes	88
Linkage, Power Steering	138
Lock, Differential	98
Main Bearings	7
Manifold, Intake And Exhaust	22
Motor, Starting	42
Breakdown 31-290 3335	44
Breakdown 31-290 4907	45A
Muffler Vertical Exhaust	24
Nozzle, Holder	34
Breakdown 676 934AS	38
Breakdown 31-290 3226	39
Oil Filter, Engine	20
Oil Pan And Crankcase, Rear Cover	10
Oil Pump, Engine	20
Breakdown 30-304 9426	23A
Breakdown 31-290 5347	23A
Panel, Instrument	184
Pan, Oil	10
Pin, Piston	14
Pipe, Exhaust	24
Piston, Engine	14

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX (Continued)

Planetary Drive Gears And Case, Front - 4WD	123	Shift Lever, Reduction Gear - 8 And 12 Speed	82
Planetary Drive Gears And Case, Rear	100	Shift Lever, Reduction Gear - Creeper Drive	86
Platform	172	12 And 16 Speed	86
Power Steering Cylinder And Lines	132	Shift Lever, Transmission Gear	76
Breakdown 31-290 4234	134	Shifter Rods And Forks	78
Breakdown 31-290 4235	136	Signalling Devices	55A
Breakdown 31-290 5370	135	Sleeve, Cylinder	8
Breakdown 31-290 5811	137	Starting Aid - Thermostart	43A
Breakdown 31-290 5883 Weber	135A	Starting Motor	42
Breakdown 31-290 5883 Sima	135B	Breakdown 31-290 3335	44
Breakdown 31-290 5884 Weber	135C	Steering Gear	127A
Breakdown 31-290 5884 Sima	135D	Breakdown 31-290 4208	128
Power Steering Linkage	138	Steering Knuckle - 4WD	120
Power Steering System	126, 127A	Steering Wheel	126, 127A
Power Take-Off	106	Steps	174
Power Take-Off Clutch Release Controls	104	Switch, Ignition	42
Power Take-Off Disconnect	108	Switch, Light	50
Pump, Engine Oil	20		
Breakdown	23A	Tail Lamp	50
Pump, Hydraulic Lift	152	Breakdown 31-290 4536	54
Breakdown 675 636AS	153	Breakdown 31-290 4537	54
Pump, Injection	34	Tank, Fuel	28
Breakdown 31-290 3717	36	Tappet	18
Pump, Power Steering	126, 172A	Thermostart	43A
Breakdown 670 668AS	129A	Three-Point Hitch Lift Links	162
Pump, Primer	30	Three-Point Hitch Lower Support	164
Breakdown 31-290 0044	33	Three-Point Hitch Sway-Bar	166
Breakdown 31-290 5019	33A	Throttle Linkage	40
Pump, Water	60	Timing Gear	7, 15
Breakdown 31-290 3740	62	Tool Box	191
		Transfer Drive	110-114
Radiator - Earlier Models	56	Transmission, 8 Speed	72, 74
Radiator - Later Models	57	Transmission, 12 Speed	75A
Rear Axles	102	Transmission Gear Shift Lever	76
Rear Differential	96, 97A	Transmission Housing	66
Rear Frame	64	Transmission Shifter Rods And Forks	78
Rear Planetary Drive Gears And Case	100	Transmission Shifter Rods And Forks, Reduction Gears	86
Rear Wheels And Weights	103		
Reduction Gears - 8 Speed	80	Valve Brake	90, 91
Reduction Gears - 12 Speed	81	Breakdown	92
Reduction Gear Control Creeper Drive - 12 Speed	82	Valves, Engine	18
Reduction Gear Control Creeper Drive - 16 Speed	86	Variable Track Front Wheels - 4WD	125
Reduction Gears, Creeper Drive - 12 Speed	84	Vibration Damper	16
Reduction Gears, Creeper Drive - 16 Speed	85A	Voltage Regulator	46
Reservoir, Power Steering	126, 127A		
Breakdown 31-290 4229	130	Water Pump	60
Ring Gear	7	Breakdown 31-290 3740	62
Rings, Piston	14	Weights, Front Frame	182
Rocker Arms	18	Wheel Guards And Steps	174
Rod Connecting	14	Wheel, Steering	126, 127A
ROPS	177	Wheels And Weights, Rear	103
		Wheels, Front - 2WD	125A
Seat - Earlier Models	178	Wheels, Front - 4WD	124
Seat - Later Models	180		
Shaft, Rocker Arm	18		

CLICK ANYWHERE FOR MORE DETAILS

DECALS


REF. NO.	PART NUMBER	DESCRIPTION	NO. REQ.	SERIAL NUMBER
	31-299 0580	DECAL SET - 700 English NOTE: Parts Included in Decal Set Are Identified By An Asterisk (*).	1	
	960 304	*DECAL - Operator's Safety Check List - English	1	
	960 352	DECAL - Operator's Safety Check List - French	1	
	960 308	*DECAL - Don't Be Careless - Stay Clear of Machine . . Until Shut Off - English	2	
	960 350	DECAL - Don't Be Careless - Stay Clear of Machine . . Until Shut Off - French	2	
	960 318	*DECAL - Don't Be Careless - Do Not Remove This . . Shield - English	1	
	960 351	DECAL - Don't Be Careless - Do Not Remove This . . Shield - French	1	
	31-299 0519	*DECAL - 700 Utility Special	2	
	31-299 0315	*DECAL - White - On Tank	1	
	159 478A	*DECAL - Electrical Warning	1	
	31-299 0412	*DECAL - Steering Wheel	1	
	31-299 0523	*DECAL - Cowl - LH - Made From 31-299 0653	1	
	31-299 0524	*DECAL - Cowl - RH - Made From 31-299 0653	1	
	31-299 0490	*DECAL - White - On Hood	2	
	31-299 0538	*DECAL - Stripe - On Fender - 38 Long	2	
	30-317 9745	*DECAL - Turn Signal	1	
	960 353	*DECAL - Warning - All Power Drive System Safety . . Shields Must Be Kept In Place - English	1	
	31-177 7320	DECAL - Warning - All Power Drive System Safety . . Shields Must Be Kept In Place - French	1	
	31-299 0585	PLATE - Transmission Controls - 8 Speed	1	
	31-299 0621	PLATE - Transmission Controls - 12 Speed	1	
	31-299 0586	PLATE - PTO Controls	1	
	31-299 0653	Decal - Striping - 50 Yd. Roll	Req.	

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CRANKCASE FRONT COVER

CLICK ANYWHERE FOR MORE DETAILS

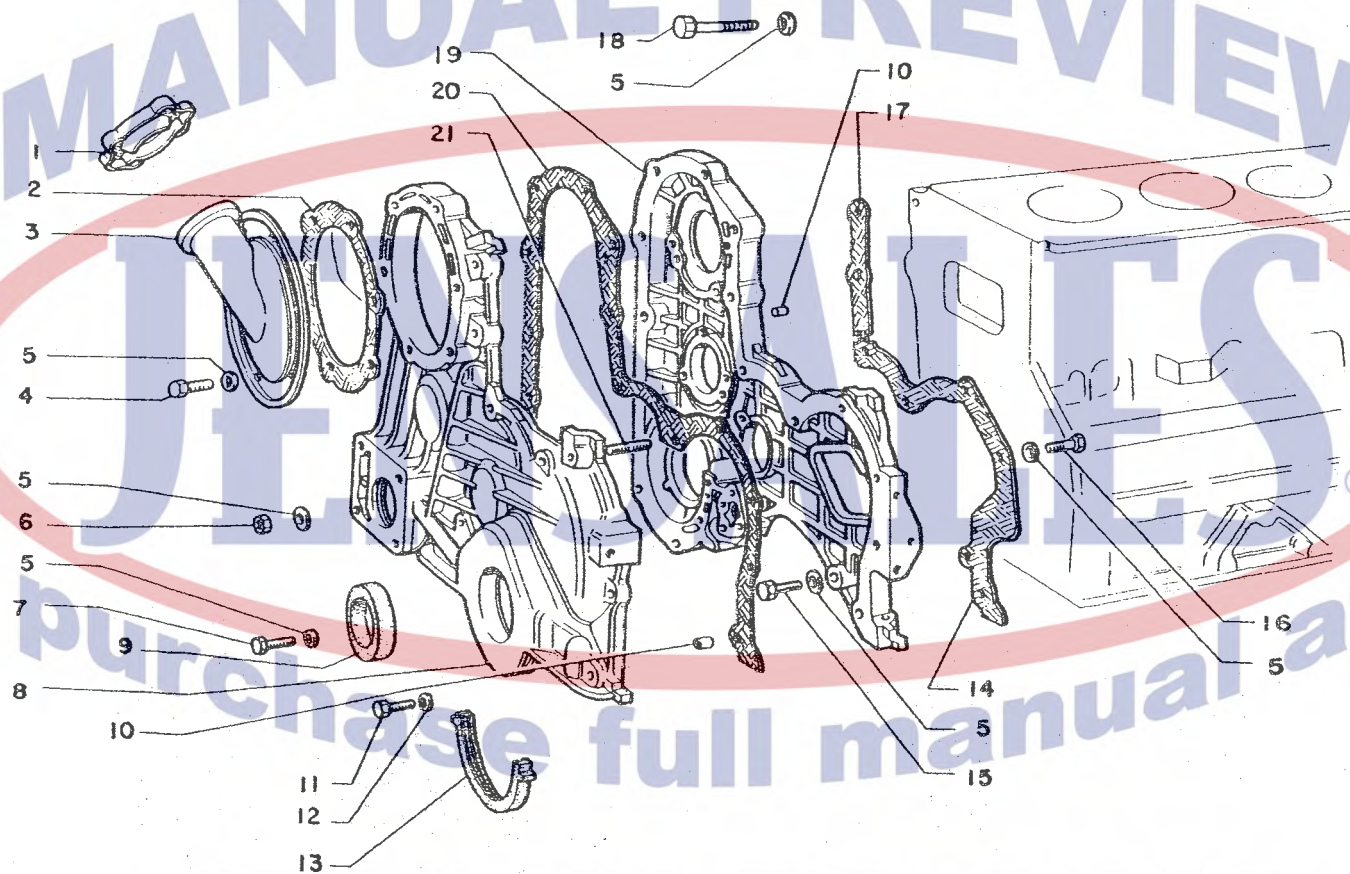

05755

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS