



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Versatile
Operator's Manual
700 Series 2
4 Wheel Drive

purchase full manual at

JENSALES.COM
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
VERSATILE OR IT'S SUCCESSORS. **VERSATILE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

Operator's Manual

VE-O-700 SER2

CLICK ANYWHERE FOR MORE DETAILS

TABLE OF CONTENTS

SERIES 2 TRACTOR

Section

Page

Specifications

3

Safety Rules

6

Controls and Instruments

8

Operation

15

Fuels, Fluids and Lubricants

24

Routine Service and Lubrication

27

Troubleshooting

45

Storage and Preparation

48

Electrical System

50

System Schematics

55

CLICK ANYWHERE FOR MORE DETAILS

SERIAL NUMBER LOCATIONS

IMPORTANT:

When ordering parts, state the serial number of the tractor and/or engine, whichever applies. The tractor serial number is stamped on the rear of the front frame section and also appears as a metal tag near the clutch pedal in the cab. The engine (Cummins) serial is on a metal tag located on the rear of the engine's left-hand cylinder bank.

Write your model and serial number information here:

TRACTOR

MODEL **700**


SERIAL _____

ENGINE


MAKE **CUMMINS**

MODEL **V555**


SERIAL _____

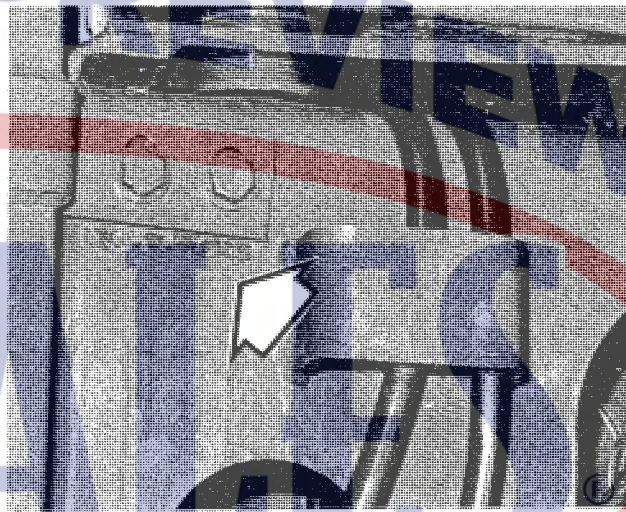

Frame Stamp

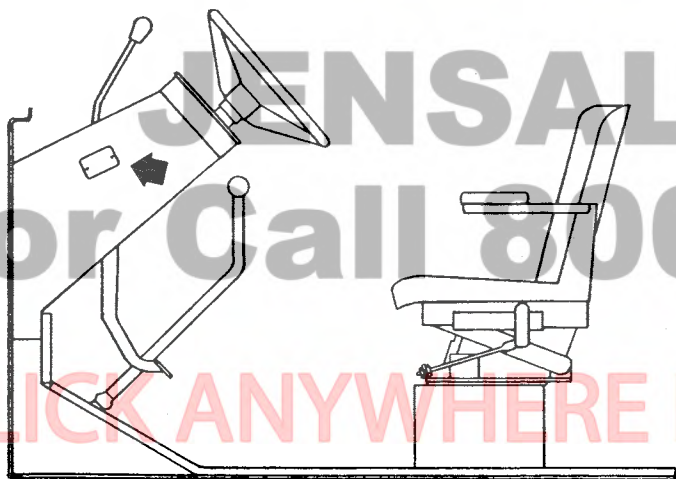

Cab Plate

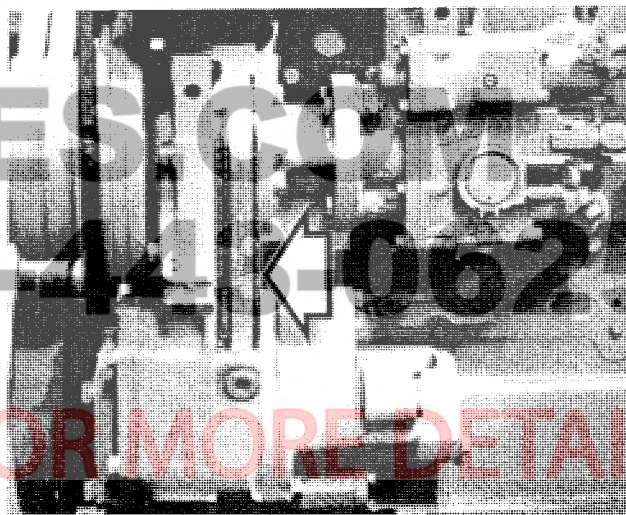

Engine Plate

CLICK ANYWHERE FOR MORE DETAILS

SPECIFICATIONS

Horsepower:

- Engine maximum Brake Horsepower at 2850 rpm -- 210

Dimensions:

- Wheel Base -- 130 in. (3,30 m)
- Length Overall -- 253 in. (6,43 m)
- Height Overall -- 130 in. (3,30 m) to top of stack*
- Height to Drawbar -- 18 in. (457 mm)
- Height to Differential -- 23 in. (584 mm)
- Height to Frame -- 22 in. (559 mm)
- Width -- (See Tire Size)

Weight:

- Maximum Operating Weight -- 28000 lb (12700 kg)
- Recommended Operating Weights Range (most applications) -- 22500 - 25000 lb (10200 - 11300 kg)

Tire Size and Tractor Width:

18.4 x 38 DUALS

- Between Tread Centers
Inner Tires -- 72 in. (1,83 m)
Outer Tires -- 118 in. (3,00 m)
- Tractor Width (outsides of tires)
Inner Tires -- 90.5 in. (2,30 m)
Outer Tires -- 137 in. (3,48 m)

20.8 x 38 DUALS

- Between Tread Centers
Inner Tires -- 72 in. (1,83 m)
Outer Tires -- 122 in. (3,10 m)
- Tractor Width (outsides of tires)
Inner Tires -- 92.75 in. (2,36 m)
Outer Tires -- 143 in. (3,63 m)

24.5 x 32 SINGLES

- Between Tread Centers -- 72 in. (1,83 m)
- Tractor Width (outsides of tires) -- 97.25 in. (2,47 m)

30.5 x 32 SINGLES

- Between Tread Centers -- 79.12 in. (2,01 m)
- Tractor Width (outsides of tires) -- 109.72 in. (2,79 m)


Engine Specifications: (naturally aspirated)

- Cummins V-555 V8 Diesel
- Maximum torque -- 425 ft-lb at 1700 rpm (576 N-m)
- Compression ratio -- 17.0:1
- Fan -- 24 in. (610 mm), six-blade sucker type.
- Bore -- 4.625 x Stroke, 4.125 in. (117.5 x 104.8 mm)
- Displacement -- 555 cu.in. (9,09 l)
- Idle speed -- 1000 rpm
- Full-load governed speed -- 2850 rpm
- Full-throttle no-load speed -- 3100 - 3135 rpm
- Oil cooler and full-flow oil filter with bypass oil conditioner. Oil pan angularity capability - 30° incline.
- Radiator -- 750 sq. in. (4840 cm²), 8.5 fins per in. (4.1 fins per cm), four-row core, independent surge tank.
- Exhaust -- single exhaust, rubber-mounted.

CLICK ANYWHERE FOR MORE DETAILS

CONTROLS AND INSTRUMENTS

Before operating your tractor, become familiar with its controls and gauges. The following explanations will help you become completely at home with your machine.

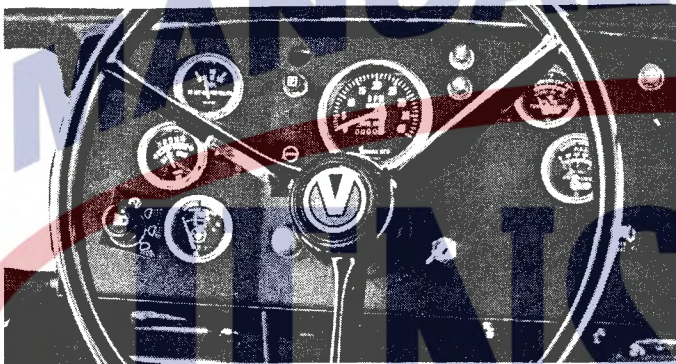


Cab Instrument Panel

FUEL GAUGES (2)

Fuel gauges are located on the instrument panel and on the tank top near the filler neck. Use of the tank-top gauge is recommended when filling.



Fuel Gauges

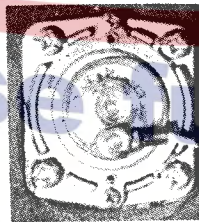

VOLTMETER (BATT CHGE)


The Voltmeter gives a continuous reading of the tractor electrical system voltage. It monitors the condition of the battery and charging circuits.



Voltmeter

LIGHT SWITCH

The rotary Light Switch has an OFF position and three operating positions. For daylight road travel, turning the knob to the first detent operates the flashing amber cab-roof lights. Turning the knob to the second detent for road travel at night operates the front road lights, the red tail lights, and the flashing amber roof lights. For field work, turning the knob to the last detent lights all of the front and rear working lights.

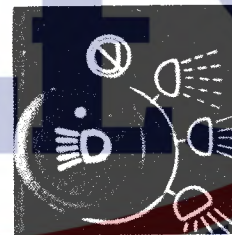

Light Switch

AIR CLEANER RESTRICTION GAUGE (WATER COLUMN VACUUM)

This gauge indicates whether the filter elements are in satisfactory condition. When the needle indicates greater than a 20-inch (51 cm) reading, the outer filter should be cleaned at the end of the day.



*Air Cleaner
Restriction Gauge*

Controls and Instruments

TRANSMISSION OIL PRESSURE LIGHT

The tractor's transmission is equipped with a pump to pressure-lubricate the transmission bearings and gears. The Transmission Oil Pressure Light indicates that the transmission is not being lubricated and that the pump is not pumping oil to the bearings and gears. The only time the tractor may be operated with the Transmission Oil Pressure Light ON is when the Clutch Pedal is depressed.


Oil Pressure Gauge



KEY SWITCH

The two-position Key Switch opens and closes the engine electric circuits. The ON position energizes the engine shut down system, the fuel injection pump solenoid, and the cab pressurizer fan.

Key Switch

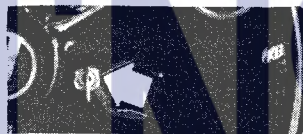

COLD START (ETHER START)

The Cold Start Knob is a cold weather starting aid (below +50F or 10C). It discharges Ether into the engine intake manifold when pulled. A discharge of 3 seconds is adequate.

Cold Start Knob



PARKING BRAKE LEVER

The Parking Brake Lever is located on the left hand side of the instrument panel. To engage the brake, pull the lever. Adjustment may be made for normal wear by turning the handle clockwise.



Parking Brake Lever

WATER TEMPERATURE GAUGE

The Water Temperature Gauge includes automatic shut-down contacts which shut the engine down if the coolant temperature exceeds 205F (96C). This shut-down feature may be overridden by the Manual Override Button. The normal engine-operating temperature range is 170 - 190F (77 C - 88 C).

Water Temperature Gauge



ENGINE OIL PRESSURE GAUGE

The Oil Pressure Gauge includes automatic shut-down contacts which shut the engine down if the engine-oil pressure drops to 20 psi (1.4 kg/cm² or 138 kPa). This shut-down feature may be overridden by the Manual Override Button.