


Newstyle 460/560 IHC 3point Instructions

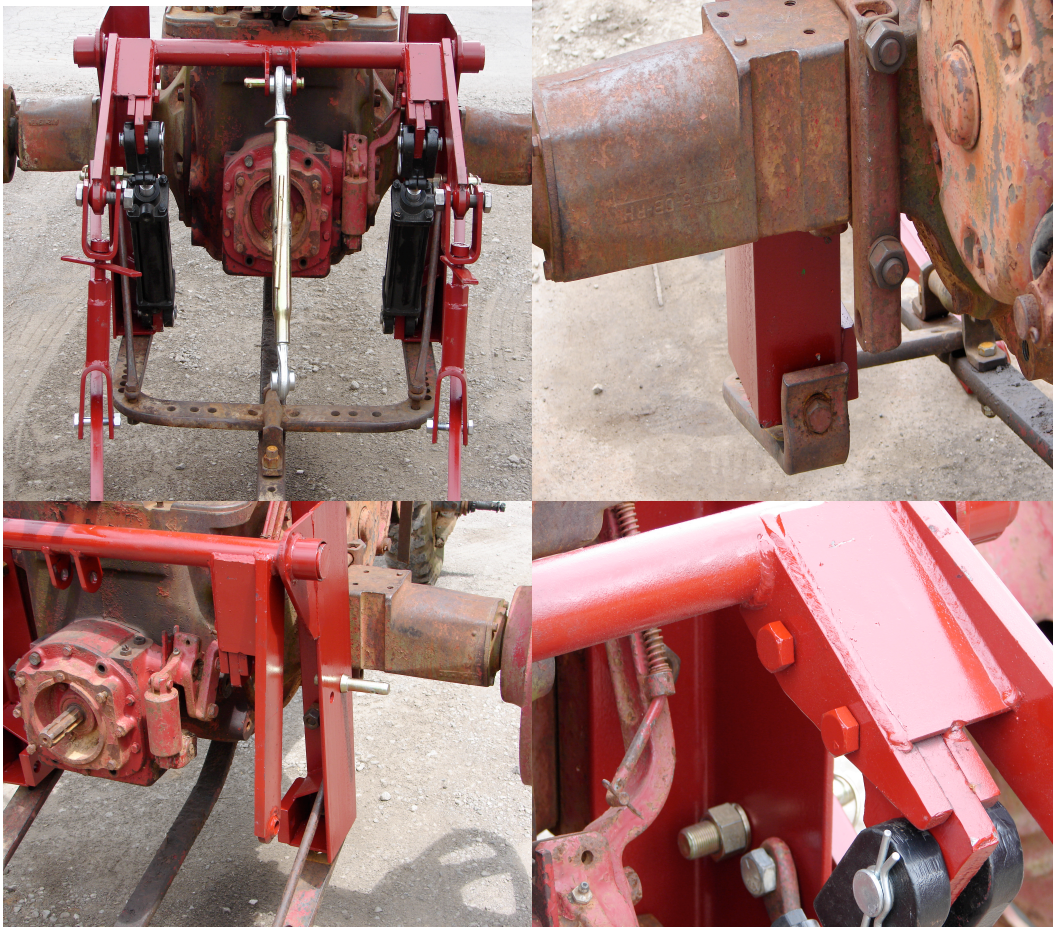

1. Remove existing drawbar support from axle brackets
2. Install right side rockshaft support, first
3. Slide rockshaft into rockshaft support bearing
4. Install left side rockshaft support
5. Fasten drawbar support to rockshaft support frame
6. Attach hydraulic cylinders, tug arms, and leveling arms
7. Plumb hydraulic lines (not supplied) to hydraulic cylinders
8. Install 3rd link