



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Ford

Parts Manual

1400 Sherman

Front End Loader

Parts Manual

purchase full manual at

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
FORD OR IT'S SUCCESSORS. FORD AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.


TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

FO-P-1400 SHER

PARTS LIST

1400 MODEL SHERMAN FRONT END LOADER

FOR FORD 600, 800, NAA, DEXTA AND FMD TRACTORS

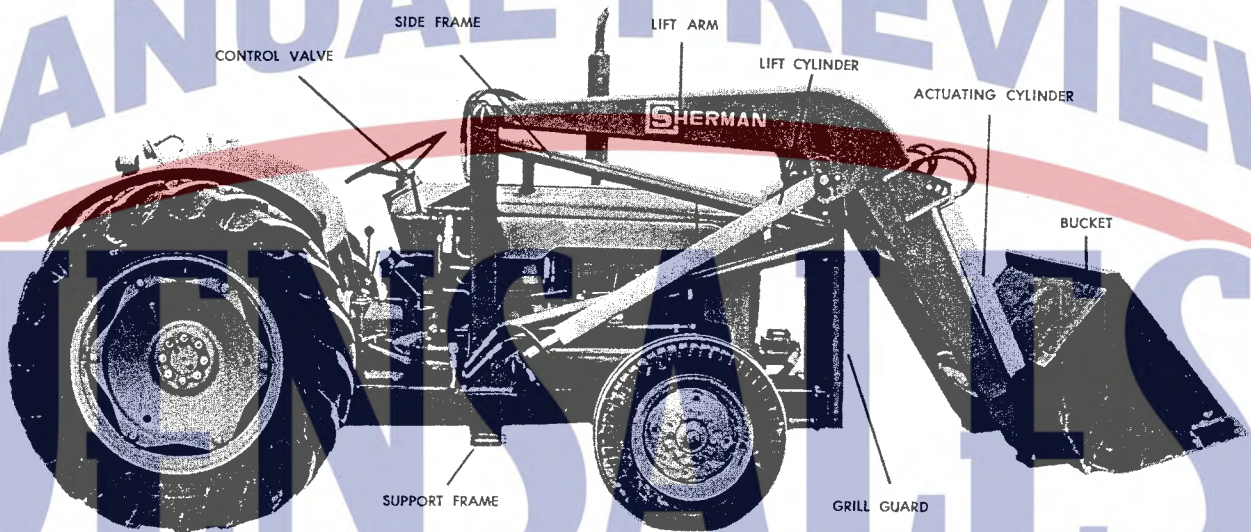


COMPONENT GROUP INDEX

PAGE

ACTUATING CYLINDER	5
BUCKETS AND BLADE	20
CONTROL VALVE	7
GRILL GUARDS	4
HYDRAULIC LINES - BASIC - FMD	13
HYDRAULIC LINES - CYLINDERS - 600, 800, NAA	9
HYDRAULIC LINES - CYLINDERS - DEXTA	10
HYDRAULIC LINES - CYLINDERS - FMD	8
LIFT ARM	2
LIFT CYLINDER	5
PUMP - FMD	11
SIDE FRAMES	3
STEERING - BOOSTER CYLINDER	18
STEERING - FORD ADAPTER KIT	17
STEERING - MANUAL	17
STEERING - POWER - COMPLETE	16
STEERING - PUMP	19
SUBFRAME - FMD	15
SUPPORT FRAMES	4
TANK ASSEMBLY - FMD	14
NUMERICAL INDEX	21, 22

LIFT ARM

CLICK ANYWHERE FOR MORE DETAILS



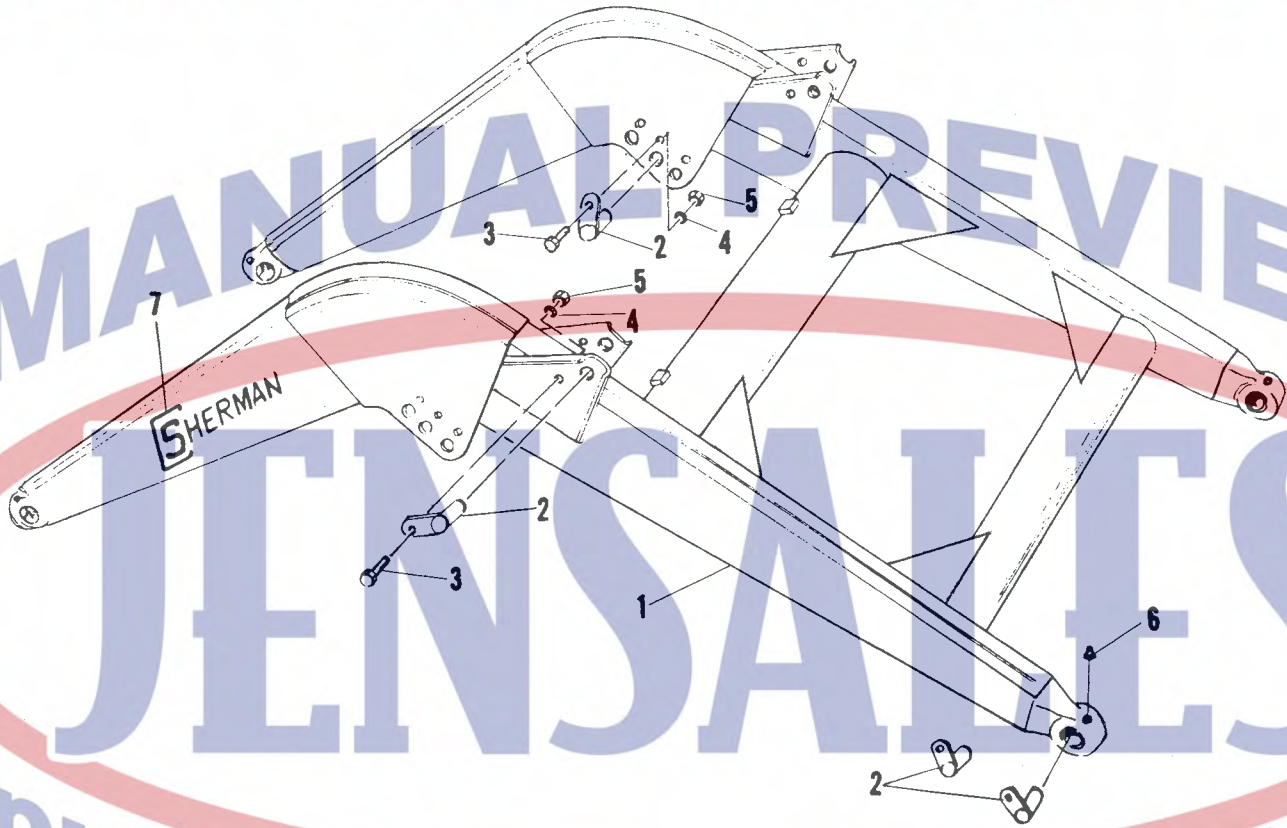


REF. NO.	PART NO.	DESCRIPTION	NO. REQ.
1	371647	Lift Arm Assembly	1
2	370746	Pin, Loader Arm	8
3	20388-S8	Hex Head Bolt $\frac{3}{8}$ - 16 x 1	8
4	34807-S8	Lockwasher $\frac{3}{8}$	8
5	33799-S8	Hex Nut $\frac{3}{8}$ - 16	8
6	87907-S8	Grease Fitting $\frac{1}{4}$	4
7	371151	Decal, Loader Arm	2

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS


SIDE FRAMES

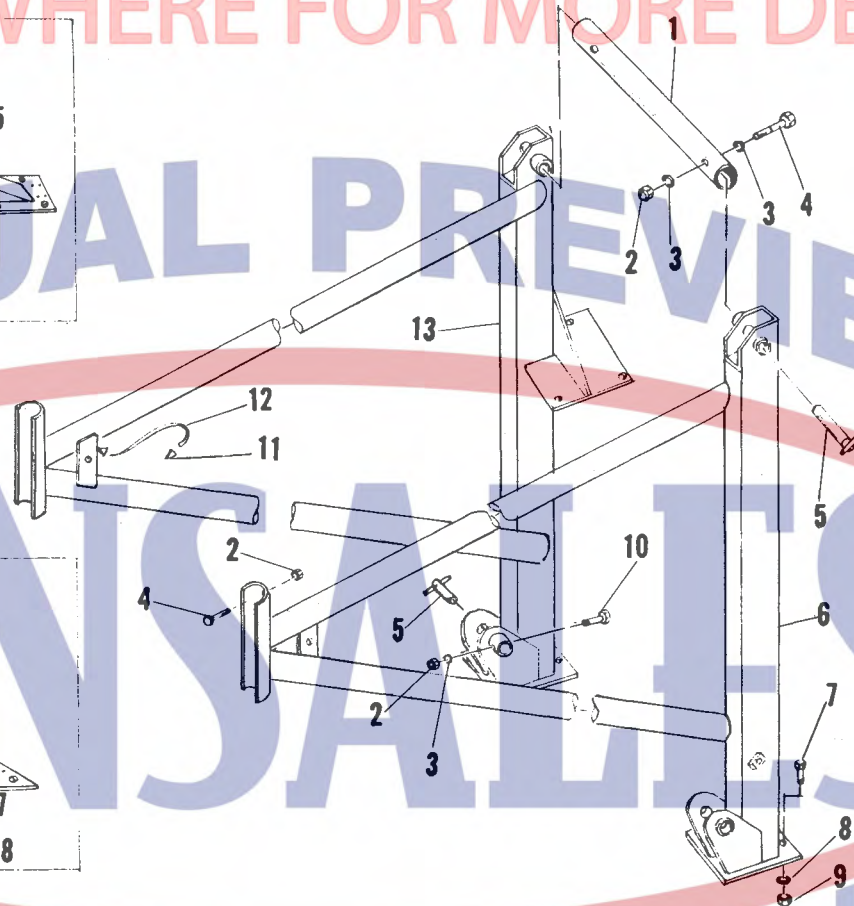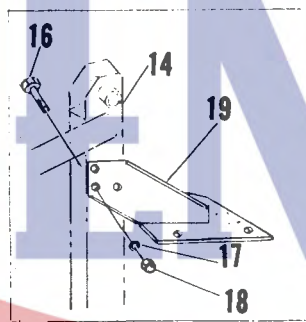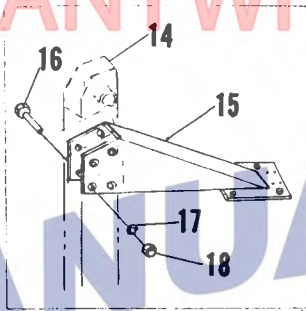


REF. NO.	PART NO.	DESCRIPTION	NO. REQ.
1	370700	Tube, Loader Frame	1
2	34423-S8	Hex Lock Nut 1/2 - 13	8
3	44734-S8	Flat Washer 1/2	6
4	20558-S8	Hex Bolt 1/2 - 13 x 3 1/4	6
5	370706	Pin Assembly	4
6	370692	L.H. Side Frame (600, 800)	1
6	371620	L.H. Side Frame (FMD, DEXTA)	1
7	45740-S8	Hex Bolt 5/8 - 11 x 1 1/2	4
8	34811-S8	Lockwasher 5/8	4
9	33849-S8	Hex Nut 5/8 - 11	4
10	20552-S8	Hex Bolt 1/2 - 13 x 2 3/4	2
11	360112	Wire Connector	8
12	371290	Wire	4
13	370693	R. H. Side Frame (600, 800)	1
14	371655	R. H. Side Frame (FMD, DEXTA)	1
15	371658	Valve Mount Assembly (FMD)	1
16	45618-S8	Hex Head Bolt 1/2 - 13 x 5 1/4	4
17	34809-S8	Lockwasher 1/2	4
18	33845-S8	Hex Nut 1/2 - 13	4
19	371871	Valve Mount Assembly (DEXTA)	1

CONTROL VALVE AND HANDLES

CLICK ANYWHERE FOR MORE DETAILS

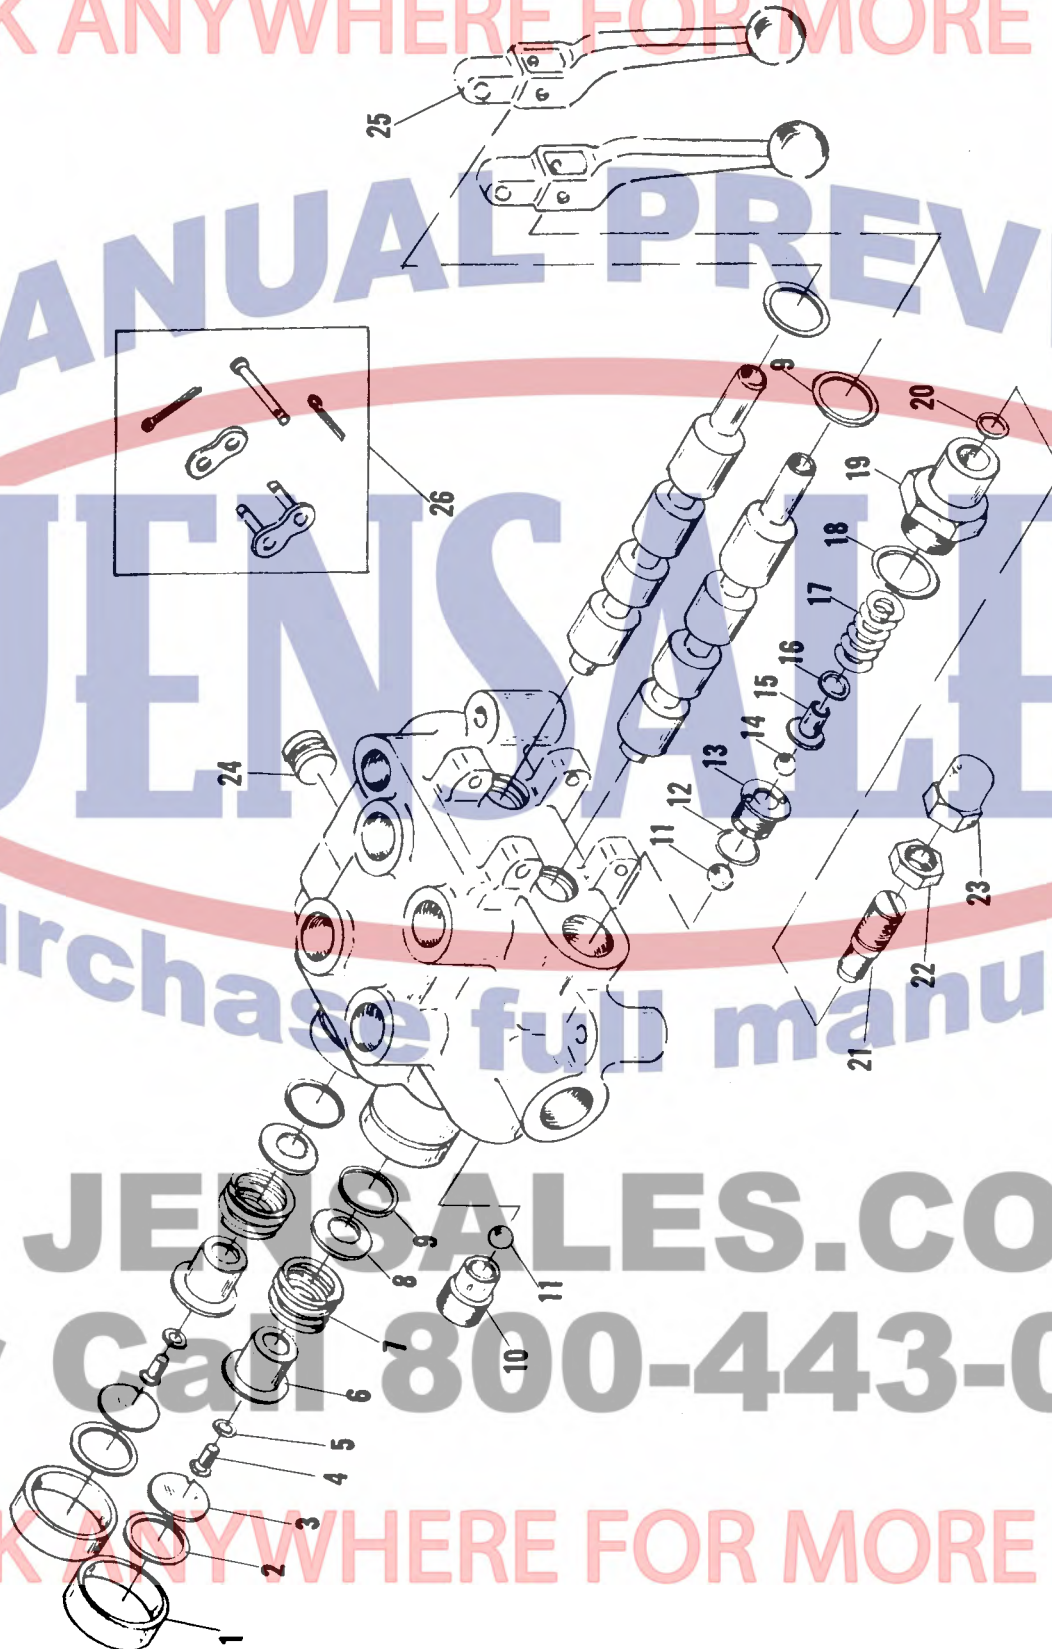


**HYDRAULIC LINES - CONTROL VALVE TO CYLINDERS
FMD TRACTOR**

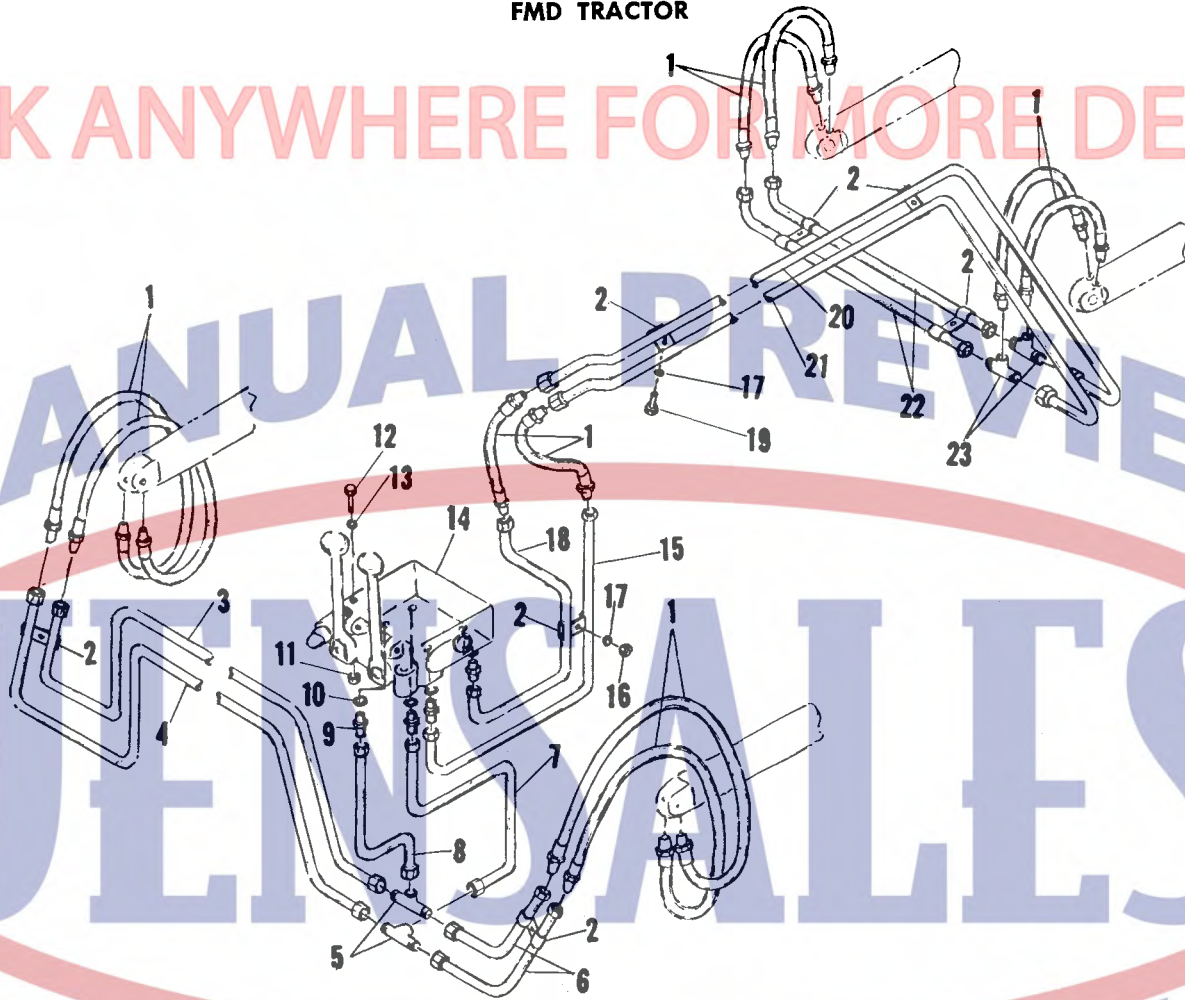

REF. NO.	PART NO.	DESCRIPTION	NO. REQ.
1	360047	Hose 3/8 x 24	10
2	370888	Pipe Clip	7
3	371727	Tube Assembly	1
4	371728	Tube Assembly	1
5	360086	Tube Union Tee	2
6	370928	Tube Assembly	2
7	371726	Tube Assembly	1
8	371724	Tube Assembly	1
9	B563E8X8	Adapter 3/4 x 3/4	4
10	D101C8	"O" Ring	4
11	33799-S8	Hex Nut 3/8 - 16	3
12	45522-S8	Hex Bolt 3/8 - 16 x 2 1/2	3
13	34807-S8	Lockwasher 3/8	3
14	370860	Control Valve Assembly	1
15	371722	Tube Assembly	1
16	41181-S8	Hex. Hd. Tapping Screw 1/4 - 20 x 1/2	6
17	34805-S8	Lockwasher 1/4	7
18	371723	Tube Assembly	1
19	41207-S8	Hex Hd. Tapping Screw 1/4 - 20 x 3/4	1
20	370868	Tube Assembly	1
21	370869	Tube Assembly	1
22	370870	Tube Assembly	2
23	360050	Tee 3/4 Male x Female	2

**PUMP AND COMPONENTS
FMD TRACTOR**


CLICK ANYWHERE FOR MORE DETAILS

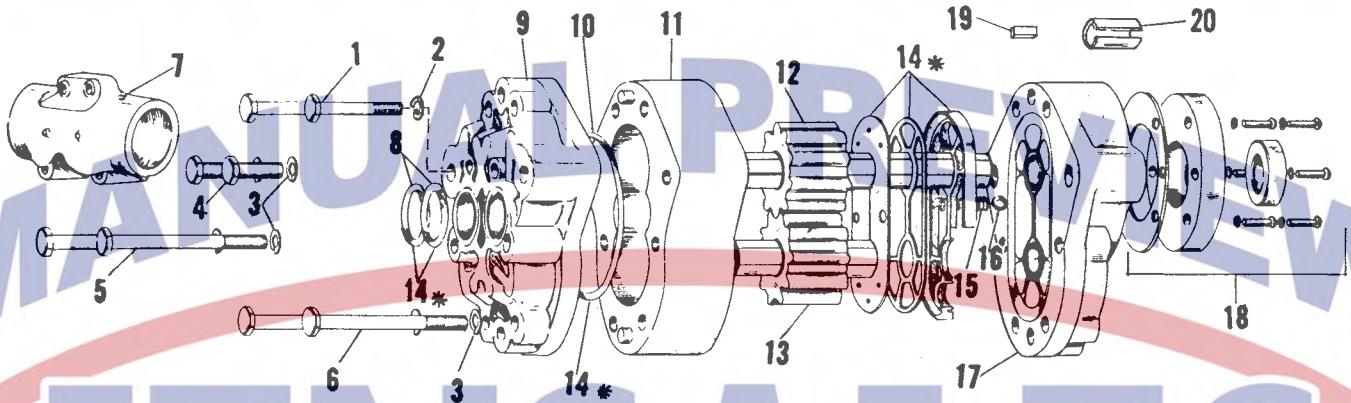

REF. NO.	PART NO.	DESCRIPTION	NO. REQ.
Ass'y.	370932	Pump	1
1	45586-S	Hex Bolt 7/16 - 14 x 4½	2
2	34808-S	Lockwasher 7/16	2
3	34806-S	Lockwasher 5/16	8
4	304794-S	Hex Bolt 5/16 - 18 x 1¾	2
5	300934-S	Hex Bolt 5/16 - 18 x 4½	2
6	45532-S	Hex Bolt 7/16 - 18 x 3	4
7	370933	Port Adapter	1
8	D101E21	"O" Ring	2
9	372042	Back Plate	1
10	360181	"O" Ring	1
11	372046	Pump Body	1
12	372052	Drive Gear & Shaft	1
13	372222	Idler Gear & Shaft	1
14*	372048	Internal Repair Kit	1
15	372054	Spring	1
16	360182	Steel Ball	1
17	372047	Front Plate	1
18	D413A5	Shaft Seal Kit	1
19	360045	Key (¾ Shaft)	1
19	371256	Key (11/16 Shaft)	1
20	371255	Sleeve (11/16 Shaft)	1

CLICK ANYWHERE FOR MORE DETAILS

**TANK ASSEMBLY
FMD TRACTOR**

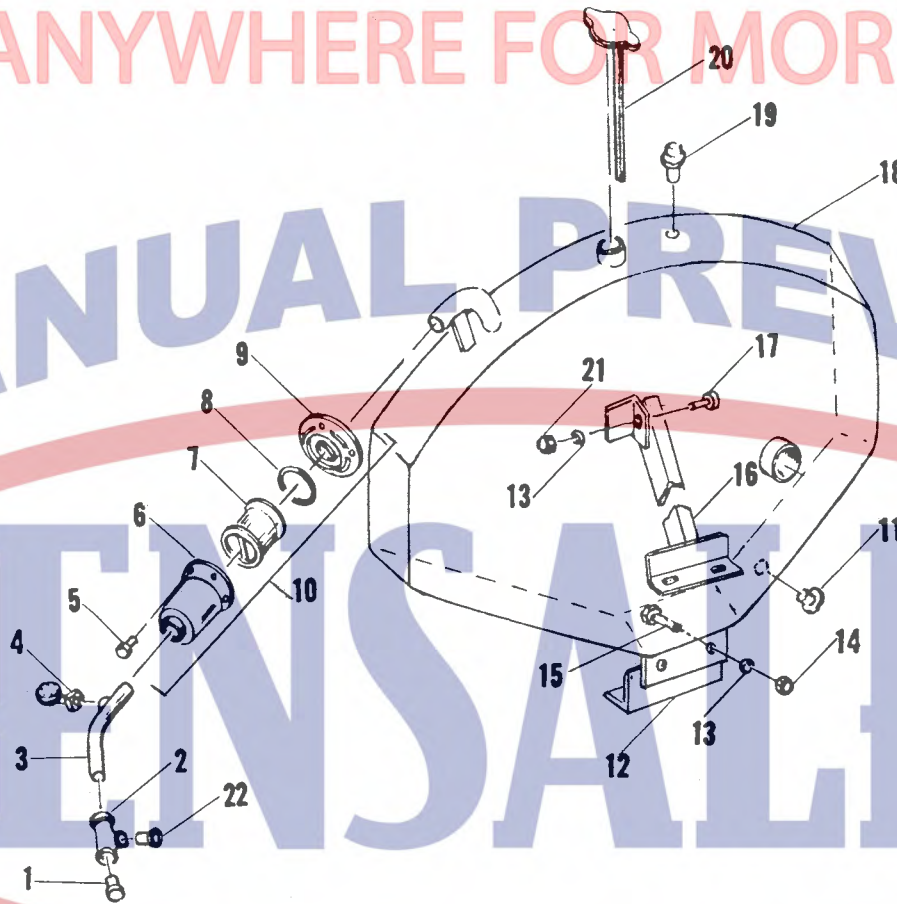

REF. NO.	PART NO.	DESCRIPTION	NO. REQ.
1	B126A6	Soc. Hd. Pipe Plug $\frac{3}{4}$	1
2	360145	Tee $\frac{3}{4}$	1
3	371328	Return Pipe	1
4	371326	Filter Indicator	1
5	20344-S8	Hex Cap Screw $\frac{1}{4}$ - 20 x $\frac{3}{4}$	4
6	371804	Filter Base	1
7	371803	Filter Cartridge	1
8	D101B13	"O" Ring	1
9	371805	Filter Cover	1
10	371178	Filter Assembly	1
11	B126A8	Soc. Hd. Pipe Plug 1"	1
12	371541	Mount Angle Bracket	1
13	33809-S8	Lockwasher $\frac{1}{2}$	3
14	33799-S8	Hex Nut $\frac{3}{8}$ - 16	2
15	20388-S8	Hex Hd. Bolt $\frac{3}{8}$ - 16 x 1	2
16	371539	Support Bracket	1
17	20392-S8	Hex Cap Screw $\frac{1}{2}$ - 13 x 1	1
18	371543	Tank Assembly	1
19	372043	Breather	1
20	371177	Filler Cap	1
21	33845-S8	Hex Nut $\frac{1}{2}$ - 13	1
22	54B244	Suction Nipple	1