


John Deere

CLICK ANYWHERE FOR MORE DETAILS

MODEL:

60 Skid Steer Loader

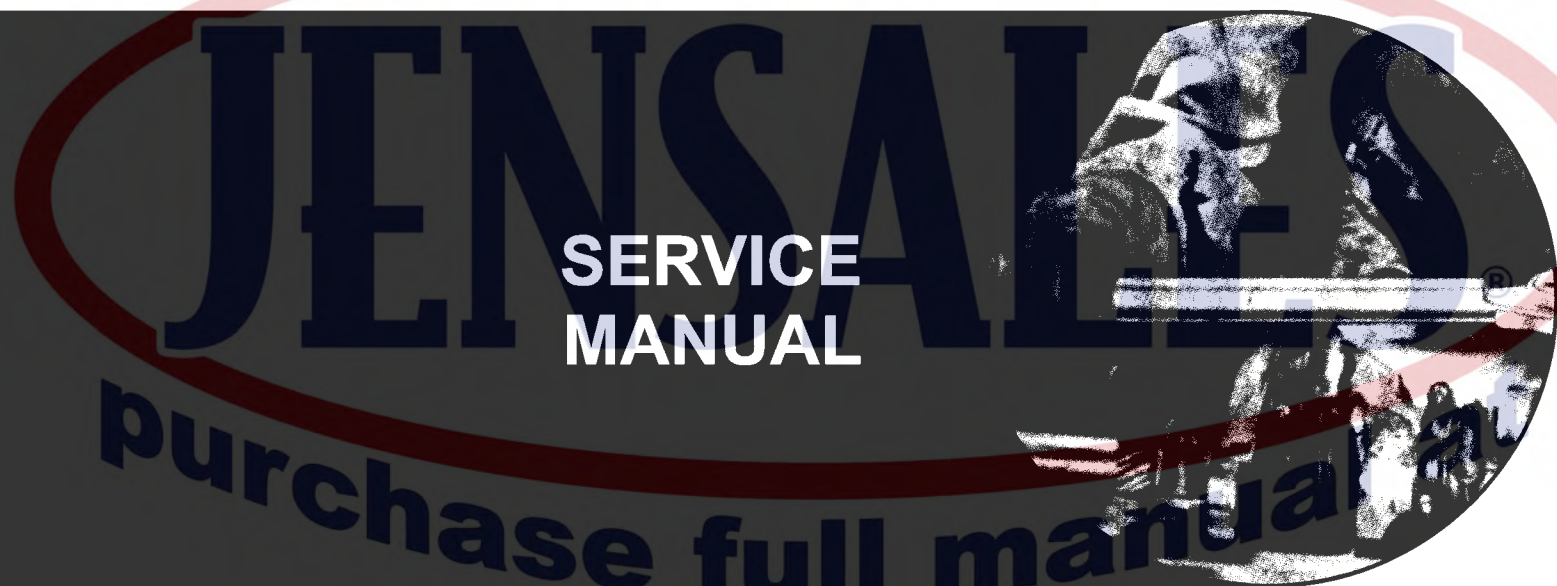

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-S-TM1185

60 SKID-STEER LOADER

Technical Manual
TM-1185 (Apr-81)

CONTENTS

SECTION 10 - GENERAL

- Group 05 - Specifications
- Group 10 - Lubrication and Periodic Service
Serial No. (-120,000)
- Group 12 - Lubrication and Periodic Service
Serial No. (120,001-)

SECTION 20 - ENGINE REPAIR Serial No. (-120,000)

- Group 05 - Specifications and Tools
- Group 10 - Engine Separation
- Group 15 - Cylinder Head, Breather and Valves
- Group 20 - Piston Assembly and Cylinder Bore
- Group 25 - Crankcase and Assemblies

SECTION 25 - ENGINE REPAIR Serial No. (120,001-)

- Group 05 - Specifications and Special Tools
- Group 10 - Engine Removal and Installation
- Group 15 - Internal Components

SECTION 30 - FUEL AND AIR REPAIR

- Group 05 - Specifications
- Group 10 - Carburetor - Serial No.
(-120,000)
- Group 12 - Carburetor - Serial No.
(120,001-)
- Group 15 - Governor - Serial No.
(120,001-)
- Group 20 - Fuel Tank - Serial No.
(120,001-)
- Group 25 - Fuel Pump and Fuel Filter
- Group 30 - Air Cleaner

SECTION 40 - ELECTRICAL REPAIR

- Group 05 - Specifications and Special Tools
- Group 10 - Cranking System - Serial No.
(-120,000)
- Group 12 - Cranking System - Serial No.
(120,001-)
- Group 15 - Ignition System - Serial No.
(-120,000)
- Group 17 - Ignition System - Serial No.
(120,001-)
- Group 20 - Charging System - Serial No.
(-120,000)

- Group 22 - Charging System - Serial No.
(120,001-)

- Group 25 - Neutral Start Switches

SECTION 50 - POWER TRAIN REPAIR

- Group 05 - Specifications and Special Tools
- Group 10 - Drive Clutch - Serial No.
(-120,000)
- Group 12 - Drive Clutch - Serial No.
(120,001-)
- Group 15 - Hydrostatic Pump
- Group 20 - Hydrostatic Motor
- Group 25 - Drive Components

SECTION 60 - STEERING AND BRAKE REPAIR

- Group 10 - Steering - Serial No.
(-120,000)
- Group 12 - Steering - Serial No.
(120,001-)
- Group 15 - Brakes

SECTION 70 - HYDRAULIC REPAIR

- Group 05 - Specifications and Special Tools
- Group 10 - Hydraulic Pump - Serial No.
(020,303)
- Group 15 - Hydraulic Pump - Serial No.
(020,304-)
- Group 20 - Hydraulic Cylinders
- Group 25 - Control Valves

SECTION 80 - OPERATOR'S STATION

- Group 10 - ROLL-GARD
- Group 15 - Floor Plate
- Group 20 - Seat and Heat Shield
- Group 25 - Pedal Assembly

SECTION 220 - ENGINE OPERATION AND TESTS - Serial No.

- (-120,000)
- Group 05 - Specifications and Special Tools
- Group 10 - System Operations
- Group 15 - Engine Analysis
- Group 20 - Diagnosing Malfunctions

(All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice).

CONTENTS — Continued

SECTION 225 - ENGINE OPERATION AND TESTS - Serial No. (120,001-)

- Group 05 - Specifications and Special Tools
- Group 10 - System Operation
- Group 15 - Engine Analysis
- Group 20 - Diagnosing Malfunctions

SECTION 230 - FUEL SYSTEM OPERATION AND TESTS

- Group 05 - Specifications
- Group 10 - System Operation - Serial No. (-120,000)
- Group 12 - System Operation - Serial No. (120,001-)
- Group 15 - System Testing - Serial No. (-120,000)
- Group 17 - System Testing - Serial No. (120,001-)
- Group 20 - Diagnosing Malfunctions

SECTION 240 - ELECTRICAL OPERATION AND TESTS

- Group 05 - Specifications and Special Tools
- Group 10 - Wiring Diagrams
- Group 15 - Cranking System
- Group 20 - Ignition System
- Group 25 - Charging System

SECTION 250 - POWER TRAIN OPERATION AND TESTS

- Group 05 - Specifications and Special Tools
- Group 10 - System Operation
- Group 15 - System Testing
- Group 20 - Diagnosing Malfunctions

SECTION 270 - HYDRAULIC OPERATION AND TESTS

- Group 05 - Specifications and Special Tools
- Group 10 - System Operation
- Group 15 - System Testing
- Group 20 - Diagnosing Malfunctions

INTRODUCTION

This technical manual contains service and maintenance information for the John Deere 60 Skid-Steer Loader.

The manual is divided into sections. Each section pertains to a certain component or operational system of the loader. The information is divided into groups within each section.

All sections of this technical manual should be carefully studied by the service technician. Much basic information such as the principles of 4-cycle engine operation, carburetion and ignition have been omitted. Such information can be found in any good library and is recommended reading for the new service technician before consulting this manual for service procedures.

Emphasis is placed on diagnosing malfunctions, analysis and testing. Diagnosing malfunctions lists possible troubles, their causes and how to correct them. Under specific components these troubles are analyzed to help the service technician understand what is causing the problem so it can be corrected rather than just replace parts and have the same problem keep recurring.

Specifications are found at the beginning of each Section for easy reference.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Metric equivalents have been included, where applicable, throughout this technical manual.

FOR YOUR CONVENIENCE

Vertical lines appear in the margins of many of the pages. These lines identify new material and revised information that affects specifications, procedures, and other important instructions.

INTRODUCTION



Use FOS Manuals for Reference



Use Technical Manuals for Actual Service

This technical manual is part of a twin concept of service:

- **FOS Manuals — for reference**
- **Technical Manuals — for actual service**

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced service technicians.

Technical Manuals are concise on-the-job service guides containing only the vital information needed for a specific machine.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

Some features of this technical manual:

- *Table of contents at front of manual*
- *Exploded views showing parts relationship*
- *Photos showing service techniques*
- *Specifications grouped for easy reference*

This technical manual was planned and written for you — an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.

SI UNITS OF MEASURE

Because John Deere sells its products worldwide, U.S. units of measure are shown with their respective Metric equivalents throughout this technical manual. These equivalents are the SI (International System) Units of Measure.

CLICK ANYWHERE FOR MORE DETAILS



JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Section 10 GENERAL

CONTENTS

	Page		Page
GROUP 05 - SPECIFICATIONS		GROUP 12 - LUBRICATION AND PERIODIC SERVICE SERIAL NO. (120,001-)	
Engine.....	05-1	Lubricants.....	12- 1
Electrical System.....	05-1	Lubrication.....	12- 2
Travel Speeds.....	05-1	Periodic Services.....	12- 4
Drive Chains.....	05-1	As Required.....	12- 5
Hydraulic System.....	05-2	10 Hours or Daily.....	12- 6
Tires.....	05-2	25 Hours.....	12- 7
Capacities.....	05-2	50 Hours or Weekly.....	12- 7
Hydrostatic System.....	05-3	100 Hours or Quarterly.....	12-10
Operational Specifications.....	05-3	200 Hours or Semi-Annually.....	12-11
Dimensional Specifications.....	05-4	500 Hours or Annually.....	12-14
Bucket and Fork Specifications.....	05-5		
GROUP 10 - LUBRICATION AND PERIODIC SERVICE SERIAL NO. (-120,000)			
Lubricants.....	10- 1		
Lubrication.....	10- 2		
Periodic Services.....	10- 4		
As Required.....	10- 5		
25 Hours or Weekly.....	10- 9		
100 Hours or Quarterly.....	10-12		
200 Hours or Semi-Annually.....	10-13		
500 Hours or Annually.....	10-13		

JENSALES.COM
or Call **800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS



JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Group 5 Specifications

ENGINE

	Serial No. (-120,000)	Serial No. (120,001-)
Make.....	Kohler	Kohler
Model.....	K-312S	KT17QS
Cylinders.....	One	Two
Cycle.....	Four	Four
Bore.....	3.50 in. (88.9 mm)	3.125 in. (79.2 mm)
Stroke.....	3.25 in. (82.5 mm)	2.75 in. (69.8 mm)
Displacement.....	31.27 cu. in. (512 cm ³)	42.18 cu. in. (691.4 cm ³)
Horsepower*.....	14 @ 3600 rpm (10.44 kW)	17 @ 3400 rpm (12.58 kW)
Speeds		
Idler.....	1300 rpm	1200 rpm
High (No Load).....	3600 rpm	3400 rpm

*Horsepower rating is established by engine manufacturer in accordance with Standard International Combustion Institute procedure. It is corrected to 60°F and 29.92 inches hg barometric pressure. Laboratory test engines are equipped with an air cleaner and muffler.

ELECTRICAL SYSTEM

	Serial No. (-120,000)	Serial No. (120,001-)
Battery, John Deere.....	AM30094 or TY6024	AM31186
Volts.....	12V	12V
BCI Group.....	U1	U1
Cold Cranking Amps @ 0°F (17.7°C).....	160	200
Reserve Capacity @ 25 amps.....	23	32
Charging Capacity.....	15 amps	15 amps
System Polarity.....	Negative Ground	Negative Ground
Spark Plug.....	Champion RH-10 or equivalent	Champion RBL15Y or equivalent
Spark Plug Gap.....	0.025 in. (0.64 mm)	0.025 in. (0.64 mm)
Breaker Point Gap.....	0.020 in. (0.508 mm)	0.020 in. (0.508 mm)
Ignition Timing.....	20° BTDC ("S" mark on flywheel)	Align "S" mark on flywheel

TRAVEL SPEEDS

Forward or Reverse.....	0 to 4.2 mph
Turning radius.....	360 Degrees in its own length

DRIVE CHAINS

Long chain.....	74 links, No. 60 roller chain
Short chain.....	50 links, No. 60 roller chain

HYDRAULIC SYSTEM

Pump		Serial No. (-020,303)	Serial No. (020,304-)
Type.....	Borg Warner fixed displacement gear pump	Webster Electric fixed displacement gear pump	
Displacement.....	0.58 in. ³ /rev. (9.50 cm ³ /rev.)	0.58 in. ³ /rev. (9.50 cm ³ /rev.)	
System Relief.....	1500 psi (10 342 kPa) (103.5 bar)		
Control Valve			
Main (Open Center).....	Cessna, two-spool valve, foot-pedal operated		
Auxiliary (Open Center).....	Cessna, single-spool valve, foot-pedal operated		
Filter			
Serial No. (-120,000).....	One 25 micron		
Serial No. (120,001-).....	Mesh screen in reservoir		
Hydraulic Cylinders			
Lift (double acting)			
Bore diameter.....	2 in. (51 mm)		
Rod diameter.....	1 in. (25.4 mm)		
Stroke.....	22 in. (559 mm)		
Tilt (double acting)			
Bore diameter.....	Serial No. (-020303)	Serial No. (020304-)	
Rod diameter.....	2-1/2 in. (63.5 mm)	2 in. (50.8 mm)	
Stroke.....	1-1/4 in. (31.8 mm)	1 in. (25.4 mm)	
	13 in. (330.2 mm)	13-1/8 in. (333.4 mm)	

TIRES

Size	Tire Inflation
5.70 x 12.....	30 psi (206.9 kPa) (2.1 bar)
23 x 8.5 x 12.....	35 psi (241.3 kPa) (2.4 bar)

CAPACITIES

	Serial No. (-120,000)	Serial No. (120,001-)
Fuel tank.....	6 U.S. gallons (22.8 L)	5 U.S. gallons (18.9 L)
Engine lubrication oil.....	2 U.S. quarts (1.9 L)	3.5 U.S. pints (1.65 L)
Loader hydraulic system.....	18 U.S. gallons (68.5 L)	18 U.S. gallons (68.5 L)

HYDROSTATIC SYSTEM

Pump
 Type.....Sunstrand variable displacement pump
 Displacement.....0 to 0.913 in.³/rev.
 (0 to 14.967 cm³/rev.)

Motor
 Type.....TRW-Ross fixed displacement gerota motor
 Displacement.....11.80 in.³/rev.
 (193.37 cm³/rev.)

Maximum Operating Pressure.....3000 psi (20 685 kPa) (206.9 bar)

Charge Pump
 Type.....Sunstrand gear pump
 Displacement.....0.330 in.³/rev. (5.41 cm³/rev.)
 Charge pressure.....70 to 150 psi (483 to 1 034 kPa) (4.83 to 10.34 bar)
 Filters.....Two 10 micron

OPERATIONAL SPECIFICATIONS

	Serial No. (-120,000)	Serial No. (121,000-)
Tipping load w/35 in. (889 mm) bucket.....	1100 lbs (498.3 kg)	1200 lbs (544.8 kg)
Operating capacity (SAE).....	550 lbs. (249.4 kg)	600 lbs (272.4 kg)
Operating weight.....	1935 lbs (876.6 kg)	2076 lbs (942.5 kg)
Raising time w/full bucket.....	5.7 seconds	5.7 seconds
Lowering time.....	3.8 seconds	3.8 seconds
Dump time.....	2.8 seconds	2.8 seconds
Rollback time.....	1.9 seconds	1.9 seconds

purchase full manual at

JENSALES.COM
or Call 800-443-0625

DIMENSIONAL SPECIFICATIONS

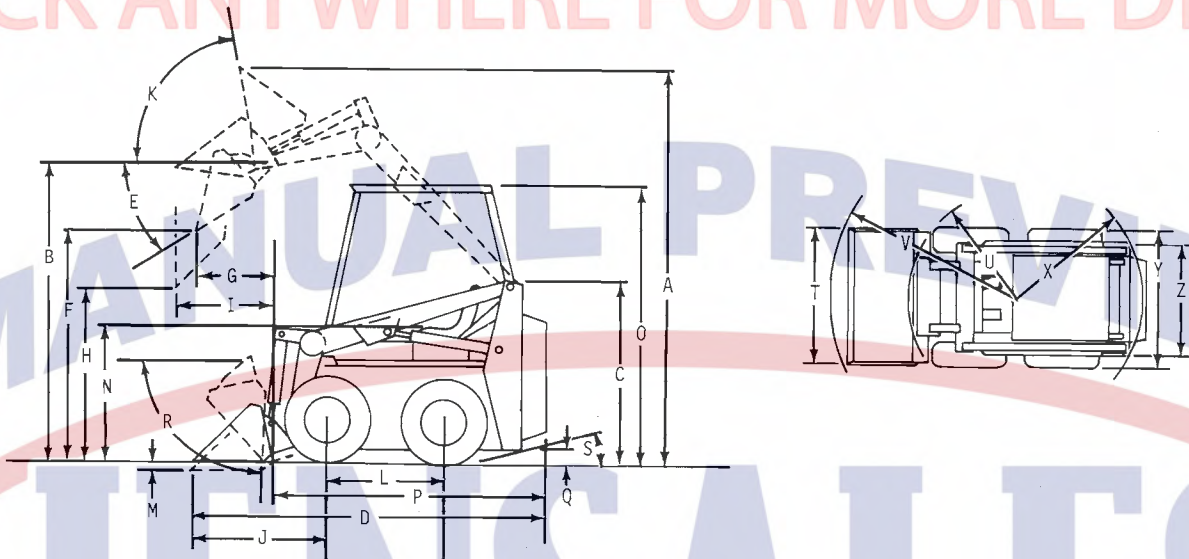


Fig. 1 — Dimensional Specifications

Specifications are in accordance with IEMC Standards.

Dimensions are with 5.70-12 Tires and 35-Inch (889 mm) Earth Bucket.

A	Overall height (Lift arms raised).....	127 in. (3 226 mm)
B	Height to hinge pin (Maximum).....	97-3/4 in. (2 483 mm)
C	Overall height.....	51 in. (1 295 mm)
D	Overall length (with bucket).....	91-3/4 in. (2 330 mm)
E	Dump angle.....	34°
F	Dump height.....	77-3/4 in. (1 975 mm)
G	Reach at maximum height.....	15-1/2 in. (394 mm)
H	Specified height.....	49-1/2 in. (1 257 mm)
I	Reach (specified height).....	22 in. (559 mm)
J	Reach (bucket on ground).....	39-1/2 in. (1 003 mm)
K	Maximum rollback (fully raised).....	86°
L	Wheelbase.....	29-3/16 in. (741 mm)
M	Digging depth (above ground).....	3/4 in. (19 mm)
N	Height to seat.....	34-1/2 in. (876 mm)
O	Overall height (with operator guard).....	74-1/2 in. (1 892 mm)
P	Overall length (less bucket).....	68-1/2 in. (1 740 mm)
Q	Ground clearance.....	6-1/8 in. (156 mm)
R	Maximum grading angle (bucket).....	89°
S	Angle of departure.....	21°
T	Bucket width.....	35 in. (890 mm)
U	Clearance circle, front (less bucket).....	31 in. (787 mm)
V	Clearance circle, front (with bucket).....	56-7/8 in. (1 445 mm)
X	Clearance circle, rear.....	43-1/4 in. (1 098.6 mm)
Y	Overall width (less bucket).....	35-1/4 in. (895.4 mm)
Z	Tread (5.70-12 tires).....	29-1/4 in. (743 mm)

BUCKET AND FORK SPECIFICATIONS

Item	Width	Length	Capacity		Weight
			SAE Struck	SAE Heaped	
Earth Bucket	35 in. (890 mm)		3.5 cu. ft. (0.10 m ³)	4.5 cu. ft. (0.13 m ³)	105 lbs. (47.63 kg)
Earth Bucket	44 in. (1 117.6 mm)		4.5 cu. ft. (0.13 m ³)	5.5 cu. ft. (0.15 m ³)	120 lbs. (54.43 kg)
Utility Bucket	47 in. (1 193.8 mm)		7 cu. ft. (0.20 m ³)	9 cu. ft. (0.25 m ³)	147 lbs. (66.68 kg)
Pallet Fork and Frame	38 in. (965.2 mm)	36 in. (914.4 mm)			220 lbs. (99.79 kg)
Utility Fork	39 in. (990.6 mm)	28 in. (711.7 mm)			155 lbs. (70.31 kg)
Utility Fork	35 in. (889 mm)	28 in. (711.7 mm)			141 lbs. (64.0 kg)

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS



JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Group 10 LUBRICATION AND PERIODIC SERVICE

SERIAL NO. (-120,000)

LUBRICANTS

Engine Oil

If oil other than Torq-Gard® Supreme is used, it must conform to the following specifications:

Single Viscosity Oils
API Service CD/SD
MIL-L-2104C*
Series 3*

Multi-Viscosity Oils
API Service CC/SE,
CC/SD or SD MIL-L-46152

Select oil viscosity depending on the highest expected prevailing temperature for the fill period.

Air Temperature	John Deere Torq-Gard Oil	Other Oils	
		Single Viscosity Oil	Multi-Viscosity Oil
Above 32°F (0°C)	SAE 30	SAE 30	Not recommended
-10°F to 32°F (-23°C to 0°C)	SAE 10W-20	SAE 10W	SAE 10W-30
Below -10°F (-23°C)	SAE 5W-20**	SAE 5W**	SAE 5W-20**

*As further assurance of quality, the oil should be identified as suitable for API Service Designation SD.

**Some increase in oil consumption may be expected when SAE 5W-20 or SAE 5W oils are used. Check oil level more frequently.

Hydraulic Fluid

Use John Deere All-Weather Hydrostatic Fluid or an equivalent Type "F" Automotive Automatic Transmission Fluid.

Greases

Use John Deere Multi-Purpose Lubricant or equivalent SAE multipurpose-type grease for all grease fittings.

JENSALES.COM

or Call 800-443-0625