


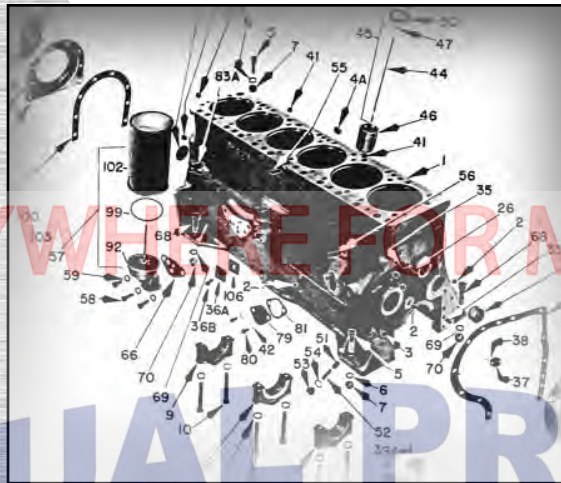

Versatile

Parts Manual

700

Parts Manual

JENSALES.COM

or Call 800-443-0625



THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
VERSATILE OR IT'S SUCCESSORS. **VERSATILE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CLICK ANYWHERE FOR MORE DETAILS



JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

MODEL 700 FOUR-WHEEL-DRIVE TRACTOR

MAJOR SECTION INDEX

FRAME A

ENGINE B

FUEL SYSTEM C

TRANSMISSION D

CLUTCH DRIVE AND CONTROL E

BRAKES AND DRIVE LINES F

WHEELS AND AXLES G

HYDRAULIC SYSTEM H

ELECTRICAL J

OPTIONS AND ACCESSORIES K

700 SERIES
4 WHEEL DRIVE
TRACTOR
PARTS MANUAL

The black tabs on the right side
of this page line up with
corresponding tabs inside
the manual.

Bend the manual slightly
to locate them.

JENSALES.COM
or Call 800-443-0625










Section **A****FRAME**

CLICK ANYWHERE FOR MORE DETAILS

MAJOR ASSEMBLY	PAGE
Front and Rear Frames	A-2
Drawbar Assembly	A-5
Hoods and Radiator Mounting	A-6
Cab Door and Side Window	A-8
Soundproofing Material and Mats	A-10
Cab Glass	A-12
Operator's Platform	A-13
Cab, And Battery Hold Down	A-14
Cab Pressurizer	A-16
Wiper Assembly	A-18
Instrument Panel	A-19
Seat Assembly (403-T-193-V51)	A-20
Seat Assembly	A-22
Steering Pump Mounting	A-25
Decals	A-26

JENSALES.COM**or Call 800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS

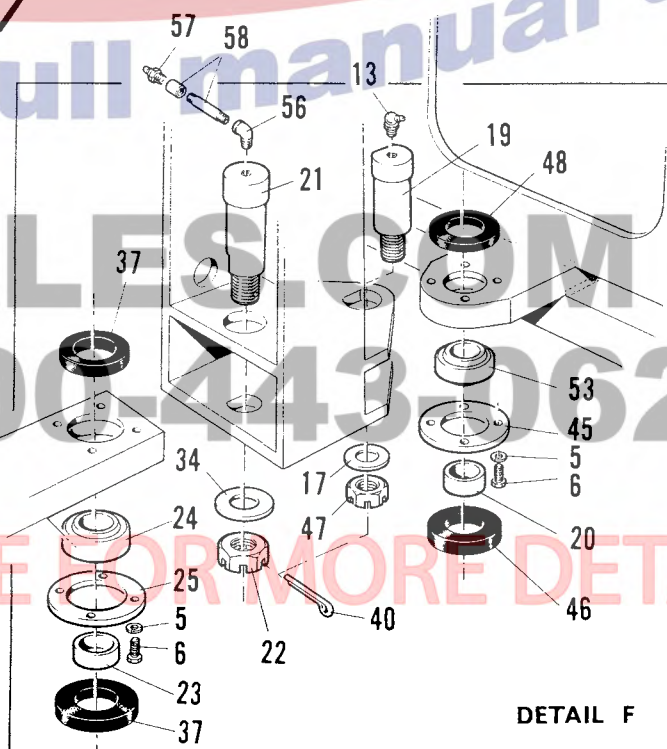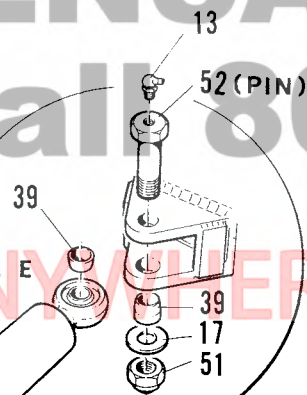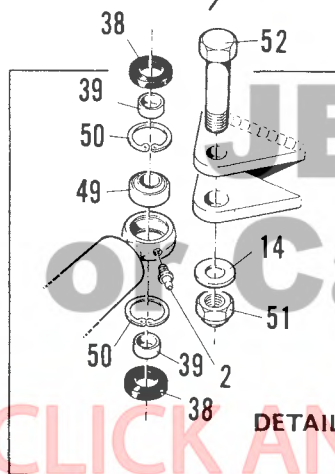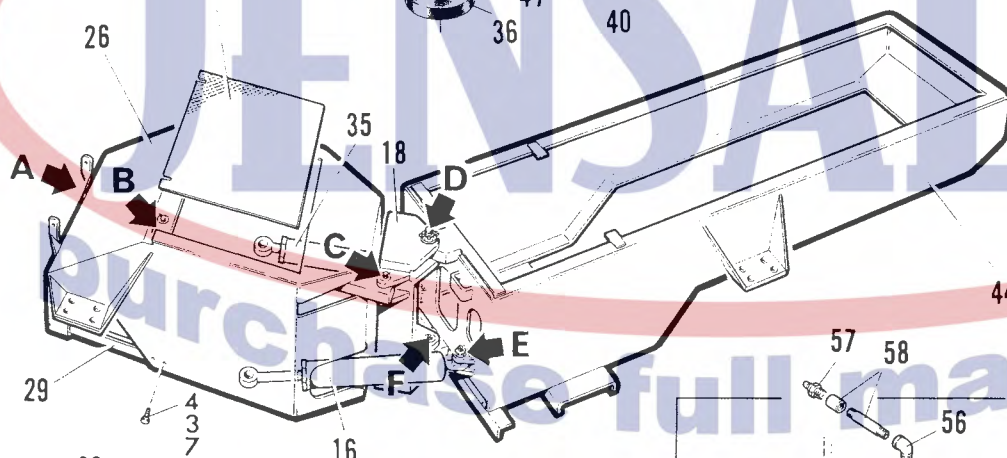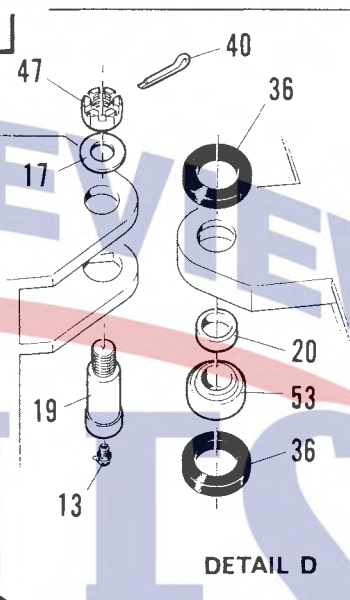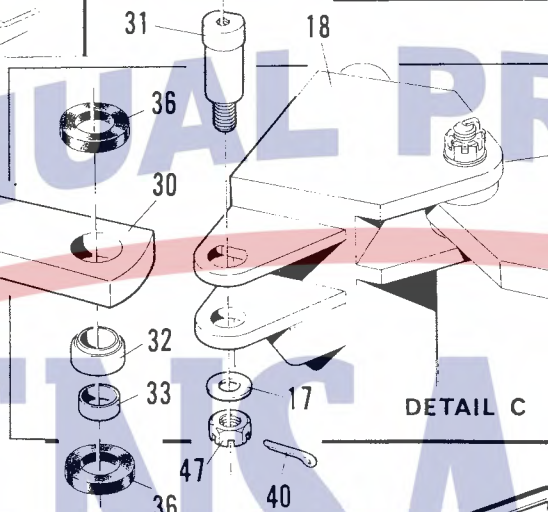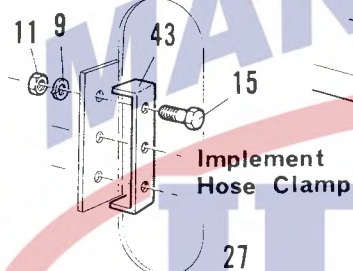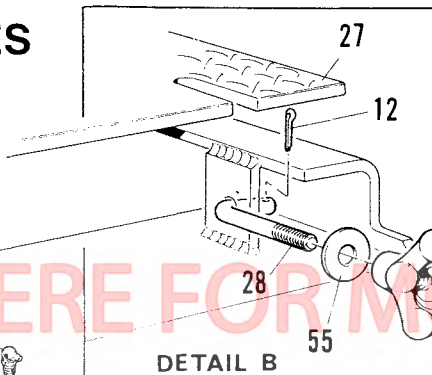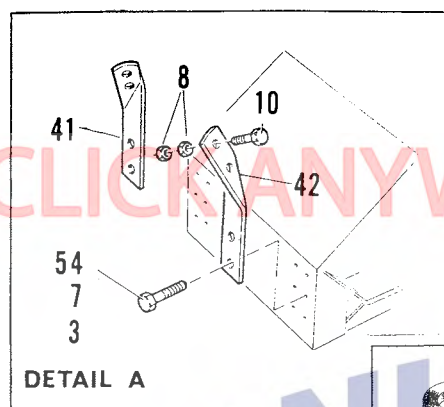

FRONT AND REAR FRAMES

ITEM	PART NUMBER	QTY.	SERIAL NO.	
1	SW-149	2	()	Handwheel
2	CR-8005	5	()	Greast Fitting, 1/8 NPT x Straight
3	12009	12	()	Lockwasher, 3/4 Std.
4	12010	8	()	Bolt-Hex. Hd., 3/4-10 NC x 2 1/4 Lg.
5	12011	8	()	Lockwasher, 3/8 Dia.
6	12057	8	()	Bolt-Hex. Hd., 3/8-16 NC x 1 1/2 Lg.
7	12066	12	()	Nut-Hex., 3/4 - 10 N.C.
8	12075P	4	()	Nut-Hex, 1/2 - 13 N.C.
9	12087	6	(070077 - 070900)	Lockwasher, 5/16 Std.
10	12088P	2	()	Bolt-Hex., 1/2-13 NC x 1 1/2 Lg.
11	12094	6	(070077 - 070900)	Nut-Hex., 5/16 - 18 N.C.
12	12102	2	()	Cotterpin, 1/8 Dia. x 1 Lg.
13	12132	6	()	Grease Fitting, 1/8 NPT x 90°
14	12262	4	(070077 - 070900)	Flatwasher, 1" Std.
For Serial No's. 7005010001 On, Use 4 of Item 17				
15	12538	6	(070077 - 070900)	Bolt-Hex, 5/16-18 NC x 2 1/4 Lg.
16	TRA-13393	1	(070077 - 070900)	Steering Cylinder, R.H.
	TRA-25569	1	(7005010001 -)	Steering Cylinder, R.H.
17	13569	10	()	Flatwasher, 1 3/8 I.C. x 2 3/4 O.D. x 8 Ga.
18	TRA-14333	1	()	Swing Frame, W.A.
19	TR-14344	2	()	Pivot Pin - Frames
20	TR-14346	2	()	Spacer - Pivot Pin, Frames
21	TR-14347	1	()	Pivot Pin - Oscillating Point
22	14348	1	()	Nut-Hex. Slotted, 1 1/2 - 12 N.F.
23	TR-14350	1	()	Spacer - Oscillating Pin
24	14351	1	()	Bearing - Oscillation Pin - Special
25	TR-14352	1	()	Plate - Retaining
26	TRA-18110	1	()	Rear Frame
27	TRA-18866	1	()	Cover Plate - Rear Frame
28	TR-14456	2	()	Hook - Cover Plate
29	TR-14458	2	()	Angle - Rear Frame Cutout
30	TRA-14511	2	()	Draglink - Rear Frame Ass'y
31	TR-14512	4	()	Pivot Pin - Drag Links
32	14513	4	()	Bushing - Ball
33	TR-14522	4	()	Spacer - Draglink Pin
34	14854	1	()	Flatwasher, 1 13/64 ID x 3" OD x 1 1/4 Th.
35	TRA-15192	1	(070077 - 070900)	Steering Cylinder, L.H.
	TRA-25570	1	(7005010001 -)	Steering Cylinder, L.H.
36	TR-15193	10	()	Seal-Draglink & Frame Pivot
37	TR-15194	2	()	Seal-Oscillation Pin
38	TR-15425	8	(070077 - 070900)	Seal-Steering Cylinder
39	TR-15426	8	(070077 - 070900)	Spacer-Steering Cylinder Bolt
	TR-23595	4	(7005010001 -)	Upper Spacer
	TR-23632	4	(7005010001 -)	Lower Spacer
40	15486	7	()	Cotterpin, 3/16 Dia. x 2 1/2 Lg.
41	TR-15628	1	()	Bracket - Quick Coupler, L.H.
42	TR-15719	1	()	Bracket - Quick Coupler, R.H.
43	TR-15745	2	(070077 - 070900)	Clamp-Implement Hoses
44	TRA-14999	1	(070077 - 070523)	Front Frame
	TRA-21372	1	(070524 - 070900)	Front Frame
	TRA-23790	1	(7005010001 -)	Front Frame

(Continued)

FRONT AND REAR FRAMES, CONT'D

ITEM	PART NUMBER	QTY.	SERIAL NO.	DESCRIPTION
45	100-T-111	1	()	Plate - Retaining
46	100-T-172	1	()	Seal - Bearing
47	100-T-217	6	()	Nut-Slotted Hex., 1 1/4 - 12 N.F.
48	201-T-113	1	()	Seal - Bearing
49	710-T-132	4	(070077 - 070900)	Bearing-Steering Cylinder
	18125	4	(7005010001 -)	Bearing-Steering Cylinder
50	710-T-135	8	(070077 - 070900)	Retaining Ring-Steering Cylinder
	21356	8	(7005010001 -)	Retaining Ring-Steering Cylinder
51	710-T-136	4	(070077 - 070900)	Nut - 1" Steering Cylinder Bolt
	23941	4	(7005010001 -)	Nut - 1 1/4 Steering Cylinder Pin
52	710-T-137	4	(070077 - 070900)	Bolt - Steering Cylinder
	TRA-23692	4	(7005010001 -)	Pin - Steering Cylinder
53	901-T-103	2	()	Bearing - Frame Pivot
54	12070	4	()	Bolt-Hex., 3/4 NC x 2 1/2
55	13200	2	()	Flatwasher, 3/8 Std.
56	CO-8070	1	()	Elbow-Street, 1/8 x 90°
57	13029	1	()	Nipple, 1/8 x 4 1/2 Lg.
58	12134	1	()	Coupling, 1/8 NPT

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS